


Spare Parts Catalogue ED 550

- 1 - Hood
- 2 - Tank
- 3 - Rinse Assembly
- 4 - Wash Arm
- 5 - Wash Arm
- 6 - Wash Arm 10/03 ->>
- 7 - Control Box
- 8 - Rinse Aid Injector
- 9 - Thermostats - Rack Support Guide -tank Filter


1 - Hood

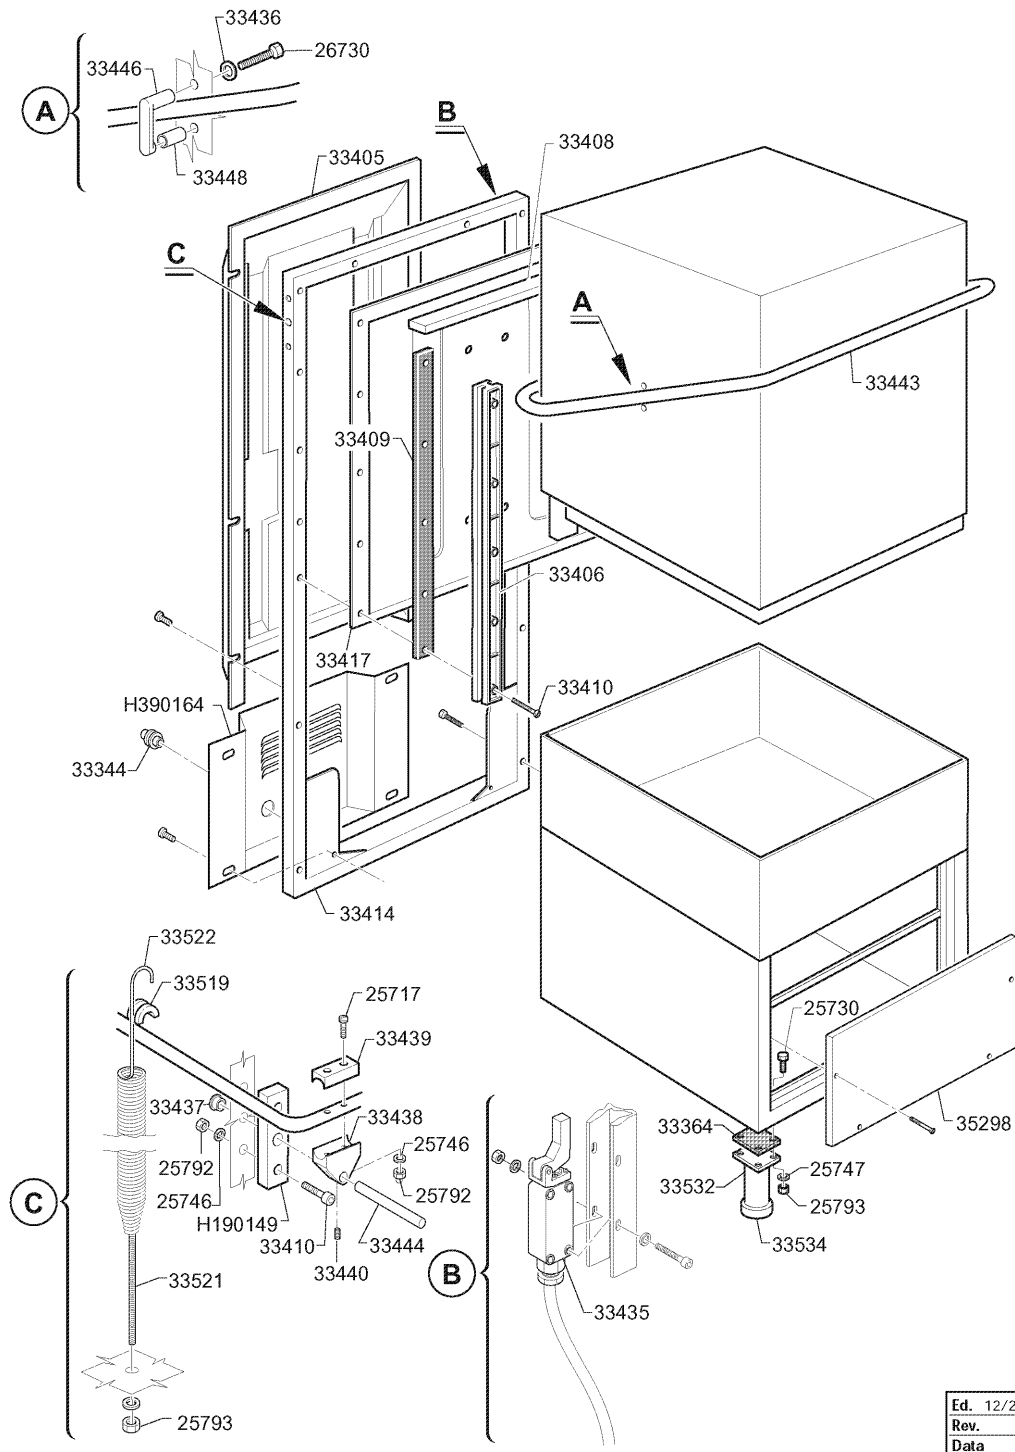

1 - Hood

POSITION	CODE	DESCRIPTION
0000	25717	SCREW PARTIAL FIL. 6X45 SS
0000	25730	SCREW HEX.HD M 8 X 25
0000	25746	SPACER, FLAT, DIAM.6/18
0000	25747	SPACER, FLAT, DIAM. 8
0000	25792	SELF-LOCKING NUT 6 MA LOWER SIDE
0000	25793	SELF-LOCKING NUT 8 MA LOWER SIDE
0000	26730	SCREW TE M 8 X 20
0000	33344	CABLE CLIP 5030 STEAB
0000	33364	STIFFENING PLATE FOR PLASTIC FOOT
0000	33405	REAR GUARD, C85-C155-75
0000	33406	HOOD GUIDE "C95/C155/165"
0000	33408	NEOPREN ADHESIVE GASKET 8 X 4
0000	33409	GASKET GUIDE "C"
0000	33410	CHEESE-HD SCREW 6X35 SSA2 UNI 6107
0000	33414	REAR FRAME C95-C155
0000	33417	REAR EXT. PANEL LC 380
0000	33435	MICROSW.WITH LEVER FD503 LONG C75
0000	33436	SPACER WASHER ALGOFLOX 18X8,5X1
0000	33437	BUSHING "NYLINER"
0000	33438	BUSHING HANDLE C75-C140-C155
0000	33439	FLANGE X BUSHING HANDLE C70-C155
0000	33440	SOCKET HD.DOWELS A2 6X8 UNI 5929
0000	33443	HANDLE C95-C155 ED650
0000	33444	PIN FOR HANDLE"C85/C165"
0000	33446	WIRE ROLLING HANDLE
0000	33448	ROLLER ROLLING HANDLE 22X31,5
0000	33519	BUSH, SPRING HOLDER "C"-"G"
0000	33521	THREADED SS BAR M8 L=200 MM.
0000	33522	SPRING FOR HANDLE "C"-"G"
0000	33532	PLASTIC FOOT HOLDER
0000	33534	FOOT, COMENDA, 30 MM
0000	35298	FRONT PANEL ED 650 S/REG.BR
0000	H190149	HANDLE BLOCK
0000	H390164	REAR PANEL ED 650

2 - Tank

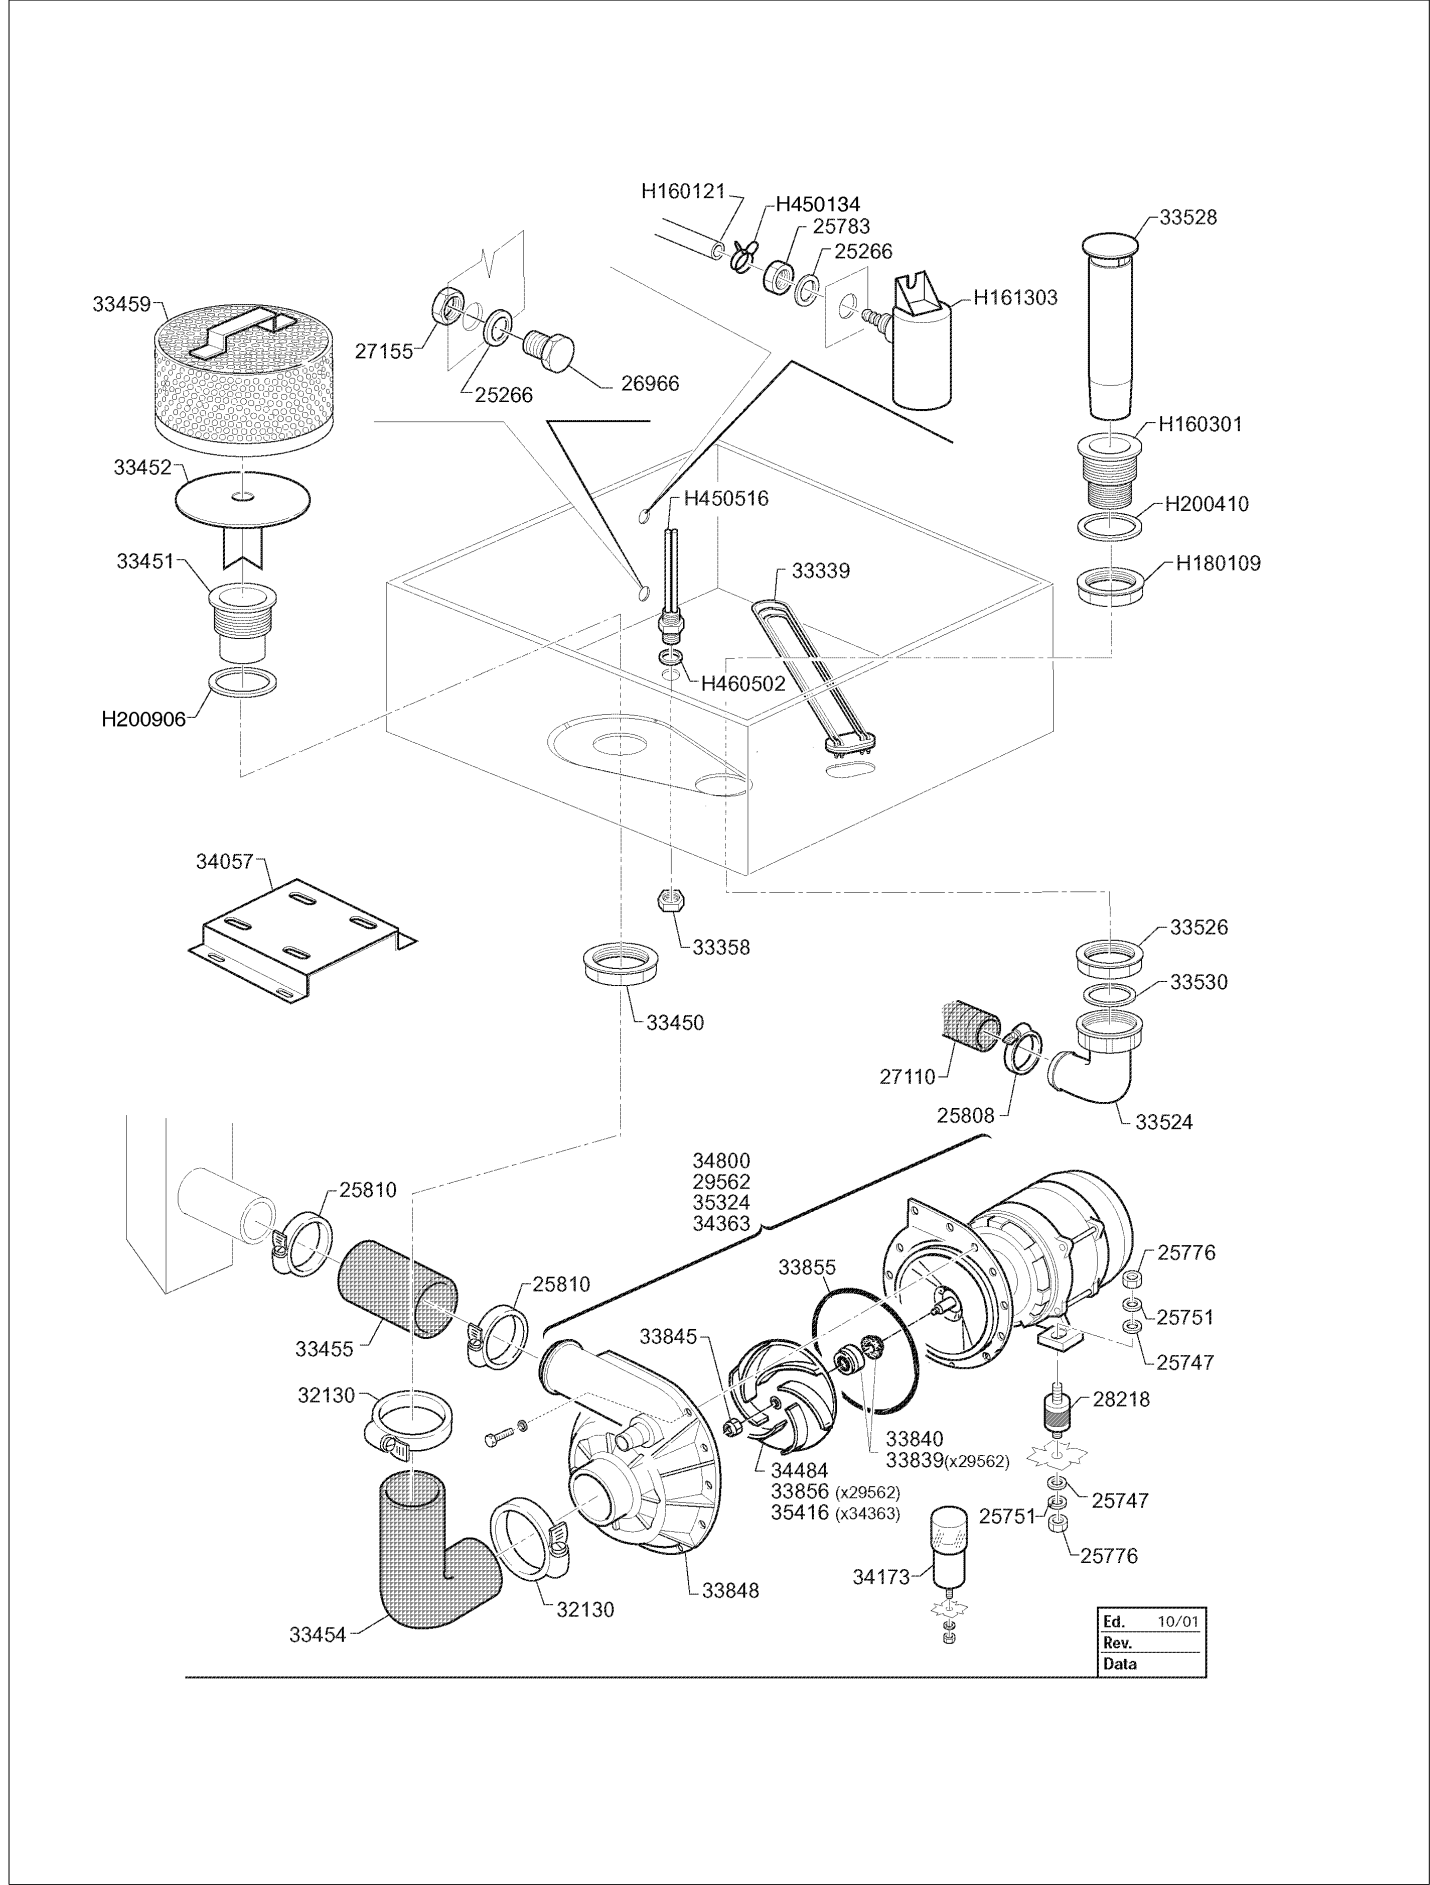

2 - Tank

POSITION	CODE	DESCRIPTION
0000	25266	FLAT GASKET 18 X 10 X 2
0000	25747	SPACER, FLAT, DIAM. 8
0000	25751	SPACER. SPLITTED, DIAM. 8
0000	25776	NUTS 8 MA SS 18/8
0000	25783	NUT 10 MA
0000	25808	HOSE CLIP 27-51CLAM
0000	25810	HOSE CLIP 55-70
0000	26966	HOLE CLOSING PLUG
0000	27110	DRAIN HOSE DIAM.33X1500
0000	27155	PLASTIC NUT10 M
0000	28218	ISOLATOR 2 PINS 6 MA
0000	29562	CENTRIF.WASH P. HP 1,2 400V
0000	32130	HOSE CLIP 60-80
0000	33339	HEAT.ELEM.3000W 230/400V(110227)
0000	33358	LOCK NUT 1/2" ES.30 SP.7"SS"
0000	33450	THREADED NUT 65,4 C140 C85-C155
0000	33451	SUCTION ELBOW C85-140
0000	33452	PROTECT.DISC PUMP SUCT. C85-C155
0000	33454	SUCTION HOSE C140/C110
0000	33455	SLEEVE PRESSURE SIDE
0000	33459	FILTER D.185 SNL C140
0000	33524	ELBOW 1"1/2, DRAIN N-S-F-C
0000	33526	NUT 1"1/2, ELBOW F45-C75
0000	33528	OVERFLOW TUBE H189 C85-140
0000	33530	DRAIN GASKET 1"1/2 45X33X3
0000	33839	MECH. SEAL PR/AR 13 BEFF
0000	33840	S MECH. SEAL PR/AR 12 BPFF
0000	33845	NUT M8, RIGHT H=5 MM
0000	33848	PUMP HOUS.ZF650 RIGHT A60/M50 HOSE
0000	33855	GASKET OR. 158.34*3.53
0000	33856	IMPELLER DIAM.105 6 ARMS M8 RIGHT
0000	34057	UPPER PLATE, PUMP ED 650 E
0000	34173	CAPACITOR UF 16
0000	34363	ELECT.WASH PUMP 1,2HP 440V3 60HZ
0000	34484	IMPELLER 120 6-BLADE, RIGHT ZF 800
0000	34800	WASH PUMP LGB HP1 230V1/550
0000	35324	ELECTR.PUMP LGB HP1 230V1 60HZ
0000	35416	TURNED IMPELLER 90MM/0120 LGB
0000	H160121	HOSE, BLACK RUBBER D. 5 X 9
0000	H160301	DRAIN PIPE UNION 1"1/2 (33525)
0000	H161303	AIRTRAP
0000	H180109	LOCK NUT 1 1/2" (33527)
0000	H200410	DRAIN OUTL.WASH.1 1/2"65X47X3
0000	H200906	GASKET D.92X66X2
0000	H450134	ELASTIC HOSE CLIP 2-WIRE D.9,3/8,8
0000	H450516	THERMOSTAT SHIELD FOR 2 TERMOSTATS
0000	H460502	GASKET 30X21X2 C34-R ASBESTOS(1/2")

This diagram illustrates the exploded view of a water heater assembly. The main components and their part numbers are as follows:


- Water Heater Tank (33403):** The central cylindrical component.
- Pressure Relief Valve (33402):** Located at the bottom of the tank.
- Gas Control Valve (33400):** Attached to the bottom of the tank.
- Gas Inlet Pipe (33401):** Connects to the gas control valve.
- Water Inlet Pipe (33402):** Connects to the top of the tank.
- Water Outlet Pipe (33403):** Connects to the top of the tank.
- Gas Vent Pipe (33404):** Connects to the top of the tank.
- Water Vent Pipe (33405):** Connects to the top of the tank.
- Gas Vent Cap (33406):** Closes the gas vent pipe.
- Water Vent Cap (33407):** Closes the water vent pipe.
- Gas Vent Flange (33408):** Connects the gas vent pipe to the tank.
- Water Vent Flange (33409):** Connects the water vent pipe to the tank.
- Gas Vent Seal (33410):** Seals the gas vent flange.
- Water Vent Seal (33411):** Seals the water vent flange.
- Gas Vent Gasket (33412):** Seals the gas vent flange.
- Water Vent Gasket (33413):** Seals the water vent flange.
- Gas Vent Nut (33414):** Secures the gas vent flange.
- Water Vent Nut (33415):** Secures the water vent flange.
- Gas Vent Washer (33416):** Seals the gas vent flange.
- Water Vent Washer (33417):** Seals the water vent flange.
- Gas Vent Bolt (33418):** Secures the gas vent flange.
- Water Vent Bolt (33419):** Secures the water vent flange.
- Gas Vent Lock Washer (33420):** Secures the gas vent flange.
- Water Vent Lock Washer (33421):** Secures the water vent flange.
- Gas Vent Nut Washer (33422):** Secures the gas vent flange.
- Water Vent Nut Washer (33423):** Secures the water vent flange.
- Gas Vent Seal Ring (33424):** Seals the gas vent flange.
- Water Vent Seal Ring (33425):** Seals the water vent flange.
- Gas Vent Gasket Ring (33426):** Seals the gas vent flange.
- Water Vent Gasket Ring (33427):** Seals the water vent flange.
- Gas Vent Flange Gasket (33428):** Seals the gas vent flange.
- Water Vent Flange Gasket (33429):** Seals the water vent flange.
- Gas Vent Flange Seal (33430):** Seals the gas vent flange.
- Water Vent Flange Seal (33431):** Seals the water vent flange.
- Gas Vent Flange Seal Ring (33432):** Seals the gas vent flange.
- Water Vent Flange Seal Ring (33433):** Seals the water vent flange.
- Gas Vent Flange Seal Washer (33434):** Seals the gas vent flange.
- Water Vent Flange Seal Washer (33435):** Seals the water vent flange.
- Gas Vent Flange Seal Nut (33436):** Secures the gas vent flange.
- Water Vent Flange Seal Nut (33437):** Secures the water vent flange.
- Gas Vent Flange Seal Lock Washer (33438):** Secures the gas vent flange.
- Water Vent Flange Seal Lock Washer (33439):** Secures the water vent flange.
- Gas Vent Flange Seal Nut Washer (33440):** Secures the gas vent flange.
- Water Vent Flange Seal Nut Washer (33441):** Secures the water vent flange.
- Gas Vent Flange Seal Ring Washer (33442):** Secures the gas vent flange.
- Water Vent Flange Seal Ring Washer (33443):** Secures the water vent flange.
- Gas Vent Flange Seal Ring Nut (33444):** Secures the gas vent flange.
- Water Vent Flange Seal Ring Nut (33445):** Secures the water vent flange.
- Gas Vent Flange Seal Ring Lock Washer (33446):** Secures the gas vent flange.
- Water Vent Flange Seal Ring Lock Washer (33447):** Secures the water vent flange.
- Gas Vent Flange Seal Ring Nut Washer (33448):** Secures the gas vent flange.
- Water Vent Flange Seal Ring Nut Washer (33449):** Secures the water vent flange.

The diagram also includes detailed views of the gas vent assembly (A) and the water vent assembly (B), showing the connection of the vent pipes to the tank and the installation of the vent caps and seals.

3 - Rinse Assembly

POSITION	CODE	DESCRIPTION
0000	00182	HOSE 11X19 CASER/15"BLUE"
0000	25700	SCREW CHEESE-H. 4 X 8 KNURLED
0000	25745	SPACER, FLAT, DIAM.6
0000	25750	SPACER, SPLITTED, DIAM. 6
0000	25773	NUTS 4 MA SS 18/8
0000	25775	NUT 6 MA
0000	25781	NUTS 6 MA, THREADED/ZINCATED
0000	25803	HOSE CLIP 13-20 ABA
0000	26981	FILTER X SOLENOID V.T/N
0000	28699	CHEESE-HD SCREW TC 4 X 10
0000	30473	GASKET, OR 114
0000	30933	SOLENOID VALVE SING. 3/4"
0000	33276	T-SHAPED CONNECTOR ?11,5-PART180413
0000	33372	GASKET 24X17X2 FASIT OMNIA
0000	33400	HEAT.EL.FL.6000W 220/380V (110349)
0000	33401	COVER, HEATING ELEMENT H 50 (HIGH)
0000	33402	GASKET OR 6X56X68
0000	33403	BOILER"F45/F80/C85/140"
0000	33430	STANDARD SQ.BRACKET
0000	33453	GASKET 60X54 REAR C140
0000	33460	SHAFT ARM C95-155-165
0000	33461	JUMPER, WASH RAMP ARMC140-C85
0000	33462	REARWASH SUPPLY TUBE C140
0000	33470	SUPP. LOWER W.ARM."C"WASH-L C110-14
0000	33471	SUPP.UPPER W.ARM."C"WASH-L.C110 NIC
0000	33473	FEEDING HOSE RINSE UPPER
0000	33474	ELBOW RINSE
0000	33476	FITTING FOR RINSE DELIV.M
0000	33477	ELBOW FEM/FEM. 3/8 1/4 C140-155
0000	33502	T SPLASHPROOF FOR ANTIVAC.VLV
0000	33505	GASKET 30X21X2 KLINGER SIL
0000	33506	ANTI-VACUUM VALVE "B-F-C"
0000	33540	FITTING, RINSE DELIV. F
0000	33729	HOSE, LOWER RINSE DELIVERY
0000	33803	SPACE WASHER, GROWER DIAM.4
0000	33817	T-CONNECTOR FOR DISPENS. HOONV.
0000	34133	CONTROL QTY 14 LT.
0000	37330	TUBO CARICO 10BAR-70°-3/4"G

4 - Wash Arm

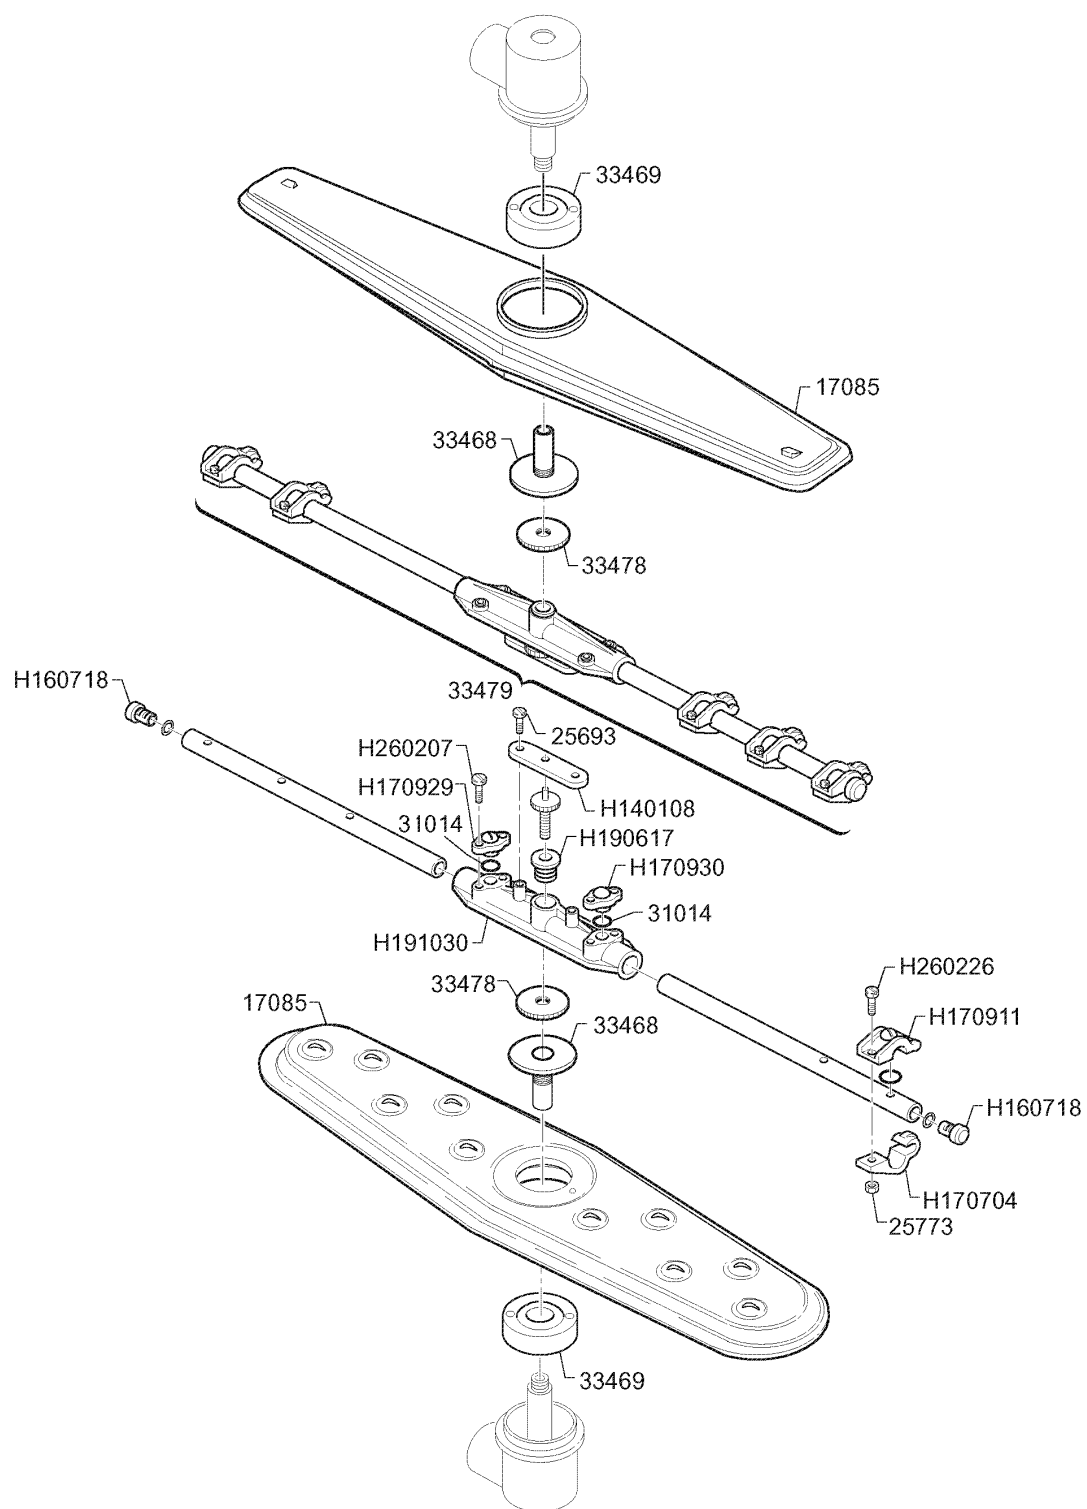


Ed.	10/01
Rev.	
Data	

4 - Wash Arm

POSITION	CODE	DESCRIPTION
0000	17085	REVOLV. WASHARM UPPER
0000	25693	SELF-TAPPING SCREW BEVEL H. 4,2X13
0000	25773	NUTS 4 MA SS 18/8
0000	31014	GASKET OR 106
0000	33468	SPRING BUSH, WASHARM
0000	33469	NUT FOR WASHARM SPRING BUSH
0000	33478	LOCK NUT, WASHARM C140-155
0000	33479	RINSE ARM 650 E
0000	H140108	PLATE F.CLAMP SCREW/WASH-RINSE ARM
0000	H160718	PLUG F. RINSE ARM F2-C34MOPL
0000	H170704	RINSE NOZZLE BOTTOM F-B-C33
0000	H170911	RINSE NOZZLE B23-F2-C34
0000	H170929	MULT.RINSE NOZZLE F2-C-GREY
0000	H170930	RINSE NOZ. RAMP HD, 3-HOLE F2-C-GRA
0000	H190617	BUSH, REV.WASHARMS, ALGOF.
0000	H191030	CENTRAL CROSS RINSE C34
0000	H260207	S.S.CHEESE H.SCREW4X25 A2 UNI 6107
0000	H260226	S.S.CHEESE H. SCREW 4X12 A2 UNI6107

5 - Wash Arm

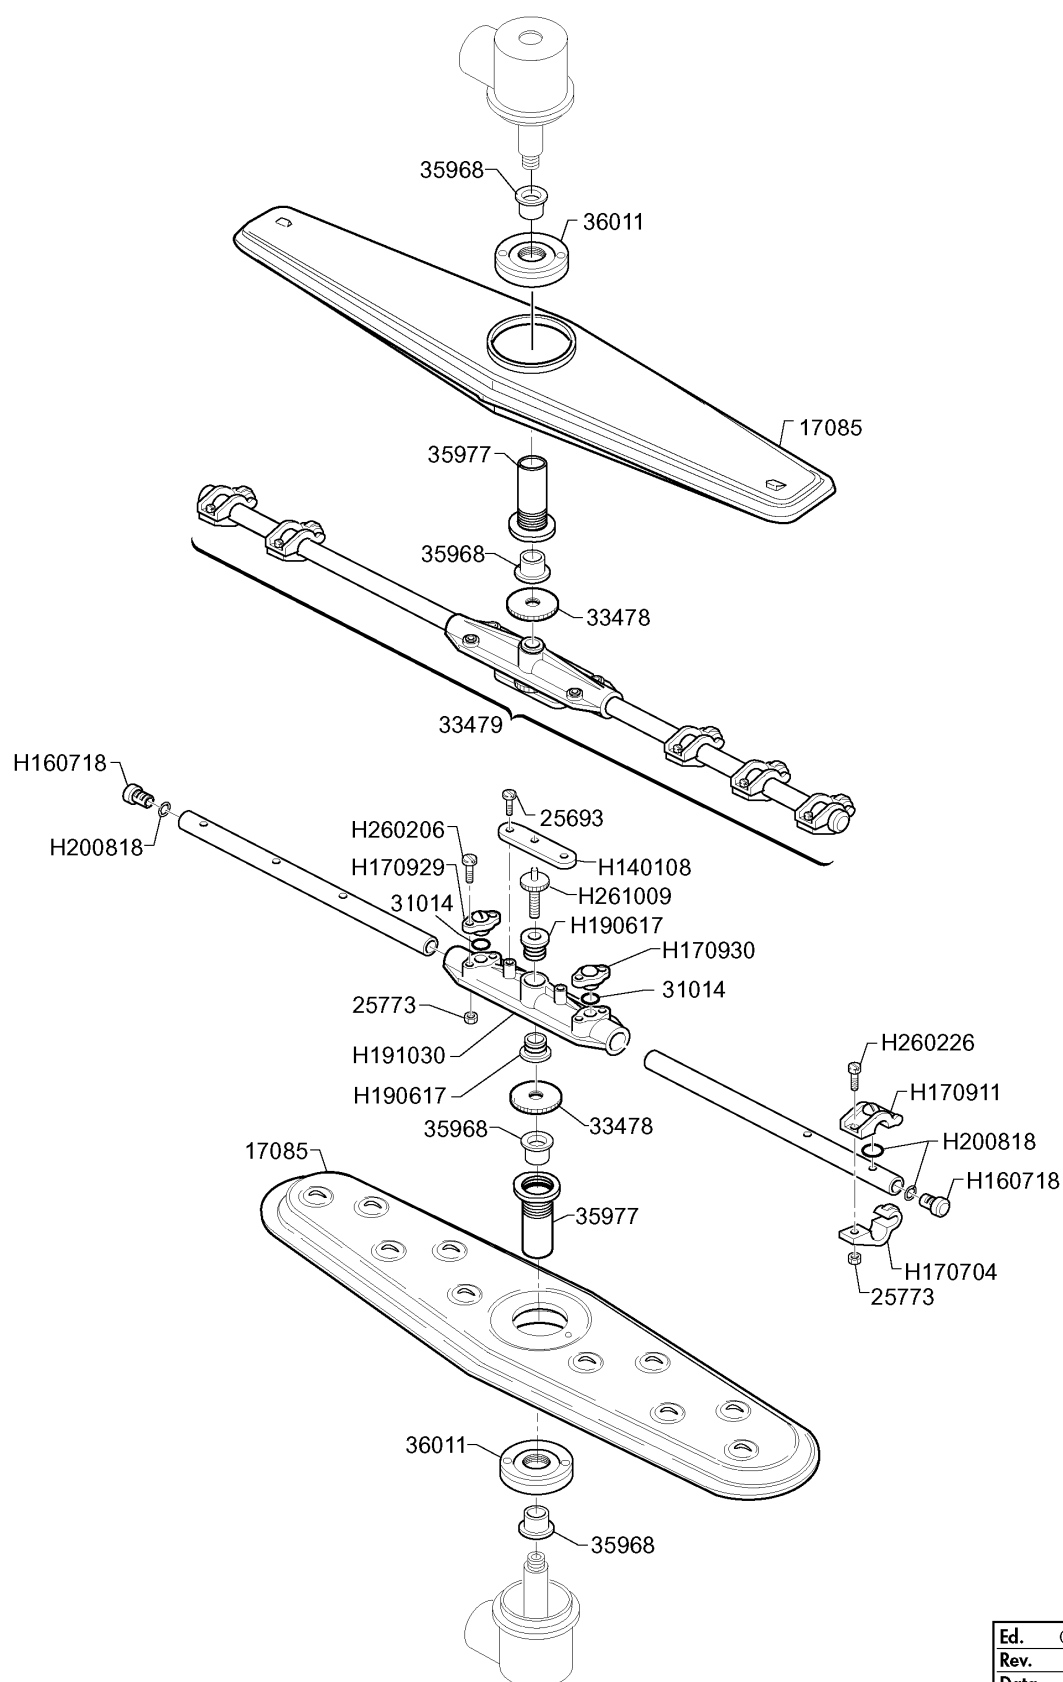


Ed.	04/03
Rev.	
Data	

5 - Wash Arm

POSITION	CODE	DESCRIPTION
0000	17085	REVOLV. WASHARM UPPER
0000	25693	SELF-TAPPING SCREW BEVEL H. 4,2X13
0000	25773	NUTS 4 MA SS 18/8
0000	31014	GASKET OR 106
0000	33478	LOCK NUT, WASHARM C140-155
0000	33479	RINSE ARM 650 E
0000	35968	BUSHING, TYPE H370 2023-21
0000	35977	S.S. BUSHING FOR BUSHING 35968
0000	36011	THRDD.BUSH FOR REV.WASHARM BUSH
0000	H140108	PLATE F.CLAMP SCREW/WASH-RINSE ARM
0000	H160718	PLUG F. RINSE ARM F2-C34MOPL
0000	H170704	RINSE NOZZLE BOTTOM F-B-C33
0000	H170911	RINSE NOZZLE B23-F2-C34
0000	H170929	MULT.RINSE NOZZLE F2-C-GREY
0000	H170930	RINSE NOZ. RAMP HD, 3-HOLE F2-C-GRA
0000	H190617	BUSH, REV.WASHARMS, ALGOF.
0000	H191030	CENTRAL CROSS RINSE C34
0000	H200818	OR GASKET 1,78X6,75X10,31
0000	H260206	S.S.CHEESE H.SCREW4X22 A2 UNI 6107
0000	H260226	S.S.CHEESE H. SCREW 4X12 A2 UNI6107
0000	H261009	RETAIN.SCREW FOR WASH-RINSE ARM

6 - Wash Arm 10/03 ->>

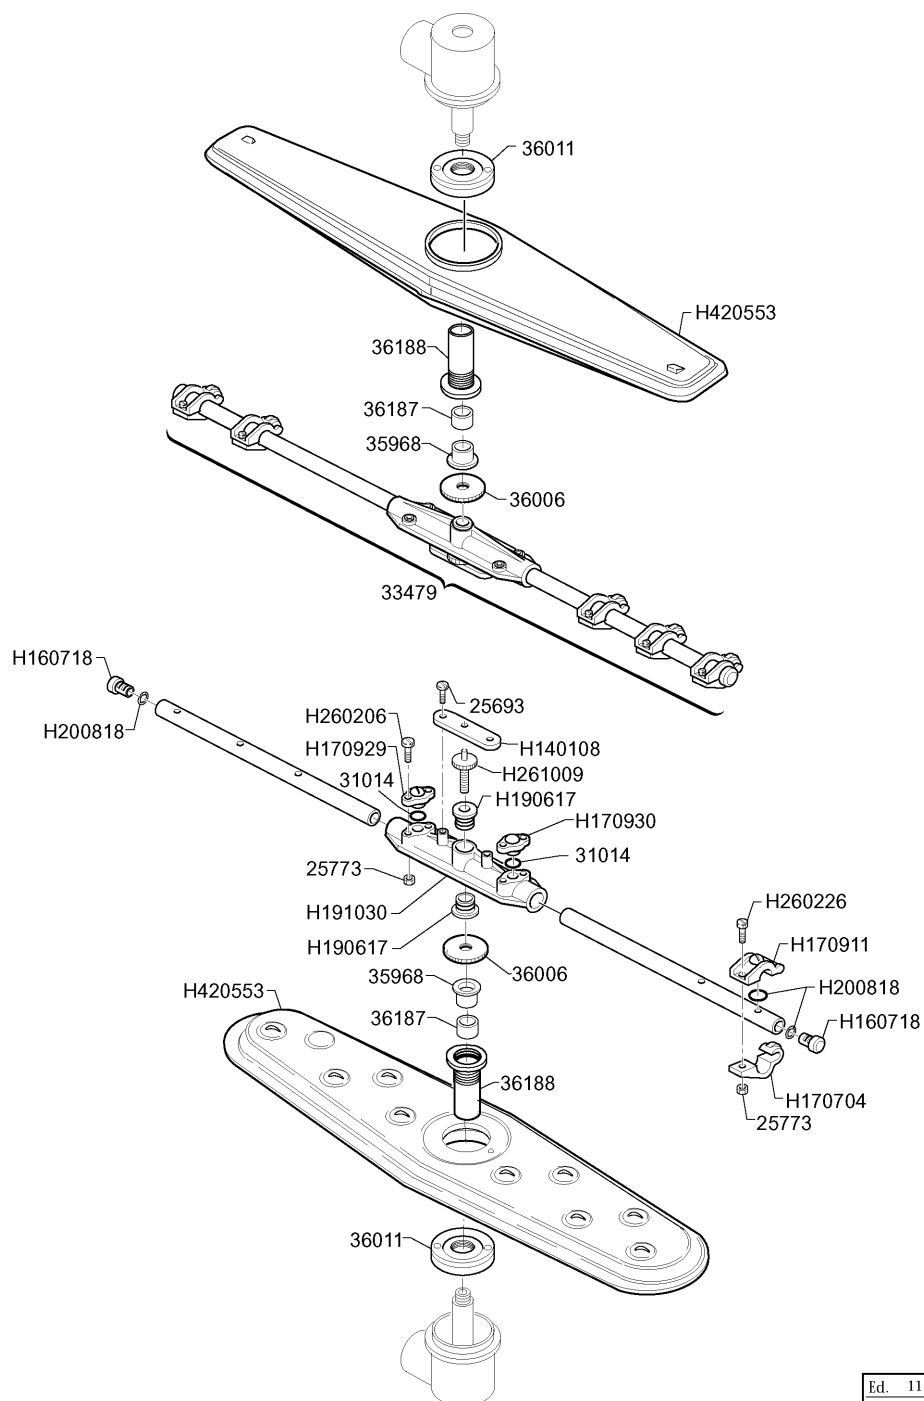


Ed.	11/2006
Rev.	
Data	

6 - Wash Arm 10/03 ->>

POSITION	CODE	DESCRIPTION
0000	25693	SELF-TAPPING SCREW BEVEL H. 4,2X13
0000	25773	NUTS 4 MA SS 18/8
0000	31014	GASKET OR 106
0000	33479	RINSE ARM 650 E
0000	35968	BUSHING, TYPE H370 2023-21
0000	36006	S.S.304 BUSHING, REVOLV.WASHARM
0000	36011	THRDD.BUSH FOR REV.WASHARM BUSH
0000	36187	BUSH TYPE H370 SM 2023-20
0000	36188	STAIN.STEEL BUSH F. HOOD WASHARM
0000	H140108	PLATE F.CLAMP SCREW/WASH-RINSE ARM
0000	H160718	PLUG F. RINSE ARM F2-C34MOPL
0000	H170704	RINSE NOZZLE BOTTOM F-B-C33
0000	H170911	RINSE NOZZLE B23-F2-C34
0000	H170929	MULT.RINSE NOZZLE F2-C-GREY
0000	H170930	RINSE NOZ. RAMP HD, 3-HOLE F2-C-GRA
0000	H190617	BUSH, REV.WASHARMS, ALGOF.
0000	H191030	CENTRAL CROSS RINSE C34
0000	H200818	OR GASKET 1,78X6,75X10,31
0000	H260206	S.S.CHEESE H.SCREW4X22 A2 UNI 6107
0000	H260226	S.S.CHEESE H. SCREW 4X12 A2 UNI6107
0000	H261009	RETAIN.SCREW FOR WASH-RINSE ARM
0000	H420553	REVOLV. WASHARM ED650-550-C81

7 - Control Box

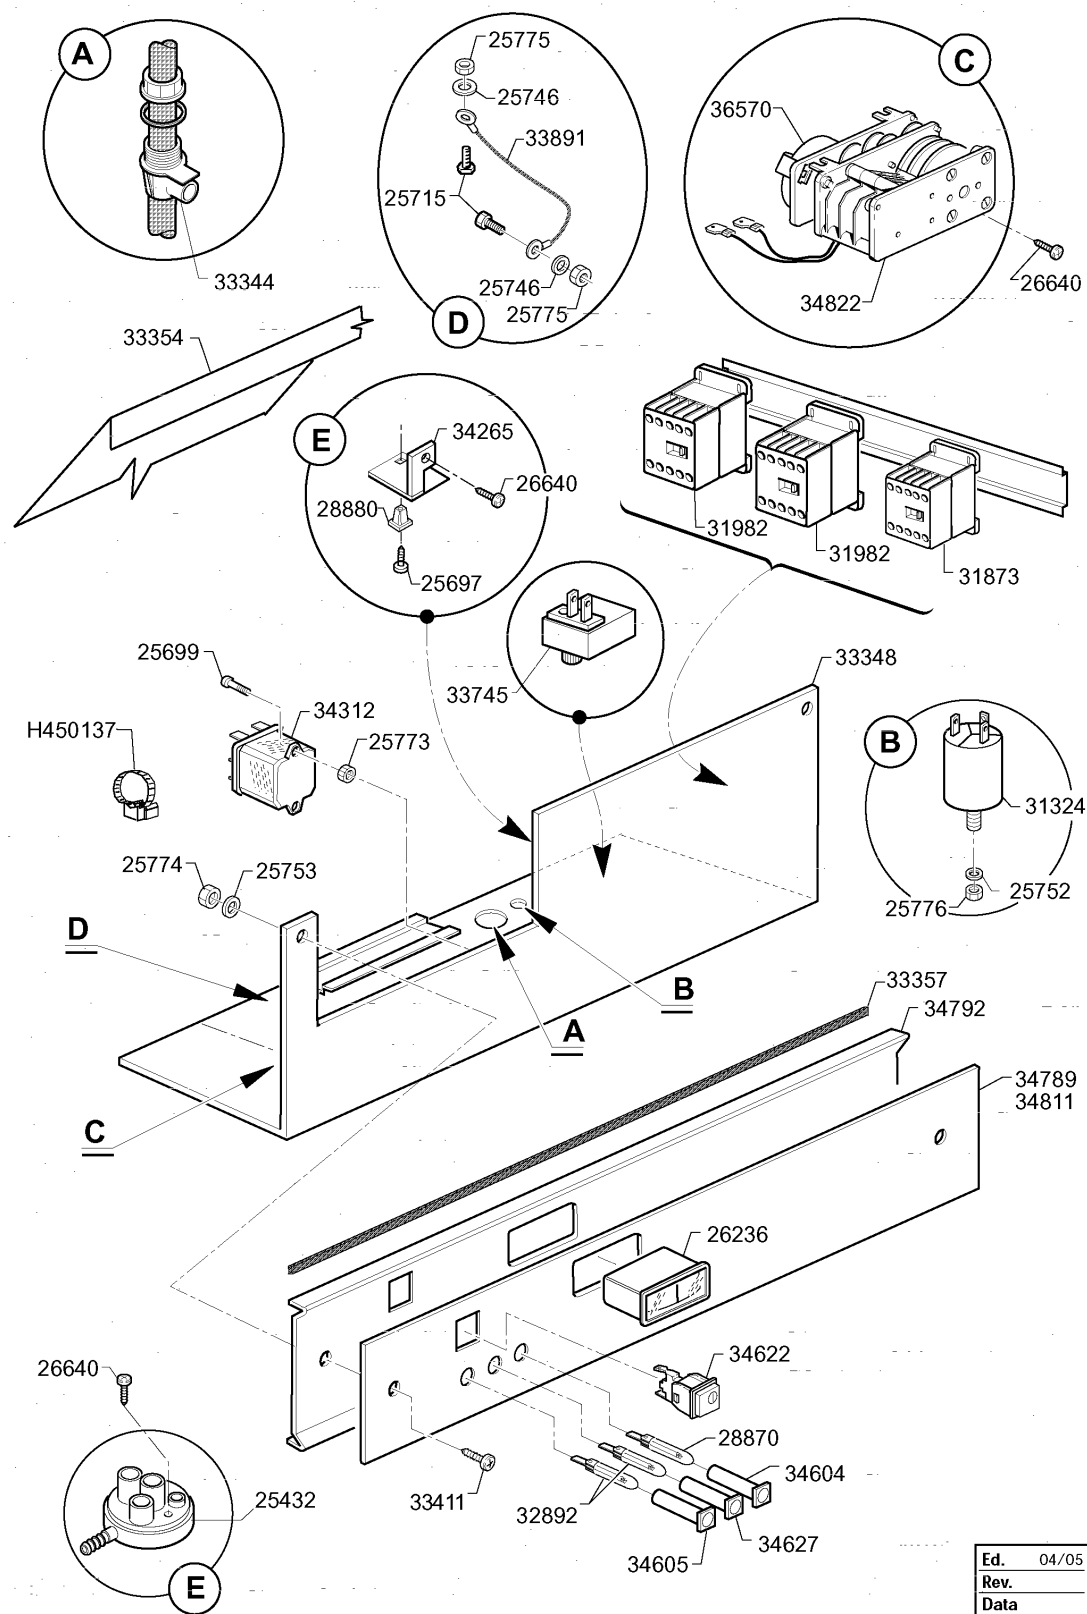


Ed.	04/05
Rev.	
Data	

7 - Control Box

POSITION	CODE	DESCRIPTION
0000	25432	PRESSURE SWITCH RATED 60-40
0000	25697	SELF-TAPPING SCREW CHEESE D747H.ROS
0000	25699	SCREW CHEESE-H. 4 X 6
0000	25715	SCREW HEX.HD M 6 X 16 SS
0000	25746	SPACER, FLAT, DIAM.6/18
0000	25752	TOOTHED SPACER DIAM.4 D.E.
0000	25753	TOOTHED SPACER.DIAM.5 D.E.
0000	25773	NUTS 4 MA SS 18/8
0000	25774	NUTS 5 MA
0000	25775	NUT 6 MA
0000	25776	NUTS 8 MA SS 18/8
0000	26236	THERMOMETRE MT 2
0000	26640	SCREW, PRESSURE SWITCH *
0000	28870	PILOT LIGHT BULB -LUX FM6,3 230V.
0000	28880	NUT SCREW
0000	31324	NOISE FILTER, TYPE 5001
0000	31873	REMOTE SWITCH 220-240V- B6-30-10
0000	31982	CONTACTOR CN9 - 220V 50 HZ
0000	32892	NEON LIGHT BULB "GREEN" FL-T FM6,3
0000	33344	CABLE CLIP 5030 STEAB
0000	33348	SUPPORT, ELECTR.PLANT
0000	33354	ELECTRIC PLANT PROTECT.C140-70
0000	33357	ADHESIVE GASKET 25X2,5
0000	33411	SCREW SS "TB" -5X30 - COMENDA
0000	33745	LIMITER 110° MANUAL RESET
0000	33891	ROPE, ELECTR.PLANT LIMIT STOP
0000	34265	TANK PRESS.SWITCH BRACKET
0000	34312	T.RELAY A2S FA 16A 230V
0000	34604	COVER "ORANGE" PILOT LIGHT S.57.3
0000	34605	COVER "GREEN" PILOT LIGHT S.57.3
0000	34622	SWITCH ROLD CM 2-POLE. LINE
0000	34627	PILOT LIGHT COVER "GREEN" TANK TEMP
0000	34789	CTRL PANEL NAMEPL. ED 550
0000	34792	NAMEPLATE HOLDER ED 550
0000	34811	CTRL PANEL NAMEPL. CA 55
0000	34822	TIMER CDC 4804 F1 120" 230V 4C
0000	36570	STARTER FOR TIMER,M48 RAT-S230V X 3
0000	H450137	COLLAR COUPLING WITH BASE 31900

8 - Rinse Aid Injector


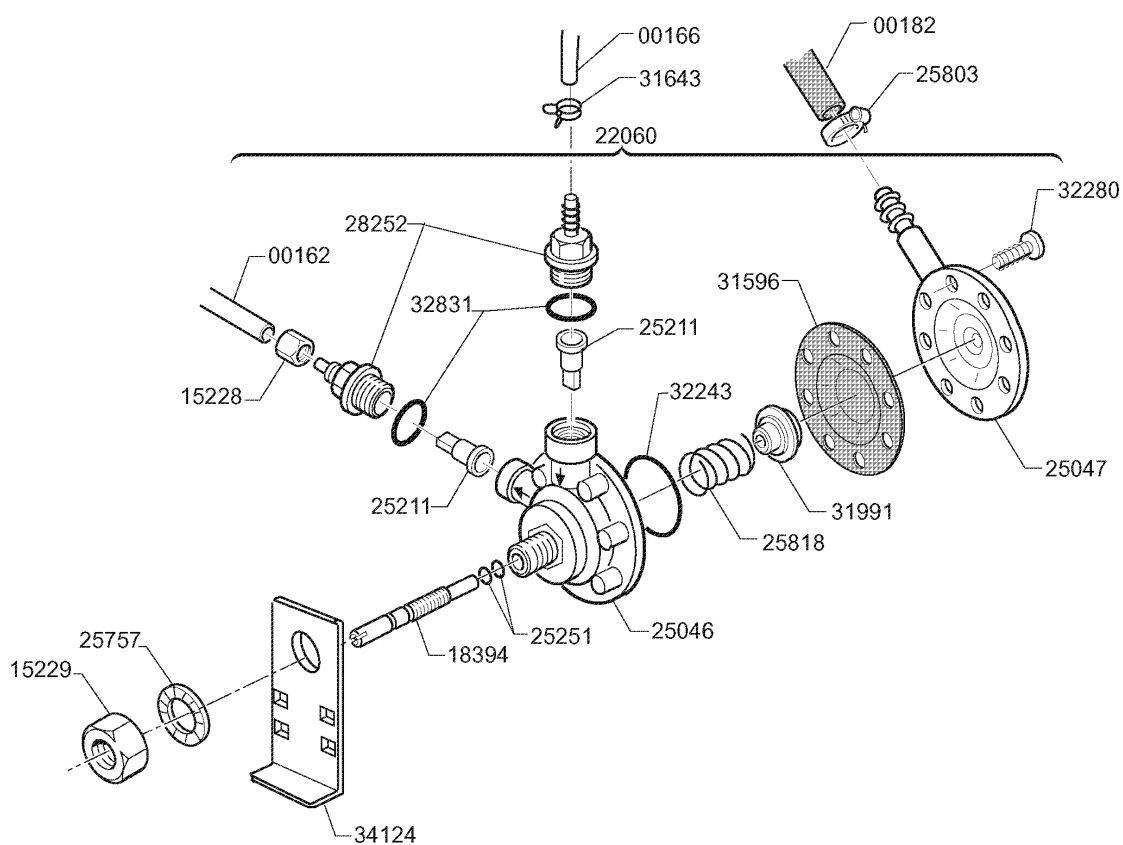


Ed.	10/01
Rev.	
Data	

8 - Rinse Aid Injector

POSITION	CODE	DESCRIPTION
0000	00162	ROLL TUBE 6X4 RILSAN
0000	00166	ROLL TUBE TRANSP. 4X7
0000	00182	HOSE 11X19 CASER/15"BLUE"
0000	15228	RING FOR RINSING SOLUTION TUBE
0000	15229	LOCK NUT AID DISPENSER
0000	18394	SCREW CONTROL DISPENSER
0000	22060	RINSE AID DISP.PREASS."YELLOW"1Ø
0000	25046	UPPER DISPENSER ASSEMBLY
0000	25047	LOWER DISPENSER ASSEMBLY
0000	25211	NON RETURN VALVE RINSE AID DISP.
0000	25251	GASKET OR 2012
0000	25757	TOOTHED SPACER DIAM. 12 D.E.D787
0000	25803	HOSE CLIP 13-20 ABA
0000	25818	CYLINDER SPRING (WIRE)
0000	28252	FITTING SUCTION DISPENSER
0000	31596	DIAPHRAGM, DISPENSER
0000	31643	HOSE CLIP 7,3-7,8
0000	31991	SPRING GUIDE FOR DISPENSER
0000	32243	GASKET OR 3156
0000	32280	OVAL HD. CROSS-SL. SCREW 4 X 13
0000	32831	GASKET OR 2062
0000	34124	BRACKET, HOONVED DISPENSER

9 - Thermostats - Rack Support Guide -tank Filter

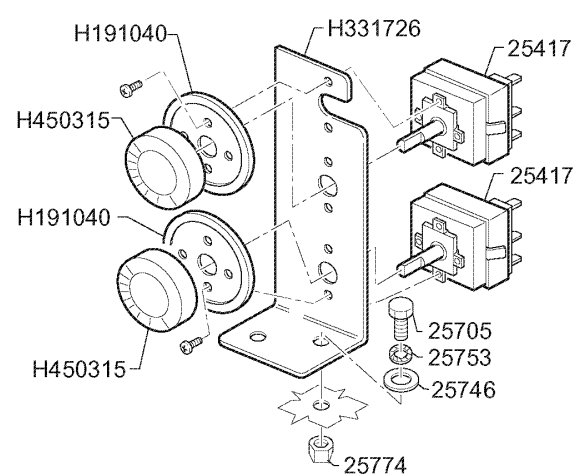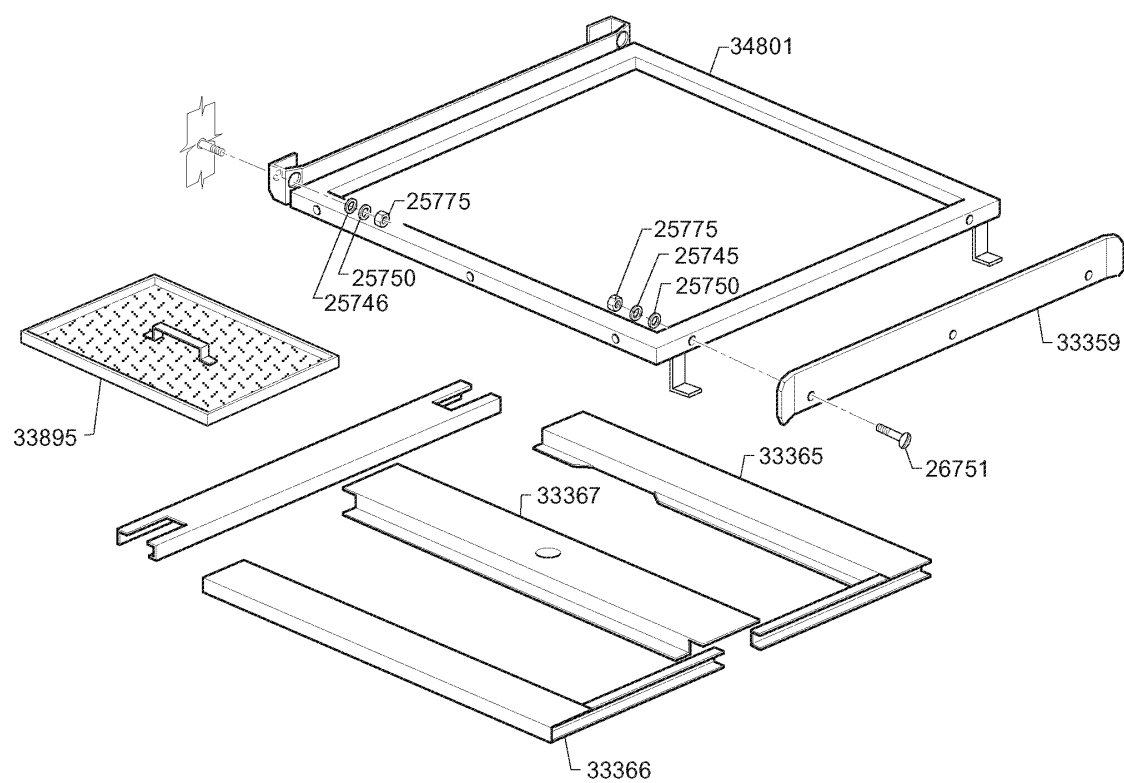

Ed.	10/01
Rev.	
Data	

9 - Thermostats - Rack Support Guide -tank Filter

POSITION	CODE	DESCRIPTION
0000	25417	THERMOSTAT 30-90Ø MT. 2
0000	25705	SCREW HEX.HD M 5 X 16 SS 18/8
0000	25745	SPACER, FLAT, DIAM.6
0000	25746	SPACER, FLAT, DIAM.6/18
0000	25750	SPACER, SPLITTED, DIAM. 6
0000	25753	TOOTHED SPACER.DIAM.5 D.E.
0000	25774	NUTS 5 MA
0000	25775	NUT 6 MA
0000	26751	SCREW 1/2 FLAT ROUND HD 6 X 12
0000	33359	SIDE GUIDE RACK HOODMACHINES
0000	33365	RIGHT SIDE CROSSBAR C140 COLB
0000	33366	LEFT SIDE CROSSBAR C140 COLB
0000	33367	FILTER SUPPORT CROSSBAR LC 380
0000	33895	PLAST. FILTER, TANK LEVEL, 650 E
0000	34801	RACK GUIDE ED 550
0000	H191040	THERMOSTAT KNOB SHIELD
0000	H331726	BRACKET FOR 3 THERMOSTATS
0000	H450315	KNOB F. THERMOSTAT 90°