



E7002 CONVECTION OVEN

OVEN FITMENTS

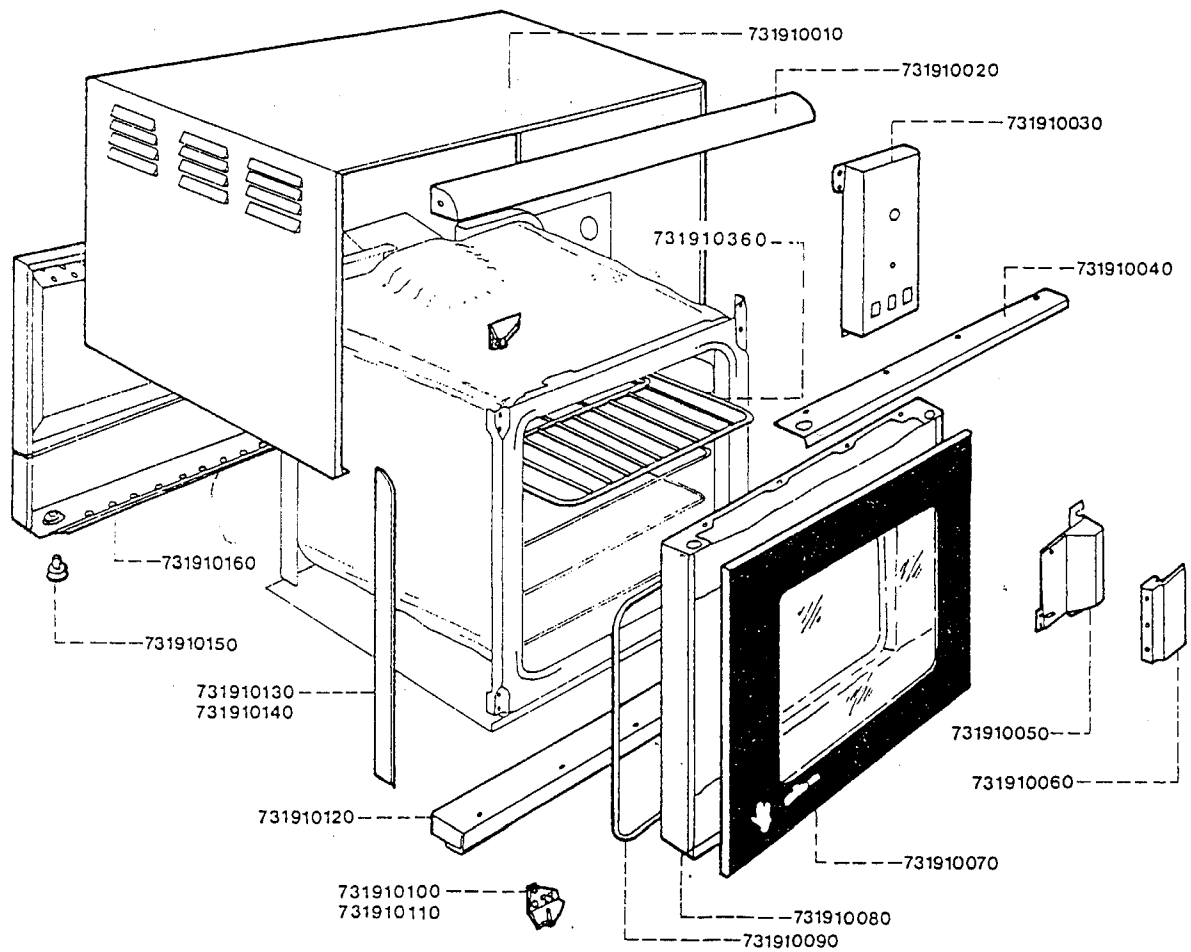

Code No.	Description
3H 731910010	Outer Casing
1E 731910020	Top Rail
3E 731910030	Control Panel
2E 731910040	Door Glass Keep-Top
11D 731910050	Control Panel Fixing Plate
11C 731910060	Door Handle
1E 731910070	Outer Door Glass
* 731910080	Door Assembly
9D 731910090	Door Seal
5C 731910100	Door Hinge-Top
5C 731910110	Door Hinge-Bottom
1E 731910120	Bottom Rail
7D 731910130	End Cheek—Left Hand
7D 731910140	End Cheek—Right Hand
6B 731910150	Adjustable Foot
* 731910160	Rear Panel Assembly
3E 731910360	Shelf

Lamp cover 531744171

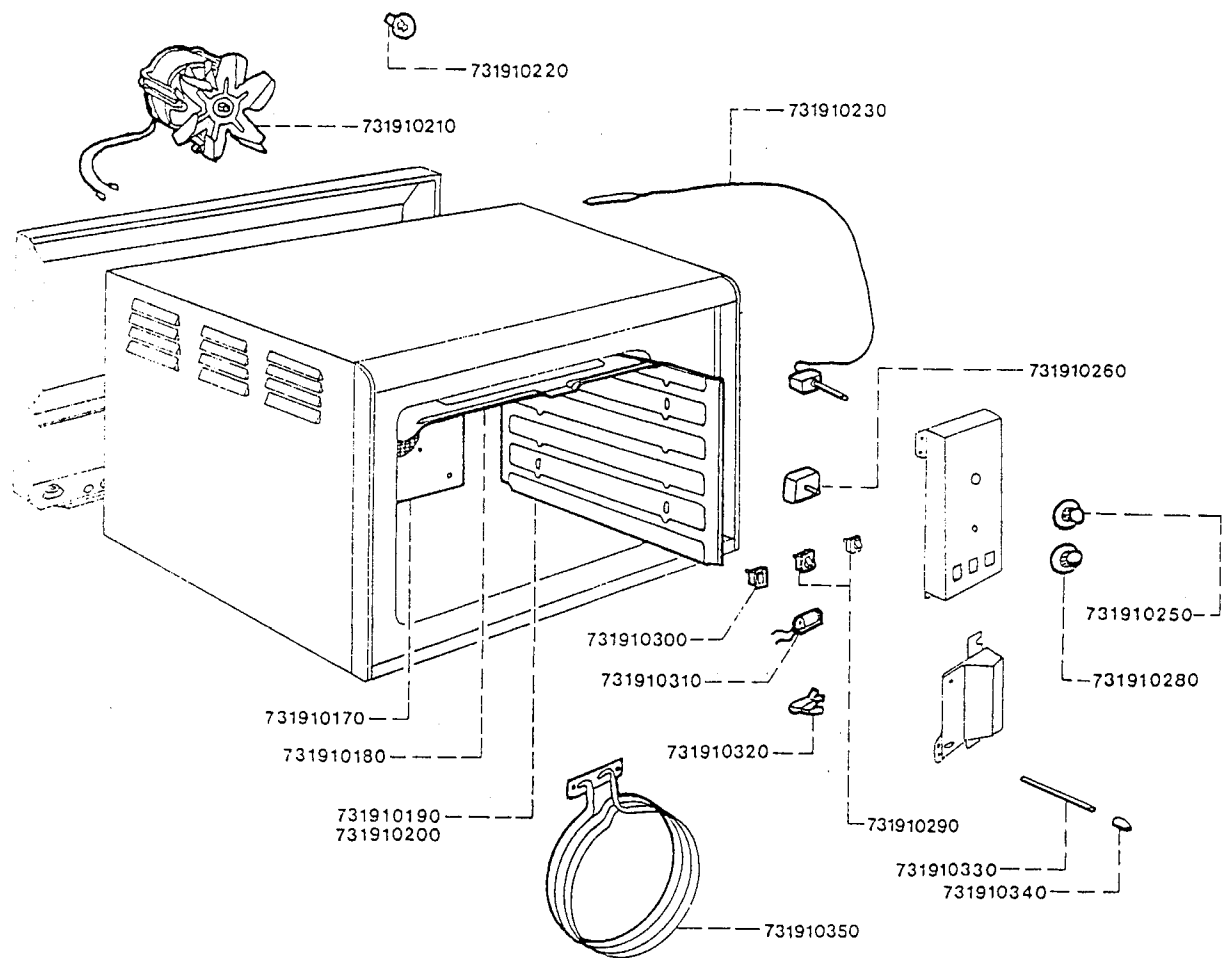

Code No.	Description
* 731910170	Element Guard
5F 731910180	Top Lining
2E 731910190	Left Hand Lining
2E 731910200	Right Hand Lining
12J 731910210	Fan Motor
7B 731910220	Bulb
7E 731910230	Thermostat
11E 731910240	Thermostat c/w knob—Not illustrated
6B 731910250	Thermostat Knob
3F 731910260	Timer

Code No.	Description
7F 731910270	Timer c/w knob—Not illustrated
6B 731910280	Timer Knob
2C 731910290	On/Off Switch or Oven Lamp Switch
7B 731910300	Temperature Neon
5E 731910310	Buzzer
11C 731910320	Lamp Microswitch
5B 731910330	Microswitch Trip Lever
10A 731910340	Trip Lever Protection Cap
5F 731910350	Element

731910370 - Door Catch Assy

531744171 Lamp cover

531930400 POLD STAT
531930370 COOK STAT