



**PARTS ILLUSTRATION,
723**

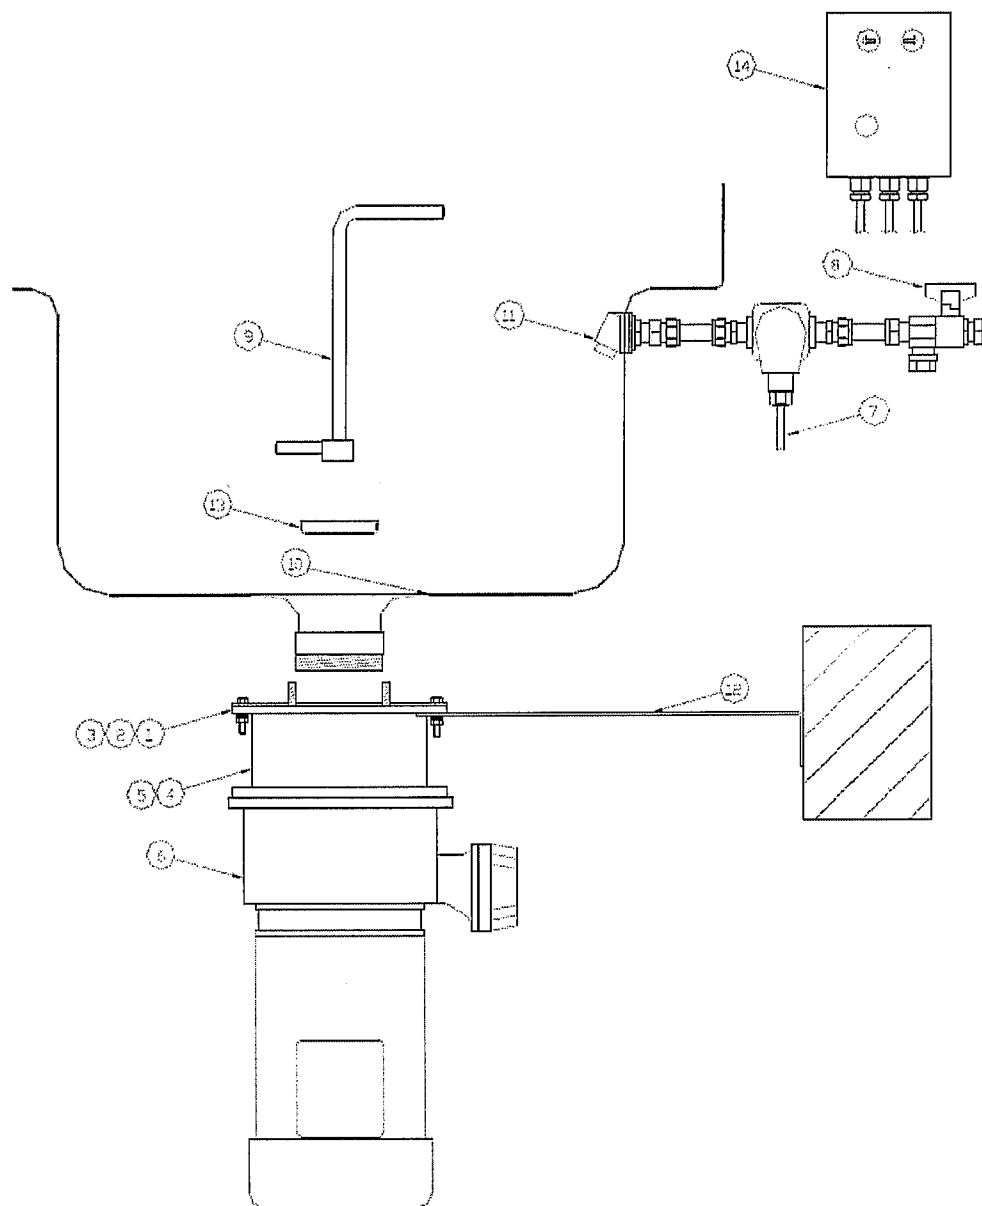


Note

Item 10, 3 inch BSP externally threaded sink inlet assembly, is to be welded into the sink aperture prior to installation of the machine.

725, 726, 800 Series and Dump Station

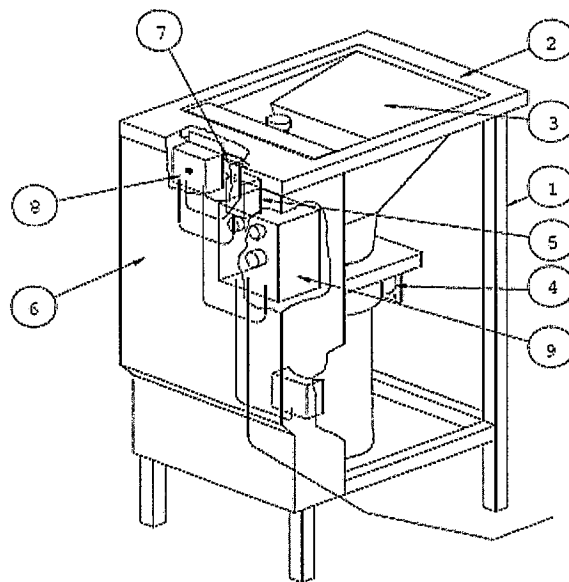

700 SERIES FOOD WASTE
DISPOSER

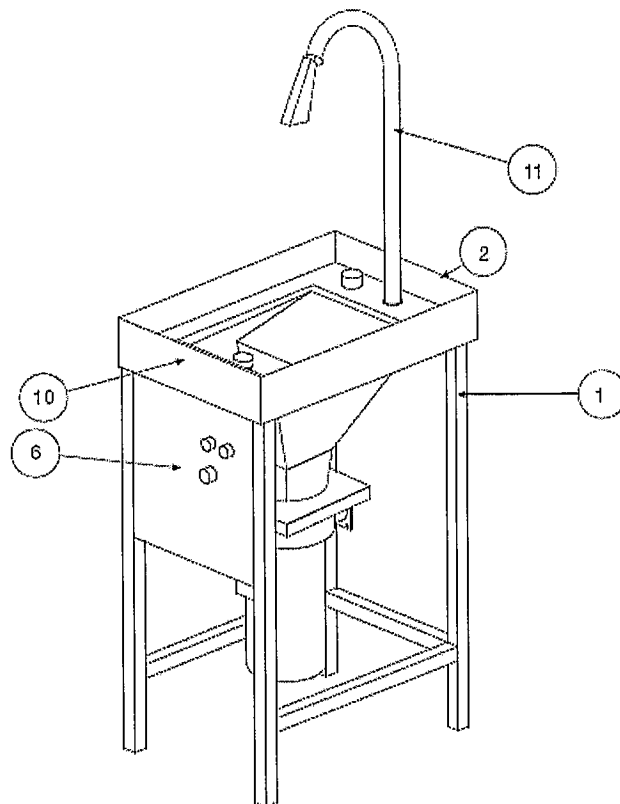

PARTS LIST

723

Item	Part No	Description	Item	Part No	Description
1	E60/021	Flange Plate Assembly	8	J03/134	Ball valve / Strainer
2	A11/250	Gasket	9	S60/016	Release Key
3	D25/008	Washer M6	10	E60/019	Sink Inlet Assembly
	D25/005	Washer M6 Shakeproof			
	D20/013	Full Nut M6	11	J04/319	Trough Inlet
	D19/115	Screw M6			
4	C60/001M1	Interface Casting	12	E60/022	Torque Bar
5	E60/016	Baffle Welded Assembly	13	E10/019	Silver Saver (Optional)
6	G40/157	Motor 1.1kW 230-1-50	14	G30/353	Starter Box 230-1-50
	G40/158	Motor 1.1kW 400-3-50		G30/350	Starter Box 400-3-50 4 Wire
	C23/010M1	Top Housing			
	D20/039	M10 Phillips Nut			
	D19/091	M10 x 30 Hex Head Screw			
	D25/010	M10 Plain Washer			
	C23/011M	Rotor			
	A02/047	Speedi Sleeve			
	C13/005M1	Cutter ring			
	D19/044	M8 x 16 Hex Head Screw			
	D25/070	Nylon Washer			
	L32/067	Washer			
	D25/041	Fibre Washer			
	A02/048	Seal			
	E30/102	Rotor Flinger			
	E30/103	Flinger Baffle			
	L32/064	Rotor Spacer			
	A11/162	Motor Shield Gasket			
	A00/148	Bearing			
	D23/023	Stud			
	D25/012	M8 Seloc Washer			
	D20/023	M8 Full Nut			
	L54/001	Dowell Pin			
	A11/145	Hopper gasket			
	A11/098	Waste Outlet Gasket			
	C23/004M1Z	Waste Outlet			
	D19/097	M6 x 30 Hex Head Screw			
7	S60/013	Solenoid 230V (1ph)			
	S60/006	Solenoid 400V (4 wire 3ph)			
	J04/073	Straight Coupler			

When ordering spare parts or accessories always quote the **SERIES NUMBER** of the machine, found on the rating label.

725 & 726 Series.

Item	Part No	Description	Item	Part No	Description
1	E60/001	Frame – 726	5	S60/004	Solenoid 230V (1ph & 5 wire 3ph)
	A10/481	Adjustable Foot		S60/003	Solenoid 400V (4 wire 3ph)
	A13/054	Square Foot		J04/073	Straight Coupler
				J01/080	Copper Pipe
2	E60/001	Hopper – 726		J03/134	Ball valve / Strainer
	E60/009	Hopper & Top - 726		J04/130	Elbow
	D19/031	M5 x 10 Hex Head Screw			
	D25/021	M5 Plain Washer	6	E68/007	Front Panel – 726
	D25/004	M5 Shakeproof Washer		D19/031	M5 x 10 Hex Head Screw
				D25/021	M5 Plain Washer
3	E60/004	Baffle		D25/004	M5 Shakeproof Washer
	A31/002	Magnet			
	D21/043	M5 x 10 Pan Head Screw	7	G45/053	Switch Interlock
	D25/004	M5 Shakeproof Washer		D21/047	M5 x 25 Pan Head Screw
	M68	Interlock Body		D25/004	M5 Shakeproof Washer
	M69	Interlock Knob			
	M48	Interlock Plug	8	G76/021	Terminal Box
	D26/017	Pin		D21/101	M4 x 10 Pan Head Screw
4	G40/157	Motor 1.1kW 230-1-50	9	G30/353	Starter Box 230-1-50
	G40/158	Motor 1.1kW 400-3-50		G30/350	Starter Box 400-3-50 4 Wire
	C23/010M1	Too Housing		G30/351	Starter Box 400-3-50 5 Wire
	D20/039	M10 Phillips Nut		E60/007	Back Plate – 726
	D19/091	M10 x 30 Hex Head Screw		A10/134	Blind Grommet
	D25/010	M10 Plain Washer		A11/177	Sponge Washer – 726
	C23/011M	Rotor			
	A02/047	Speedi Sleeve	OPTIONAL ITEMS		
	C13/005M1	Cutter ring			
	D19/044	M8 x 15 Hex Head Screw		E60/010	Side panel - 726
	D25/070	Nylon Washer			
	L32/067	Washer			
	D25/041	Fibre Washer			
	A02/048	Seal			
	E30/102	Rotor Flinger			
	E30/103	Flinger Baffle			
	L32/064	Rotor Spacer			
	A11/162	Motor Shield Gasket			
	A00/148	Bearing			
	D23/023	Stud			
	D25/012	M8 Seloc Washer			
	D20/023	M8 Full Nut			
	L54/001	Dowell Pin			
	A11/145	Hopper gasket			
	A11/098	Waste Outlet Gasket			
	C23/004M1Z	Waste Outlet			
	D19/097	M6 x 30 Hex Head Screw			

When ordering spare parts or accessories always quote the **SERIES NUMBER** of the machine, found on the rating label.

800 Series and Dump Station.

Item	Part No	Description	Item	Part No	Description
1	E68/008	Frame – 826	5	S60/004	Solenoid 230V (5 wire 3ph)
	E68/005	Frame – Dump Station		S60/003	Solenoid 400V (4 wire 3ph)
	A10/481	Adjustable Foot		J04/073	Straight Coupler
				J01/044	Copper Pipe
2	E68/001	Hopper – 825		J03/134	Ball valve / Strainer
	E68/010	Hopper & Top – 826		J04/130	Elbow
	E68/009	Hopper & Top – Dump Station			
	D19/031	M5 x 10 Hex Head Screw	6	E68/007	Front Panel – 826
	D25/021	M5 Plain Washer		E68/006	Front Panel – Dump Station
	D25/004	M5 Shakeproof Washer		D19/031	M5 x 10 Hex Head Screw
				D25/021	M5 Plain Washer
3	E68/002	Baffle		D25/004	M5 Shakeproof Washer
	A31/002	Magnet			
	D21/043	M5 x 10 Pan Head Screw	7	G45/053	Switch Interlock
	D25/004	M5 Shakeproof Washer		D21/047	M5 x 25 Pan Head Screw
	M68	Interlock Body		D25/004	M5 Shakeproof Washer
	M69	Interlock Knob			
	M48	Interlock Plug	8	G76/021	Terminal Box
	D26/017	Pin		D21/101	M4 x 10 Pan Head Screw
4	G40/122	Motor 2.2kW 400-3-50	9	G30/323	Starter Box 400-3-50 4 Wire
	A10/266	Cable Gland		G30/354	Starter Box 400-3-50 5 Wire
	C54/001M2	Housing		E60/007	Back Plate – 826 & Dump Station
	D23/024	Stud		A10/134	Blind Grommet
	D20/030	M16 Half Nut		A11/177	Sponge Washer – 826 & Dump Station
	C24/004M2	Rotor			
	C15/013M1	Cutter ring	10	E68/012	Fascia Panel – Dump Station
	D19/109	M16 x 25 Hex Head Screw		D19/031	Screw – Dump Station
	D19/050	M10 x 20 Hex Head Screw		D25/004	Shakeproof Washer – Dump Station
	D25/023	Nylon Washer			
	L32/018	Washer	11	F63/200	Pre Rinse PR2 – Dump Station
	D25/022	Fibre Washer			
	A02/060	Seal	OPTIONAL ITEM		
	A02/061	Speedi Sleeve			
	E30/020	Rotor Flinger		E68/013	Side Panel - 826
	L54/004Z	Seal Sleeve			
	A02/052	Seal			
	J06/028	Nylon Tube			
	D23/035	Stud			
	D25/011	M12 Plain Washer			
	D20/033	M12 Nyloc Nut			
	D26/007	Tension Pin			
	D22/046	M10 x 16 Socket Head Screw			
	A11/150	Hopper gasket			
	A11/098	Waste Outlet Gasket			
	C23/004M1Z	Waste Outlet			

When ordering spare parts or accessories always quote the **SERIES NUMBER** of the machine, found on the rating label.