


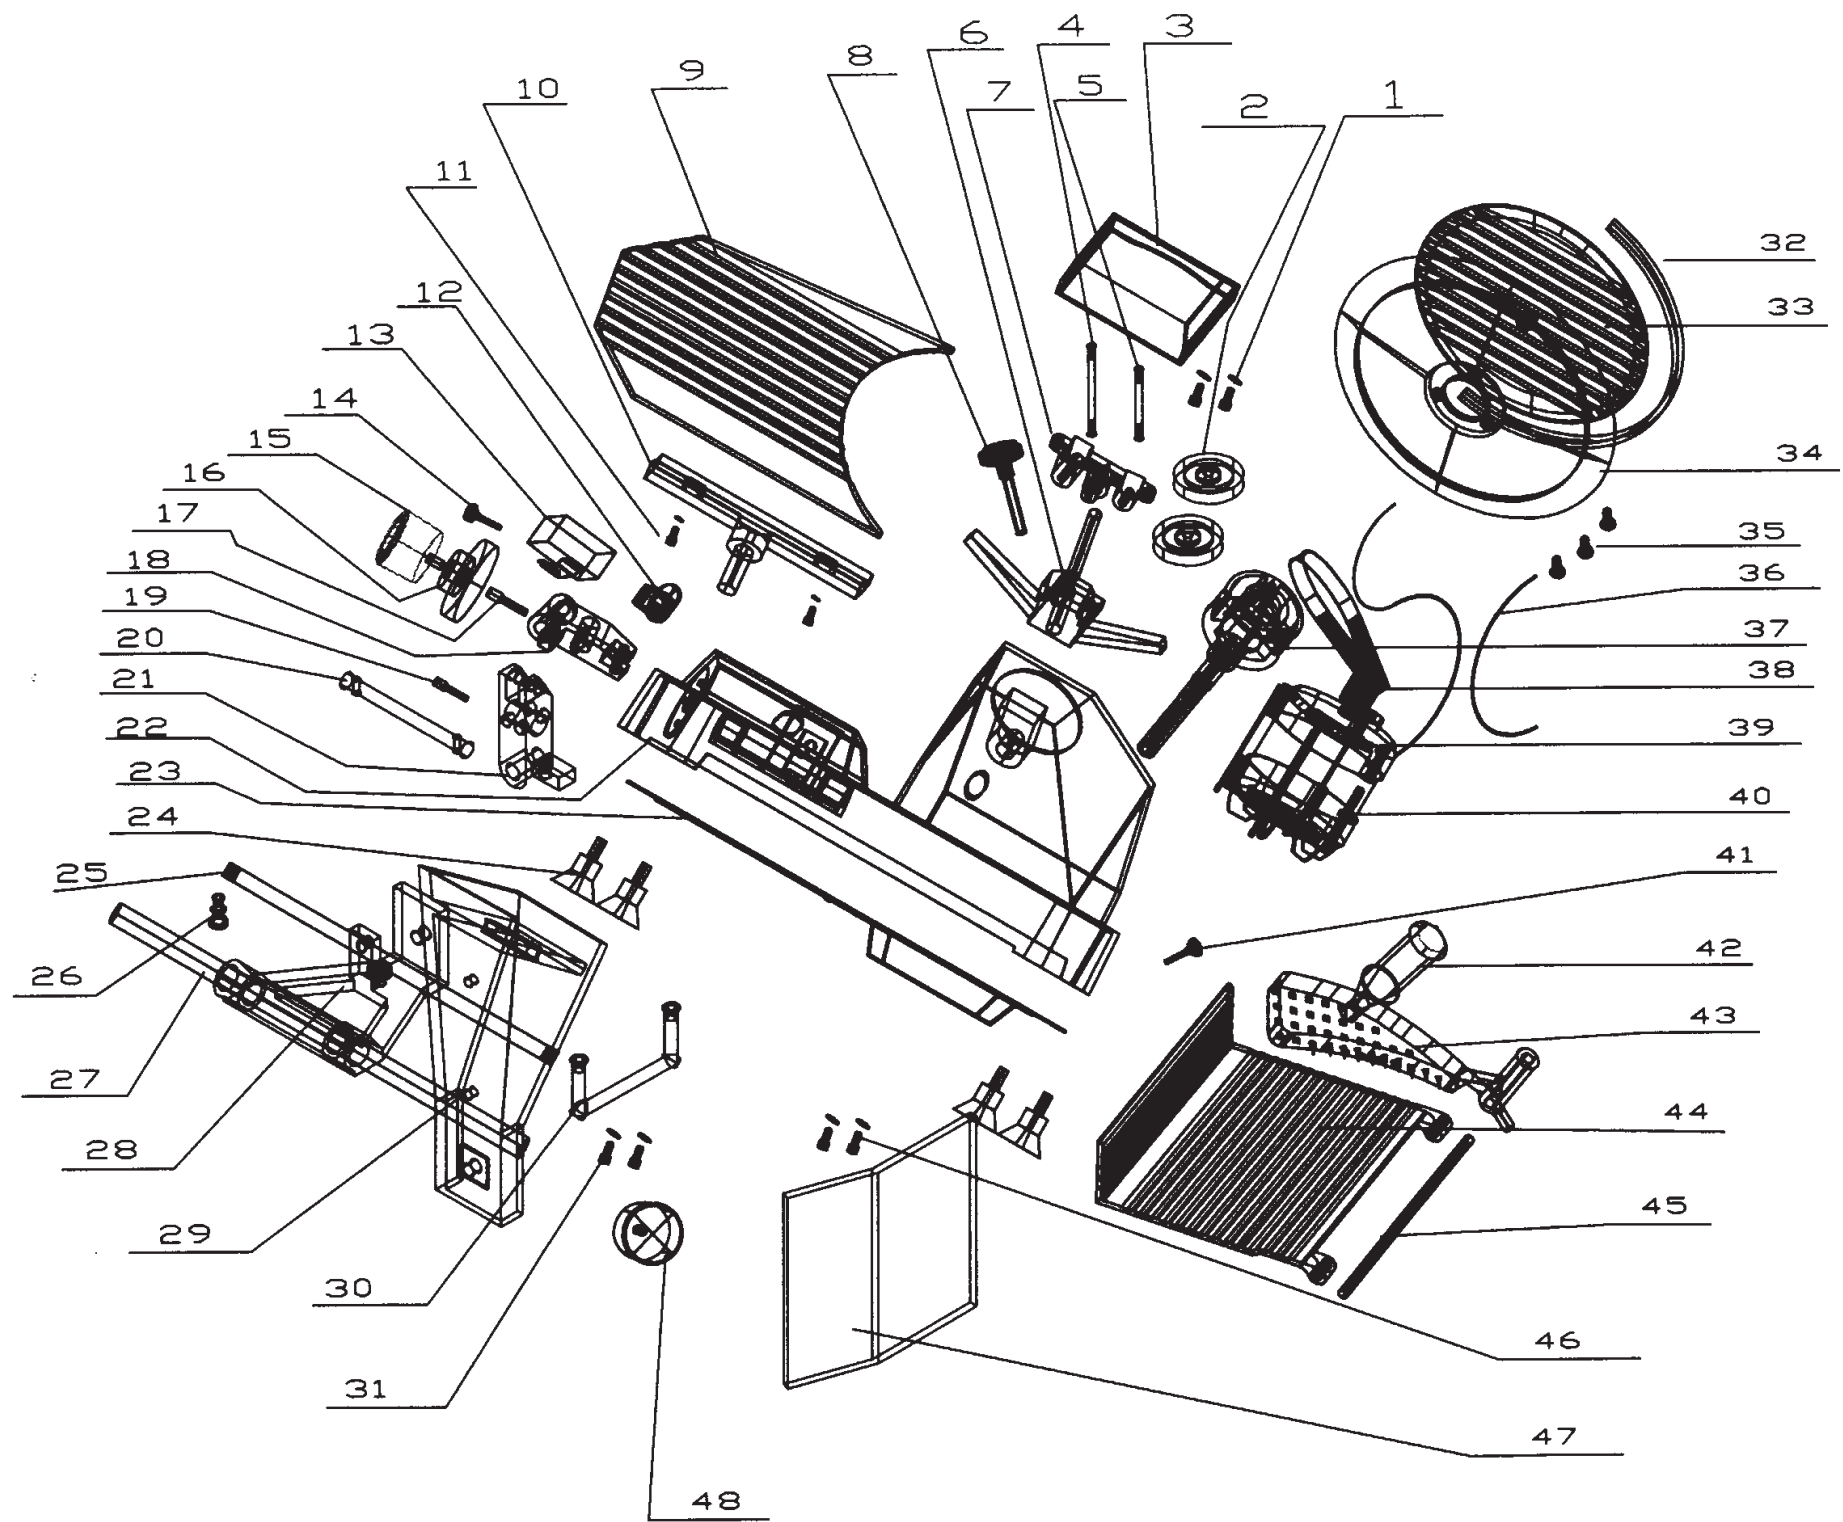

Machine	Explode	Code	Description	Stocked Line
U627	1-7	AB784	Sharpening Stone 1 & 2 with Cover	✓
U627	8	AC323	Tie Bar Knob	✓
U627	8	AC324	Tie Bar	✓
U627	9	N/A	Locking Plate	N/A
U627	10	N/A	Locking Plate Holder	N/A
U627	11	N/A	Screw	N/A
U627	12	AB782	On-Off Switch	✓
U627	13	AC325	Electrical Box	✓
U627	14	N/A	Screw	N/A
U627	15	AB788	Thickness Adjuster Knob	✓
U627	16	AB832	Scale	✓
U627	17	N/A	Dowel	N/A
U627	18	N/A	Cams	N/A
U627	19	N/A	Screw	N/A
U627	20	AC327	Shaft	✓
U627	21	AC328	Slide	✓
U627	22	N/A	Work Table	N/A
U627	23	AC330	Bottom Plate	✓
U627	24	AB763	Rubber Leg	✓
U627	25	AC332	Square Orbit	✓
U627	26	N/A	Shaft	N/A
U627	27	AC335	Cicle Orbit	✓
U627	28	N/A	Slide Core	N/A
U627	29	AC609	Slide Bracket	✓
U627	30	AB770	Handlebar	✓
U627	30	AB773	Handle Spring	✓
U627	31	N/A	Screw	N/A
U627	32	AC339	Protect Circle	✓
U627	33	AB839	Blade Protection Plate with Circle Bolt	✓
U627	33	AC763	Blade Protection Plate with Square Bolt	✓
U627	34	AB767	Blade Removal Tool	✓
U627	34	AB769	Blade	✓
U627	35	N/A	Screw	N/A
U627	36	N/A	Wire	N/A
U627	37	AC341	Blade Shaft	✓
U627	38	AB765	Belt	✓
U627	39	AB781	Motor	✓
U627	40	N/A	Bolt	N/A
U627	41	N/A	Screw	N/A

U627	42	AC342	Handlebar	✓
U627	43	AB777	Presser	✓
U627	44	AB941	Carrier	✓
U627	45	AC343	Sliding Bar	✓
U627	46	AC558	Screw	✓
U627	47	AB834	Guard Board	✓
U627	48	AB790	Tie Bar	✓
U627	n/a	AC096	Microswitch	✓