


Exploded diagram and spare parts list

Double Contact Grills: L537, L553, L554 & L555


Exploded diagram and spare parts list
For machines with digital timer:

Double Contact Grills: L537, L553, L554 & L555

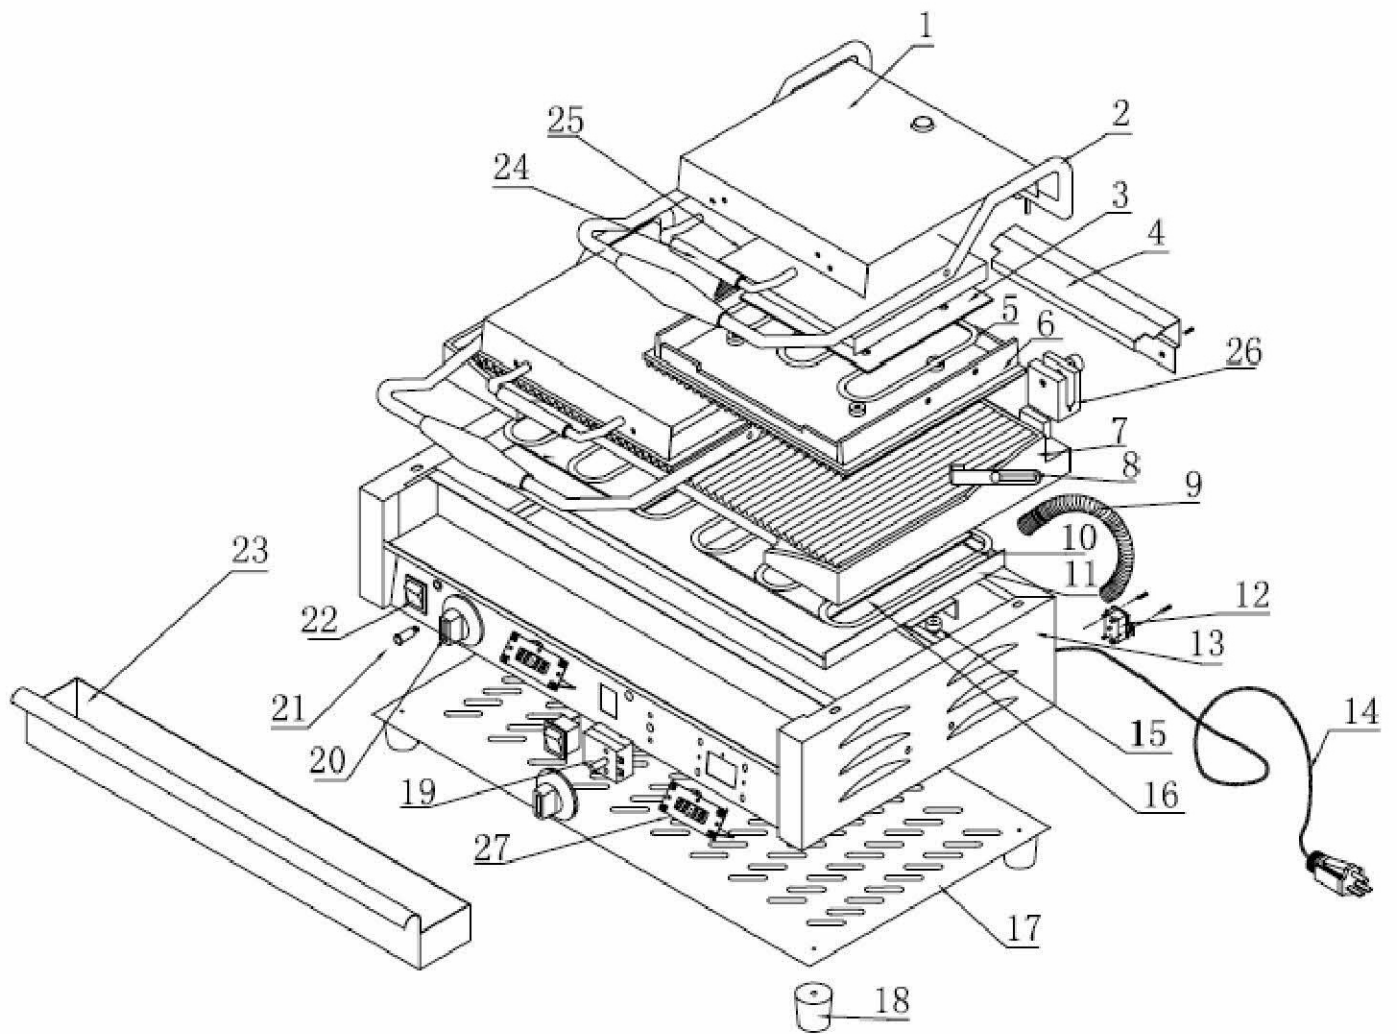

Machine	Explode	Code	Description
L537,L553,L554 & L555 – Double Contact Grill with timer	1		Top Cover
L537,L553,L554 & L555 – Double Contact Grill with timer	2	N483	Main Handle
L537,L553,L554 & L555 – Double Contact Grill with timer	3		Mica Plate
L537,L553,L554 & L555 – Double Contact Grill with timer	4		Rear Cover
L537,L553,L554 & L555 – Double Contact Grill with timer	5	AD582	Heating Element Upper
L537,L553,L554 & L555 – Double Contact Grill with timer	6		Cast Plate Upper
L537,L553,L554 & L555 – Double Contact Grill with timer	7		Cast Plate Lower
L537,L553,L554 & L555 – Double Contact Grill with timer	8		Hinge
L537,L553,L554 & L555 – Double Contact Grill with timer	9		Plate Connecting Spring
L537,L553,L554 & L555 – Double Contact Grill with timer	10	AD583	Heating Element Lower
L537,L553,L554 & L555 – Double Contact Grill with timer	11		Insulation Plate Lower
L537,L553,L554 & L555 – Double Contact Grill with timer	12	N126	Thermal Cut Out
L537,L553,L554 & L555 – Double Contact Grill with timer	13		Main Body
L537,L553,L554 & L555 – Double Contact Grill with timer	14		Plug & Lead
L537,L553,L554 & L555 – Double Contact Grill with timer	15		Ceramic Tube
L537,L553,L554 & L555 – Double Contact Grill with timer	16		Mica Plate
L537,L553,L554 & L555 – Double Contact Grill with timer	17		Base Plate
L537,L553,L554 & L555 – Double Contact Grill with timer	18	AC689	Feet
L537,L553,L554 & L555 – Double Contact Grill with timer	19	N125	Thermostat
L537,L553,L554 & L555 – Double Contact Grill with timer	20	N129	Dial
L537,L553,L554 & L555 – Double Contact Grill with timer	21	N486	Indicator Light
L537,L553,L554 & L555 – Double Contact Grill with timer	22	N146	Switch
L537,L553,L554 & L555 – Double Contact Grill with timer	23	N271	Drip Tray
L537,L553,L554 & L555 – Double Contact Grill with timer	24	N484	Small Handle
L537,L553,L554 & L555 – Double Contact Grill with timer	25		Insulation Plate Upper
L537,L553,L554 & L555 – Double Contact Grill with timer	26		Tension Bracket
L537,L553,L554 & L555 – Double Contact Grill with timer	27	AD928	Timer

For machines without digital timer:

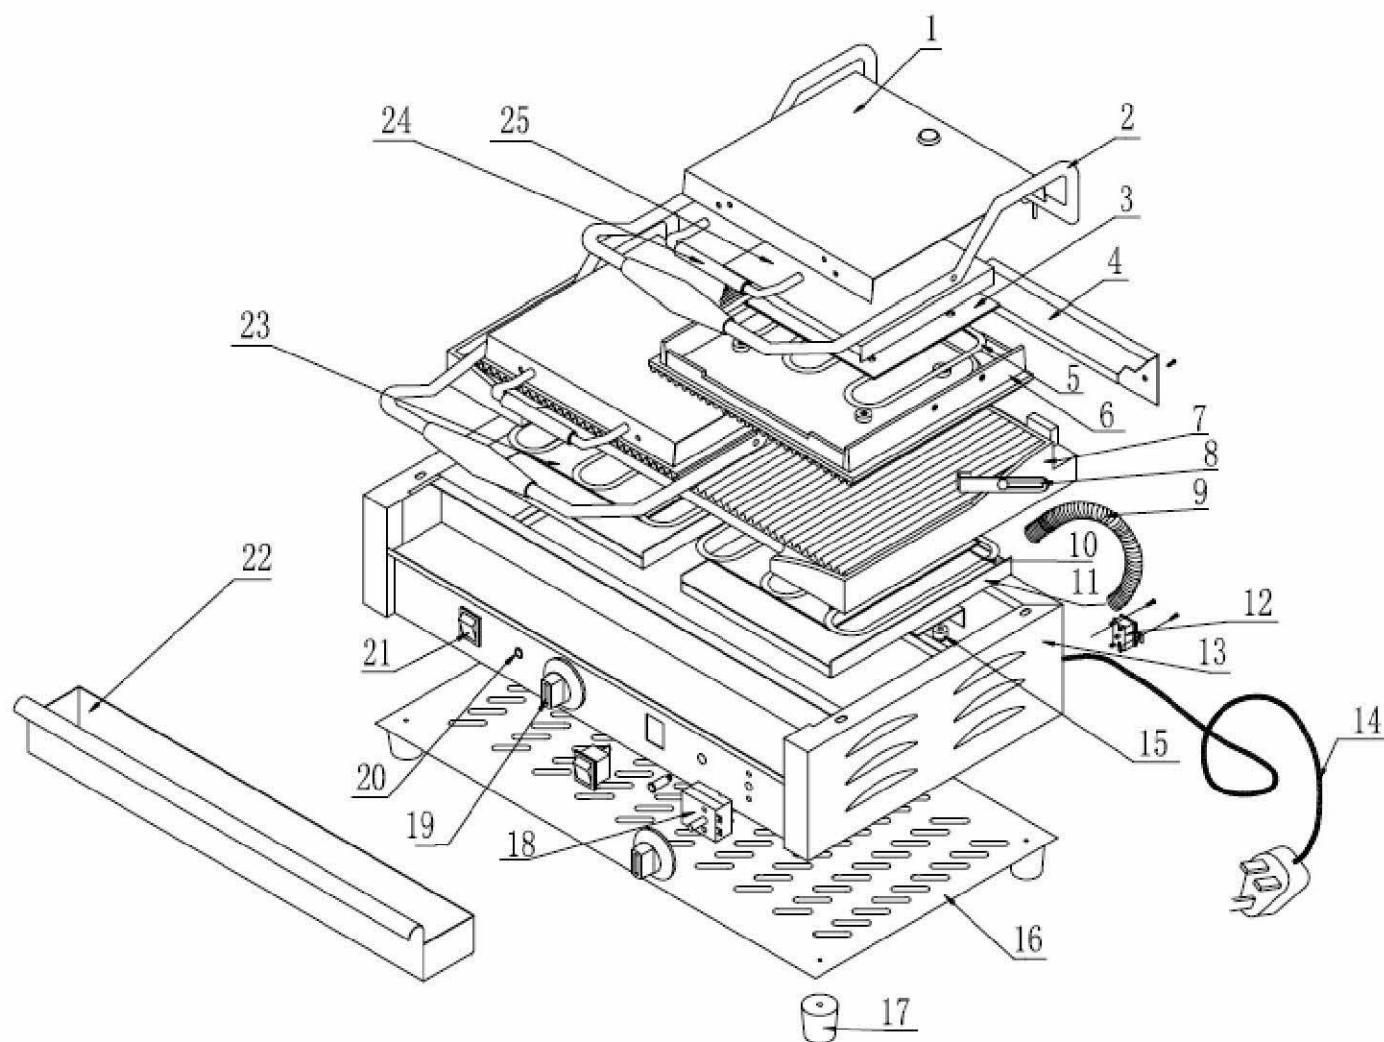

Machine	Explode	Code	Description
L537,L553,L554 & L555 – Double Contact Grill	1		Top Cover
L537,L553,L554 & L555 – Double Contact Grill	2	N483	Main Handle
L537,L553,L554 & L555 – Double Contact Grill	3		Mica Plate
L537,L553,L554 & L555 – Double Contact Grill	4		Rear Cover
L537,L553,L554 & L555 – Double Contact Grill	5	N156	Heating Element Upper
L537,L553,L554 & L555 – Double Contact Grill	6		Cast Plate Upper
L537,L553,L554 & L555 – Double Contact Grill	7		Cast Plate Lower
L537,L553,L554 & L555 – Double Contact Grill	8		Hinge
L537,L553,L554 & L555 – Double Contact Grill	9	N480	Plate Connecting Spring
L537,L553,L554 & L555 – Double Contact Grill	10	N157	Heating Element Lower
L537,L553,L554 & L555 – Double Contact Grill	11		Insulation Plate Lower
L537,L553,L554 & L555 – Double Contact Grill	12	N126	Thermal Cut Out
L537,L553,L554 & L555 – Double Contact Grill	13		Main Body
L537,L553,L554 & L555 – Double Contact Grill	14	N150	Plug & Lead
L537,L553,L554 & L555 – Double Contact Grill	15		Ceramic Tube
L537,L553,L554 & L555 – Double Contact Grill	16		Base Plate
L537,L553,L554 & L555 – Double Contact Grill	17		Feet
L537,L553,L554 & L555 – Double Contact Grill	18	N125	Thermostat
L537,L553,L554 & L555 – Double Contact Grill	19	N129	Dial
L537,L553,L554 & L555 – Double Contact Grill	20	N486	Indicator Light
L537,L553,L554 & L555 – Double Contact Grill	21	N146	Switch
L537,L553,L554 & L555 – Double Contact Grill	22	N271	Drip Tray
L537,L553,L554 & L555 – Double Contact Grill	23		Mica Plate
L537,L553,L554 & L555 – Double Contact Grill	24	N484	Small Handle
L537,L553,L554 & L555 – Double Contact Grill	25		Insulation Plate Upper