


Salvajor Trough Collector

PARTS BREAKDOWN for Model S419

For Serial Numbers
starting at 25000


Model S419 System Components

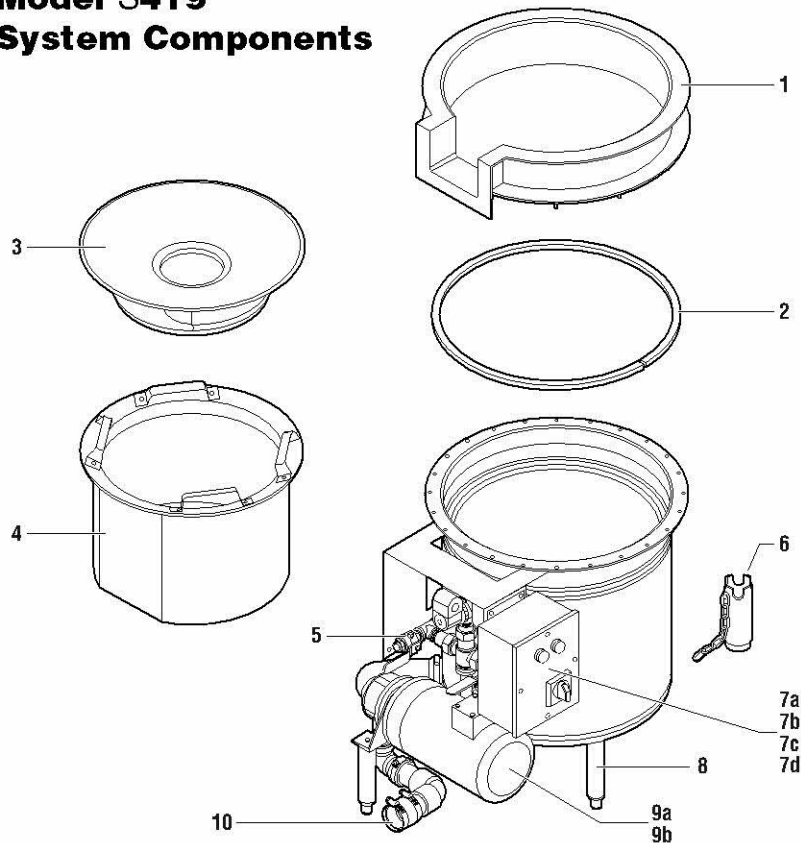


ITEM PART NO. DESCRIPTION

1	980169	S419 TOP ASSEMBLY
2	996058	TOP GASKET
3	992011	SALVAGE BASIN
4	992013	SCRAP BASKET
5	980158	WATER HARNESS ASSY (includes 11-16)
6	988006	OVERFLOW PIPE ASSEMBLY
7a	MSSLD4	CONTROL PANEL 115V 1PH
7b	MSSLD5	CONTROL PANEL 208-230V 1PH
7c	MSSLD7	CONTROL PANEL 208-230V 3PH
7d	MSSLD9	CONTROL PANEL 460V 3PH
8	914LESS	STAINLESS STEEL LEG
9a	980076	PUMP AND MOTOR ASSY 1PH (includes 25-32)
9b	980077	PUMP AND MOTOR ASSY 3PH (includes 25-32)
10	988026	PUMP PLUMBING ASSY (includes 18-22)
11	2906	FIXED NOZZLE
12	998113	3/8" NYLON ELBOW
13	998022	3/8" BRAIDED TUBING
14	997001	HOSE CLAMP, PLASTIC
15	988026	SOLENOID BODY (repair kit available)
16	998110	WATER HARNESS BLENDER ASSY
17a	GP234115	SOLENOID COIL 115V (sold separately)
17b	GP234208	SOLENOID COIL 208-230V (sold separately)
17c	GP234460	SOLENOID COIL 460V (sold separately)
18	S24	HOSE CLAMP
19	996019	RUBBER ELBOW 3/4" X 2"
20	M32	HOSE CLAMP
21	988025	ELBOW ASSEMBLY
22	15X15BR	COUPLING 1-1/2" X 1-1/2"
23	996034	ELBOW 125 DEGREE RUBBER (sold separately)
24	980074	PUMP ASSEMBLY (includes 25-31)
25	988010	PUMP HOUSING
26	997089	CAP SCREW (not used on 1-phase)
27	996027	IMPELLER
28	996028	O-RING
29	ECK511	SEAL KIT
30	988009	PUMP BASE
31	996030	V-RING
32a	991060	PUMP MOTOR 1PH
32b	991061	PUMP MOTOR 3PH
33	980157	LEG BRACKET (sold separately)
34	997061	SCREW 3/8" (sold separately)
35	38L	LOCKWASHER (sold separately)


Item #5

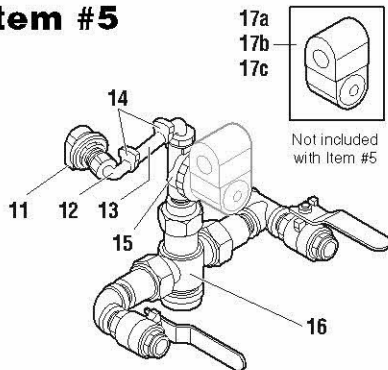

Item #10

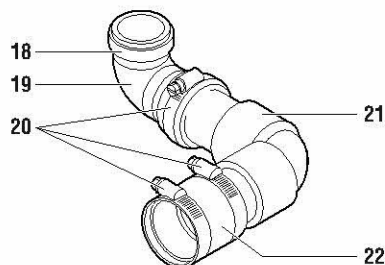


Item #9a Item #9b (shown)

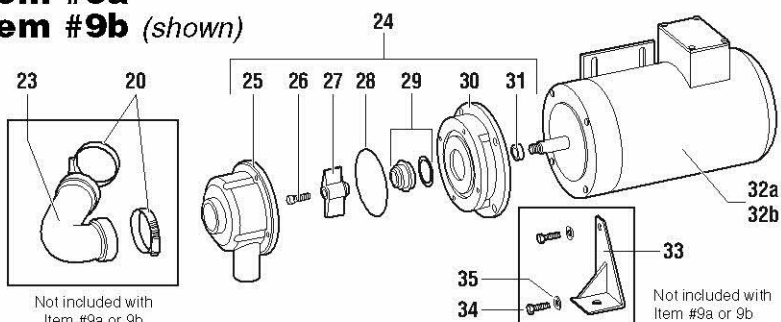

Salvajor Model MSS-LD

Manual Start/Stop with Line Disconnect

PRE-WIRED CONTROL PANEL PARTS BREAKDOWN

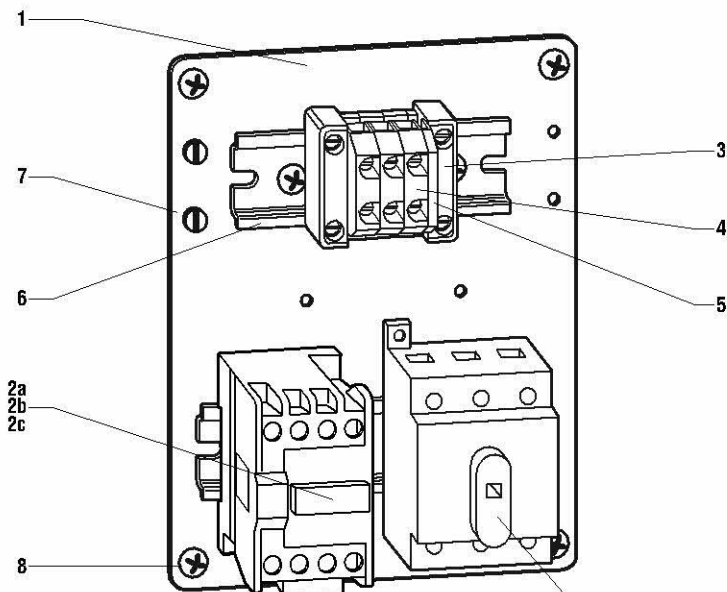

MSS-LD Item Numbers

VOLTAGE	PHASE	ITEM NO.
115	1	MSSLD4
208 or 230	1	MSSLD5
208 or 230	3	MSSLD7
460	3	MSSLD9

ITEM	PART NO.	DESCRIPTION
1	79IP	Inner Panel MSS
2a	994006	Contactors 115V
2b	994007	Contactors 208-230V
2c	994008	Contactors 460V
3	994294	End Clamp
4	994292	Terminal Block
5	994293	End Barrier
6	994005	Din Rail Mounting Track
7	SCR1032	Ground Screw 10-32
8	997093	Screw 10-32 X 3/8"
9	79GA	Lid Gasket Assembly
10	ABD100B	Button Start
11	ABD200A	Button Stop
12	79BA	7" X 9" Box Assembly
13	997032	Screw 10-32 X 5/8"
14	980138	Line Disconnect Assembly
14a	994263	Line Disconnect Handle

