



FOOD WARMER

Model No. 3918-100 (120V)

Model No. 3918-200 (240V)

IMPORTANT: Always provide Serial No. when ordering parts.

Ref. Part No.	Description	Qty
1 109501	Box, less door, with handles & latch	1
2 109502	Door	1
3 109502-03	Rivet, pop, 1/8" dia., 1/8" grip	5
4 108277	Shelf	1
5 109501-01	Latch	1
6 109501-05	Rivet, pop, 5/32" dia., 1/8" grip	16
7 108352-03	Handle, side	2
9 108352-01	Handle, top	1
11 109501-04	Cover, element	1
14 108274-100-01	Element, 120V	1
14 108274-200-01	Element, 240V	1
18 109500-02	Thermostat	1
19 109500-05	Screw, Phillips round-head, 10-32 x 3/8"	2
20 109500-06	Nut, hex, 10-32	2
21 109500-10	Screw, Phillips sheet-metal, #8 x 3/8"	4
22 109500-100	Panel assembly, back, 120V (complete with element, etc.)	1
22 109500-200	Panel assembly, back, 240V (complete with element, etc.)	1
23 109500-03	Plug/switch combination	1
24 109500-04	Holder, fuse	1
25 109500-07	Fuse, 250V 3A, GMA 5 x 20 mm	1
26 109500-08	Screw, Phillips pan-head, 10-24 x 1-1/4"	4
27 109500-09	Washer, internal-tooth, #10	4
28 108278	Cord	1

