 
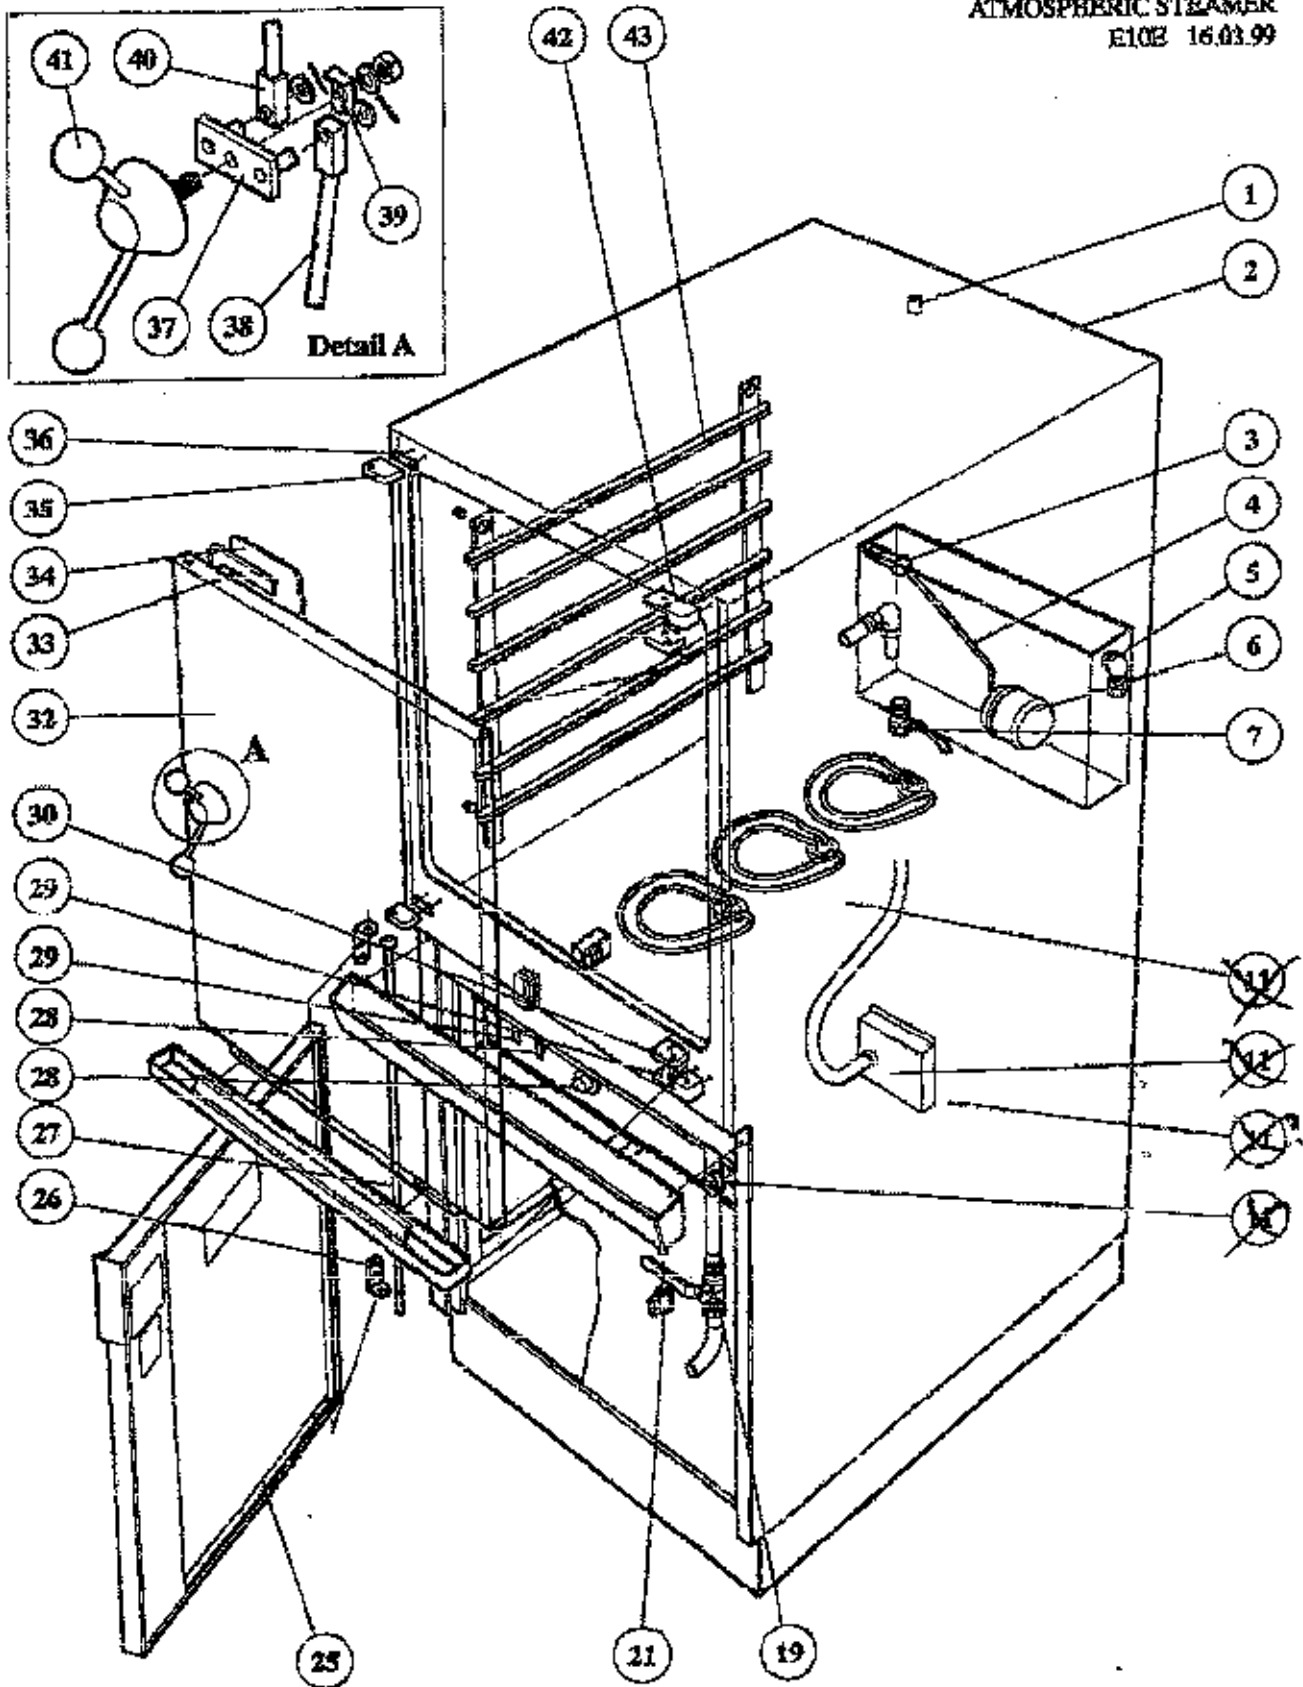 


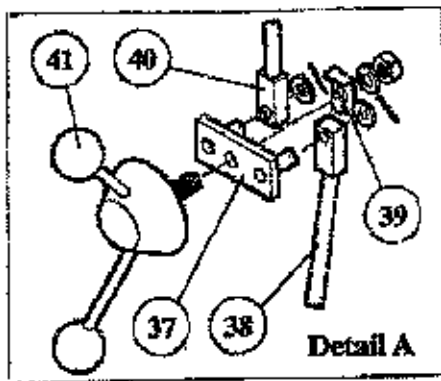

SPARE PARTS LIST

<u>PART CODE</u>	<u>DESCRIPTION</u>
3630-150	Hinge support block
3630-151	Hinge block, bottom
3630-153	Cover plate for water tank
3630-158	Feed tank assembly
3630-163	Locking bar assembly, upper
3630-164	Locking bar assembly, lower
3630-191	Door assembly
3630-195	Door, lock / handle assembly
3630-208	Wire shelf
3630-308	Bracket for drip tray
3630-309	Drip tray
3631-108	Control box base
3808-104	Stainless steel basket, 650 x 510 x 60mm
3811-137	Steam outlet boss
3814-112	Terminal block
3833-368	Stainless steel tray, perforated
3850-112	20amp fuse carrier with fuse
3850-114	20amp fuse carrier with 4amp fuse
3850-120	Fuse carrier
3853-112	Plastic ball float
3860-200	Door seal
3864-107	Element, 3kW, 240 / 250v, AC
3864-179	Cut-out for 3kW immersion element
3879-105	Knob for energy regulator
3879-113	1 1/4" knob for lid handle
3882-101	Pilot lamp, snap-in, red
3887-101	Door magnet
3901-121	Relay
3905-327	Drain pipe, brass
3907-162	Energy regulator, w/o knob
3937-306	Float valve, HP bent arm
3937-310	3/4" ball valve
3937-340	1/8" ball valve
3939-105	Washers for element
3862-132	Neon, round push-in, red