



***GARLAND MODEL
680's CANADIAN MODEL***

PARTS LIST

Toll Free Phone, (US & Canada): (800) 427-6668

Toll Free Fax, (US & Canada): (800) 361-7745

<http://www.garland-group.com>




***GARLAND MODEL
680's CANADIAN MODEL***

Contents:

RESTAURANT RANGE OVENS MODELS E684 AND E686	Page 4
RESTAURANT RANGE TOP SECTIONS - MODELS E686 AND E684	Page 8

CANADIAN/EXPORT

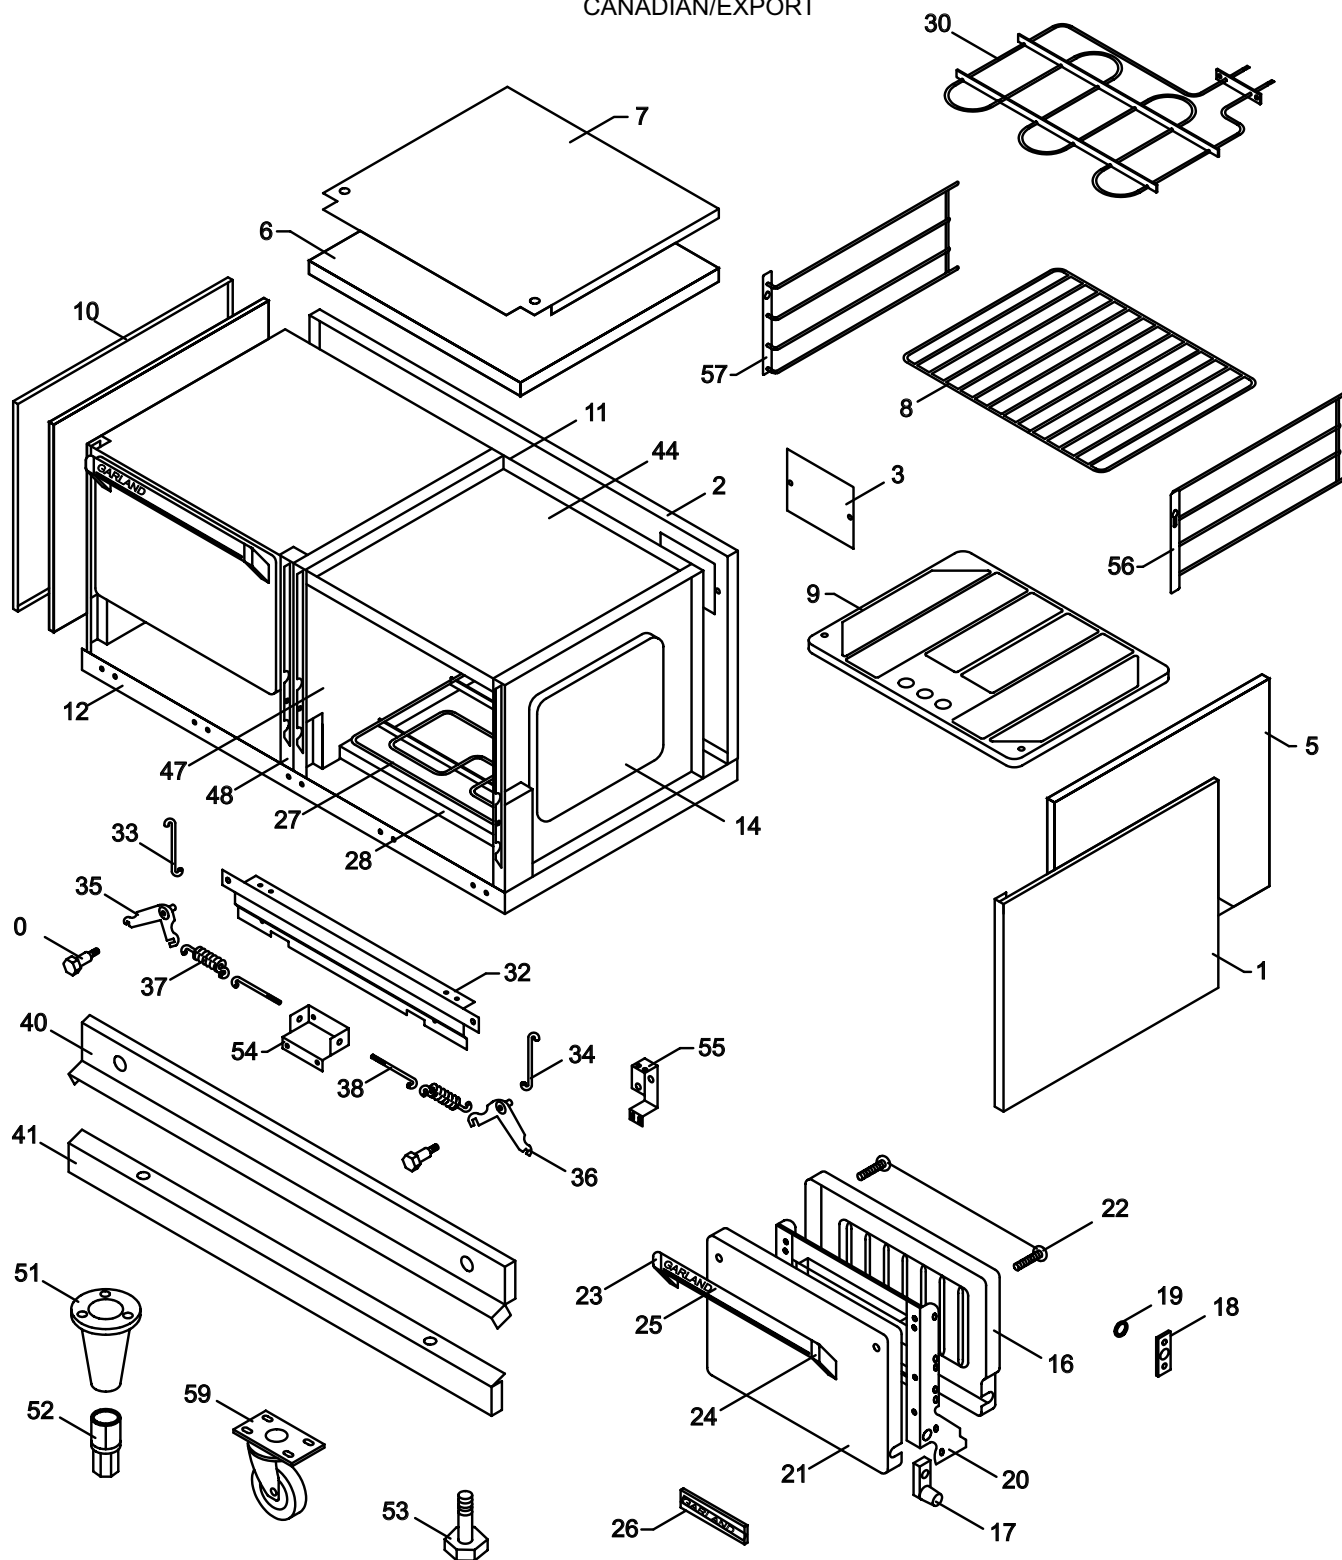

Oven Section.DWG
REV .0

GARLAND PARTS IDENTIFICATION

RESTAURANT RANGE OVENS MODELS E684 AND E686

ITEM	PART #	DESCRIPTION	MODEL	
			QTY	
			E684	E686
1	1081102	Body Side R/H H284/7	1	
	1081100	Body Side R/H		1
2	1527500	Wall Shield 684	1	
	1527502	Wall Shield 36"		1
3	G0676-1-7	Terminal Cover	1	1
4*	G01091-01-6	Oven Flue Riser Assembly	2	1
5	1472200	Side Insulation G280	4	2
6	1472300	Insulation 28 X 23 X 2 Top	4	2
7	1392200	Burner Box Bottom H284	2	
	1080915	Burner Box Bottom H286		1
8	2117000	Oven Rack Chrome	2	1
9	1438499	Oven Bottom - S680 Sunfire	2	1
		Used From Serial #19390		
	G0613-01-8	Oven Hearth Plate Assembly	2	1
		Used Up to Serial # 19389		
10	1081106	Body Side L/H H284/7	1	
	1081107	Body Side L/H		1
11	2063400	Main Back	1	
	2063500	Main Back		1
12	1361901	Main Bottom H284	1	
	1361902	Main Bottom H286		1
13*	G1869-1-7	Insulation Bottom	2	1
14	1080584	Oven Side Liner Assembly LT Enam	2	1
15*	1364200	Main Back Stiffener	2	2
16	1439796	Oven Door Lining Enamelled	2	1
17	1082500	Oven Door Trunion	4	2
18	1083001	Trunion Support	4	2
19	1082700	Harness Ring 7GA. #0911N070800	4	2
20	G03984-03-8	Oven Door Insert Assembly	2	1
21	1080714	Oven Door Panel - SS	2	1
22	1594300	1/4-20X1 1/4 HEX WSH RLL SCRW		
23	9003701	Handle L/H	2	1
24	9003700	Handle R/H	2	1
25	1589100	Extruded Handle Bar 24 3/8"	2	1
26	1902918	Nameplate - GARLAND 7 3/4	2	1
27	G01042-1	Element Lower 208V,4.1KW	2	1
		From Serial #11796		
	G01042-2	Element Lower 240V,4.1KW	2	1
		From Serial #11796		
	G1862A1	Element Lower Oven 208V	2	1
		Up to Serial #11795		
	G1862A2	Element Lower Oven O/S 240V	2	1
		Up to Serial #11795		
* NOT ILLUSTRATED				
RECOMMENDED STOCK PARTS				

GARLAND PARTS IDENTIFICATION

RESTAURANT RANGE OVENS MODELS E684 AND E686


ITEM	PART #	DESCRIPTION	MODEL	
			QTY	
			E684	E686
28	2063300	Oven Bottom Lining	2	1
29*	F302	Element Hold Down Clip	12	6
30	G01043-1	Element Upper 208V,750W	2	1
		From Serial #11796		
	G01043-2	Element Upper 240V,750W	2	1
		From Serial #11796		
	G1863A1	Element Upper Oven 208V	2	1
		Up to Serial #11795		
	G1863A2	Element Upper Oven 240V	2	1
		Up to Serial #11795		
31*	G1314-1-6	Element Bus Bar	4	2
32	1528800	Front Frame Lower Support	2	1
		From 1988		
	1082001	Lower Front Plate	2	1
		Up to 1988		
33	1082803	Oven Door Hinge Link LT	2	1
34	1082802	Oven Door Hinge Link RT	2	1
35	1082198	L/H Bell Crank Assembly	2	1
36	1082199	R/H Bell Crank Assembly	2	1
37	1005800	Door Spring	4	2
38	9004701	Oven Door Spring Hook	4	2
39*	1528800	Front Frame Lower Support	2	1
40	1374007	Kick Panel Upper 60"	1	
		From 1988		
	1374003	Kick Panel Upper S/S 30"		1
		From 1988		
41	1374113	Kick Panel Lower	1	
		From 1988		
	1374111	Kick Panel Lower - 30"		1
		From 1988		
	G6077-1-9	Lower Front Panel	2	1
		Up to 1988 (One Piece)		
42*	1374500	Upper Kick Panel Support Bracket	2	2
43*	1373900	Lower Kick Panel Support	2	2
44	1005295	Oven top Liner GCE H286	2	1
45*	2063200	Oven Back Lining GCE	2	1
46*	G2207-1-6	Oven Bottom Filler	4	2
47	1080585	Oven Side Liner Assembly RT Eanm	2	1
48	1730297	Front Frame Assy H284	2	
	1730397	Front Frame Assembly H286		1
49*	1081505	Centre Column	1	
50*	1361812	Bottom Channel - H284	2	
	1361810	Bottom Channel - H286		2
51	1027600	Leg Retainer 6" (Std.)	4	4
	2093800	Leg Retainer 4" (Opt.)	4	4
52	1150502	Bullet Legs	4	4
53	F445	Leg Screw #14BX5/8"Hex Washer HD Zinc	12	12
* NOT ILLUSTRATED				
RECOMMENDED STOCK PARTS				

GARLAND PARTS IDENTIFICATION

RESTAURANT RANGE OVENS MODELS E684 AND E686

ITEM	PART #	DESCRIPTION	MODEL	
			QTY	
			E684	E686
54	2301300	Door Spring Support	2	1
55	1386100	Bell Crank Support	4	1
56	2297700	Oven Rack Slide Assy RH	2	2
57	2297701	Oven Rack Slide Assy LH	2	2
58	1027800	Swivel Caster Less Brake	2	2
	1027801	Swivel Caster C/W Brake	2	2
* NOT ILLUSTRATED				
RECOMMENDED STOCK PARTS				

CANADIANEXPORT

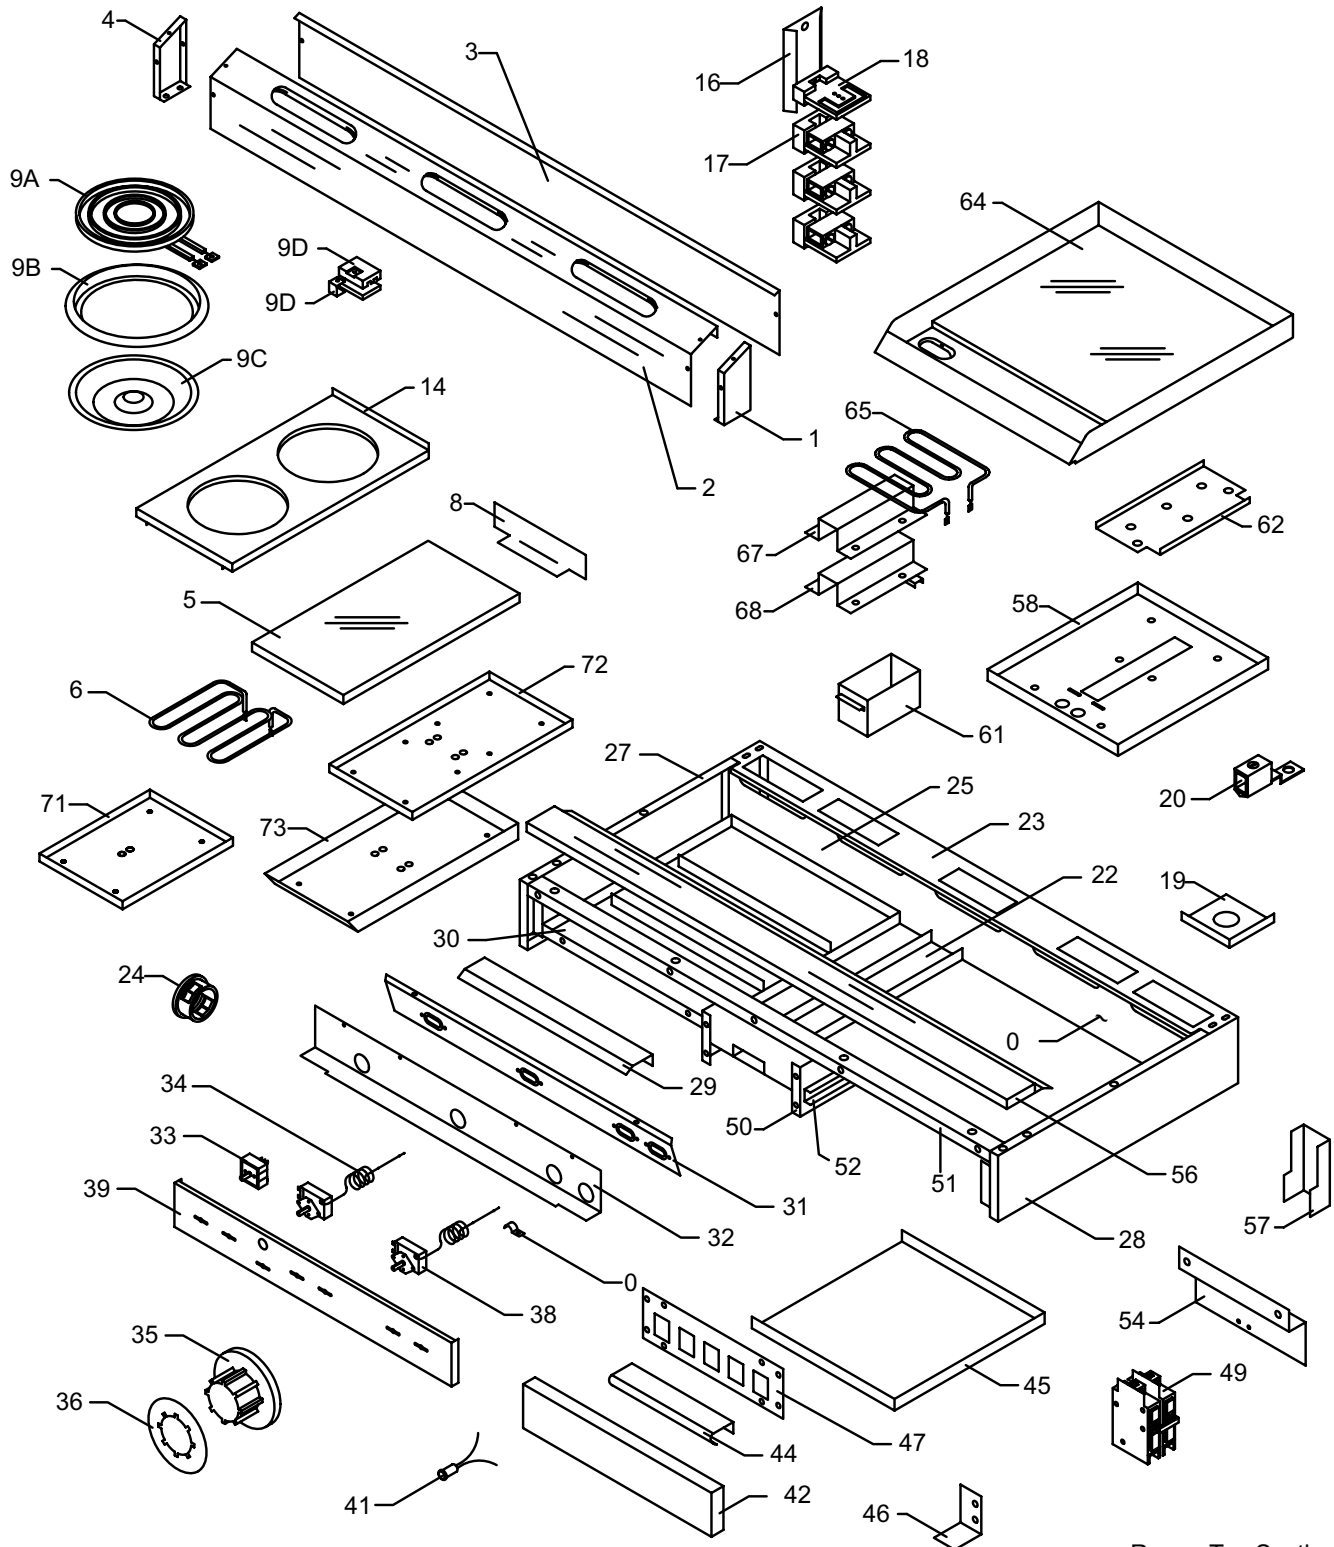

Range Top Section.DWG

GARLAND PARTS IDENTIFICATION

RESTAURANT RANGE TOP SECTIONS - MODELS E686 AND E684

ITEM	PART #	DESCRIPTION	MODEL						
			QTY						
			684	686	HOT/TOP PER SECTION	GRIDDLE SECTN			12" OPEN TOPS PER SECTION
			12"	24"	36"				
1	G2595-1-91	Backguard Bracket R/H	1	1					
2	G0399-1-9	Backguard Front	1			1	1	1	
		Specify Model							
	G0400-1-9	Backguard Front		1		1	1	1	
		Specify Model							
3	G2597-60-7	Backguard Back Standard	1						
	G2597-36-7	Backguard Back Standard		1					
4	G2595-1-92	Backguard Bracket L/H	1	1					
5	G03277-01-8	Hot Top Assembly			1				
		Used From Serial # 32004							
	G0424-01-8	Hot Plate Assembly			1				
		Up to serial # 32003							
6	G03237-1	Element 208V-1675 Watts							
		From Serial # 32004							
	G03237-2	Element 240V-1675 Watts							
		From Serial # 32004							
	1102103	Hot Top Element 208							
		Up to serial # 32003							
	1102104	Hot Top Element 240							
		Up to serial # 32003							
7	G0437-1-9	Element Clamp							
		Up to serial # 32003							
8	G0427-1-8	Back Hot Plate			1				
9A	2195000	8" Surface Element 208V (2.1Kw)							1
	2195001	8" Surface Element 240V (2.1Kw)							
9B	2602399	8" Ring Assembly							1
9C	2195300	8" Pan Reflector							1
9D	2195800	Split Terminal Block (Small)							1
9E	2627700	Terminal Block Clip							2
10A	2195100	6 1/2" Surface Element 208V							1
	2195101	6 1/2" Surface Element 240V							
10B	2602499	6 1/2" Ring Assembly							
10C	2195200	Reflector Pans 6 1/2"							1
14	G0414-1-9	Insert Top 2 Hole	1	1					
	G1865-01-9	Insert Top Assembly 4 Hole	1	1					
	G1864-01-9	Insert Top Assembly 6 Hole	1	1					
15	G01280-3-7	Terminal Block Channel 3 LUG Domestic		1	1				
17	G01268-1	Terminal Block #824 Export		1	1				
18	G01268-2	Terminal Block End #830							
19	G0636-1-7	Cable Anchor	1						
	G0636-2-7	Cable Anchor		1					
20	G01499-1	Ground Terminal 105A Large SLU-70	1	1					
21	G01356-1-8	Terminal Guard		1					
	G01356-2-8	Terminal Guard	1						
	G01356-3-8	Terminal Guard	1						
* NOT ILLUSTRATED									
RECOMMENDED STOCK PARTS									

GARLAND PARTS IDENTIFICATION

RESTAURANT RANGE TOP SECTIONS - MODELS E686 AND E684

ITEM	PART #	DESCRIPTION	MODEL					
			QTY					
			684	686	HOT/TOP PER SECTION	GRIDDLE SECTN		
						12"	24"	36"
								12" OPEN TOPS PER SECTION
22	G0411-1-7	Wire Support	1	1				
23	G0402-60-7	Back Top 60"	1					
	G0401-36-7	Back Top 36"		1				
24	G01487-2	Heyco Bush. 13/8 X17/8 #2300	3	2				
25	G0410-1-7	Burner Box Back	1					
	G0409-1-7	Burner Box Back		1				
26*	G1893-1-7	Burner Box Side Baffle	2	2				
27	G6524-1-8	Burner Box Side	2	2				
28	G6524-1-9	Burner Box Side S/S	2	2				
29	1685301	Drip Tray Handle 23 15/16	2	1				
30	G1890-01-8	Drip Tray Assembly 24"	2	1				
31	G1895-01-7	Switch Guard Assembly	2	1				
32	G1891-01-7	Switch Guard Assembly	2	1				
33	G03185-2	Infinite Switch-240 Volt			2			2
34	G2674-1	Thermostat G1 150F TO 450F				1	2	3
35	G02716-1	Dial - (Universal) Small Shaft			2	1	2	3
36	G02725-4	Dial Insert (OFF/MIN/2-6/MAX)			2			2
	G02725-19	Dial Insert (OFF/100F/450F) Griddle F				1	2	3
	G02725-17	Dial Insert (OFF/150F/550F) Oven F	2	1				
	G02725-11	Dial Insert (OFF/40C/230C) Griddle Celsius				1	2	3
	G02725-9	Dial Insert (OFF/65C/290C) Oven Celsius	2	1				
37*	GF138	Capillary Bulb Clamp	4	2				
38	G0515-1	RAC4 Oven Control	2	1				
		Used Up to Ser.#11796						
	G0894-01	Oven Thermostat 150F TO 550F	2	1				
39*	G01092-?	Switch Panel (Specify Model)	1	1				
	G01096-?	Switch Panel (Specify Model)	1					
40*	G1555-1	Front I.D. Plate	1	1	1	1	1	1
41	G01296-2	Pilot Amber	2	1		1	2	3
42	G1883-02-9	Front Panel Assembly	1					
	G1883-01-9	Front Panel Assembly		1				
43*	G1851-1	Medallion	1	1				
44	1685305	Drip Tray Handle 10 1/8	1	1				
45	G1896-2-6	Drip Chute F/E680 Series	1	1				
46	G2038-1-6	Front Panel Bracket	1	1				
47	G1885-1-8	Circuit Breaker Cover	1					
	G1884-1-8	Circuit Breaker Cover		1				
48*	G2699-5-7	Circuit Breaker Clamp	2					
	G2699-4-7	Circuit Breaker Clamp		2				
49	G01771-1	Circuit Breaker 2 Pole 40 AMP (Domestic)	5	3				
	G01478-1	Circuit Breaker Export	5	3				
50	G1887-01-8	Circuit Breaker Box Assembly	1					
	G1886-01-8	Circuit Breaker Box Assembly		1				
51	1085100	Front Channel H284	1					
	1085000	Front Channel H286		1				
52	G1882-1-7	Drip Tray Slide	4	2				
53*	G1889-1-8	Front Top Channel Support	2	2				
54	G2068-1-6	Breaker Box Baffle	1	1				
55*	G01509-1-6	Grease Shield	1	1				
* NOT ILLUSTRATED								
RECOMMENDED STOCK PARTS								

GARLAND PARTS IDENTIFICATION

RESTAURANT RANGE TOP SECTIONS - MODELS E686 AND E684

ITEM	PART #	DESCRIPTION	MODEL					
			QTY					
			684	686	HOT/TOP PER SECTION	GRIDDLE SECTN		
						12"	24"	36"
								12" OPEN TOPS PER SECTION
55*	G0432-1-7	Terminal Block Guard	1	1				
56	G0405-60-9	Front Top	1					
	G0403-36-9	Front Top		1				
57	1414600	Burner Box Back Support	2	1				
58*	G03261-1-6	Element Cover						
		From Serial #31983						
	G2725-1-6	Element Cover					1	
		Used Up to Ser.#31982						
	G0420-1-6	Element Cover						1
		Used Up to Ser.#31982						
59*	G01585-1-6	Element Cover				1		
		Used Up to Ser.#31982						
	G2726-1-6	Element Baffle					1	
		Used Up to Ser.#31982						
	G0421-1-6	Element Baffle						1
		Used Up to Ser.#31982						
60*	G01586-1-6	Element Baffle				1		
		Used Up to Ser.#31982						
60*	CK21R-208	Convert 684 To 684-24G Kit 208				1	2	3
61	G01603-01-7	Grease Chute Assembly				1	1	1
62	G01884-1-6	Element Clamp						
		From Serial #31983						
	G1705-2-9	Element Clamp Long				2	4	6
		Used Up to Ser.#31982						
	G1858-1-9	Element Clamp				2	4	6
		Used Up to Ser.#31982						
64	G03262-012-8	Griddle Assembly 12" LH 680				1		
		Used From Ser.# 31983						
	G03263-024-8	Griddle Assembly					1	
		Used From Ser.# 31983						
	G03264-036-8	Griddle Assembly						1
		Used From Ser.# 31983						
	G01587-012-8	Griddle Assembly				1		
		Used Up to Ser.#31982						
	G2723-024-8	Griddle Assembly 24"					1	
		Used Up to Ser.#31982						
65	G0394-036-8	Griddle Assembly						1
		Used Up to Ser.#31982						
	G2724-208	Griddle Element						
		Use from Ser.# 5742 to 31982						
	G2724-240	Griddle Element						
		Use from Ser.# 5742 to 31982						
	G01816-1	Element 208V,3350W				1	2	3
		Used From 1983 (Ser.# 31983)						
	G01816-2	Element 240V,3350W				1	2	3
		Used From 1983 (Ser.# 31983)						
66*	G1713-1	Griddle Element 240V				1	2	3
		Used Up to Ser.# 31982						
67	G1713-2	Griddle Element 208V				1	2	3
		Used Up to Ser.# 31982						
68*	G01884-1-6	Element Clamp				2	4	6
		Used From Ser.# 31983						
69	G01849-1-6	Bulb Channel				1	2	3
		Used From Ser.# 31983						
70	G01851-01-6	Bulb Clamp Assembly				1	2	3
		Used From Ser.# 31983						
71*	G03270-1-7	Wire Guard	1	1				
		Used From Ser.# 31983						
72*	G03276-1-6	Element Clamp (680 H/T)			2			
73*	G03275-1-6	Element Baffle (680 H/T)			1			
74*	G03274-1-6	Element Cover (680 H/T)			1			
* NOT ILLUSTRATED								
RECOMMENDED STOCK PARTS								

 **GARLAND**