


Spare Parts List


DISHWASHER Washtech 750

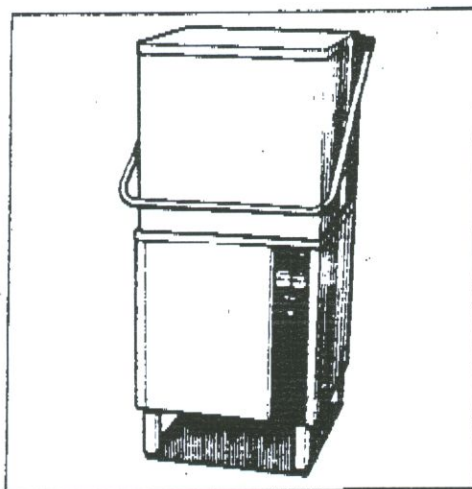

Prod.no.

97 60 03 26-01 1 * 50 240V

Sida Page	Innehåll	Contents
3	Huv	Hood
5	Spolsystem	Rinsing system
7	Stativ och plåtar	Base and panels
9	Pump och avlopp	Pump and drain
11	Eldetaljer	El details
13	Genomströmare	Booster heater

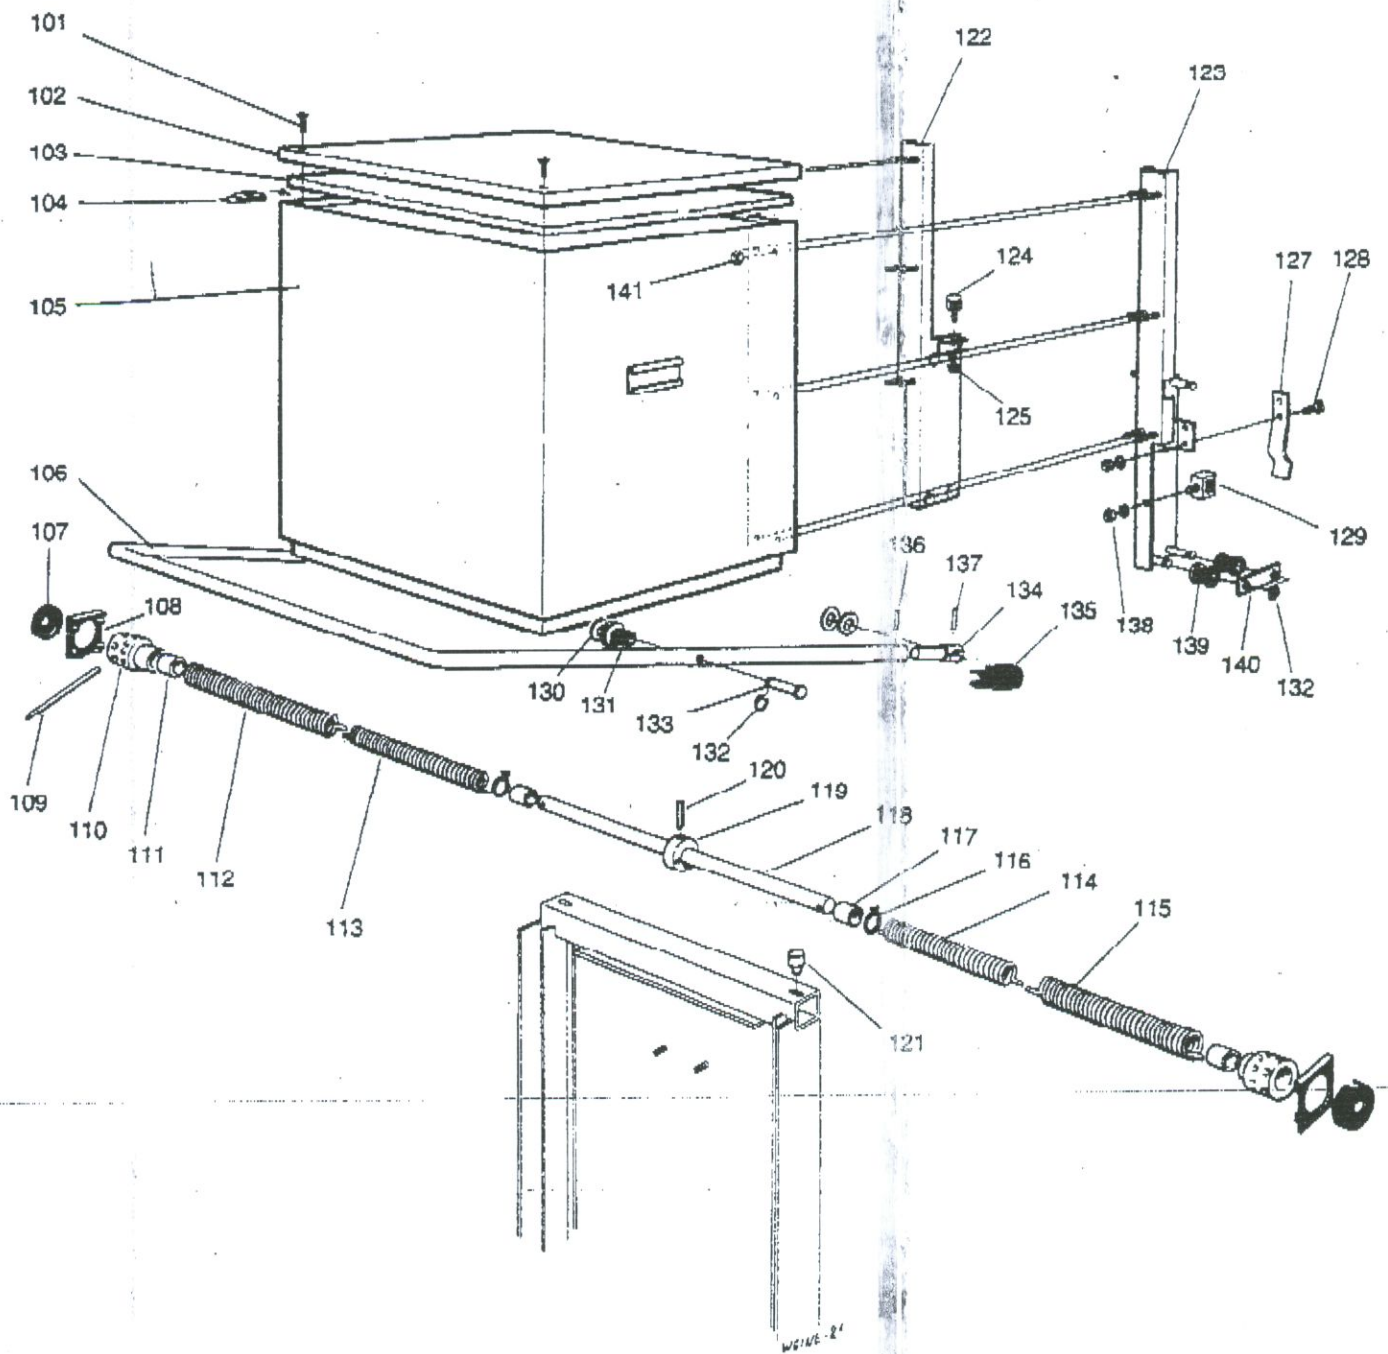

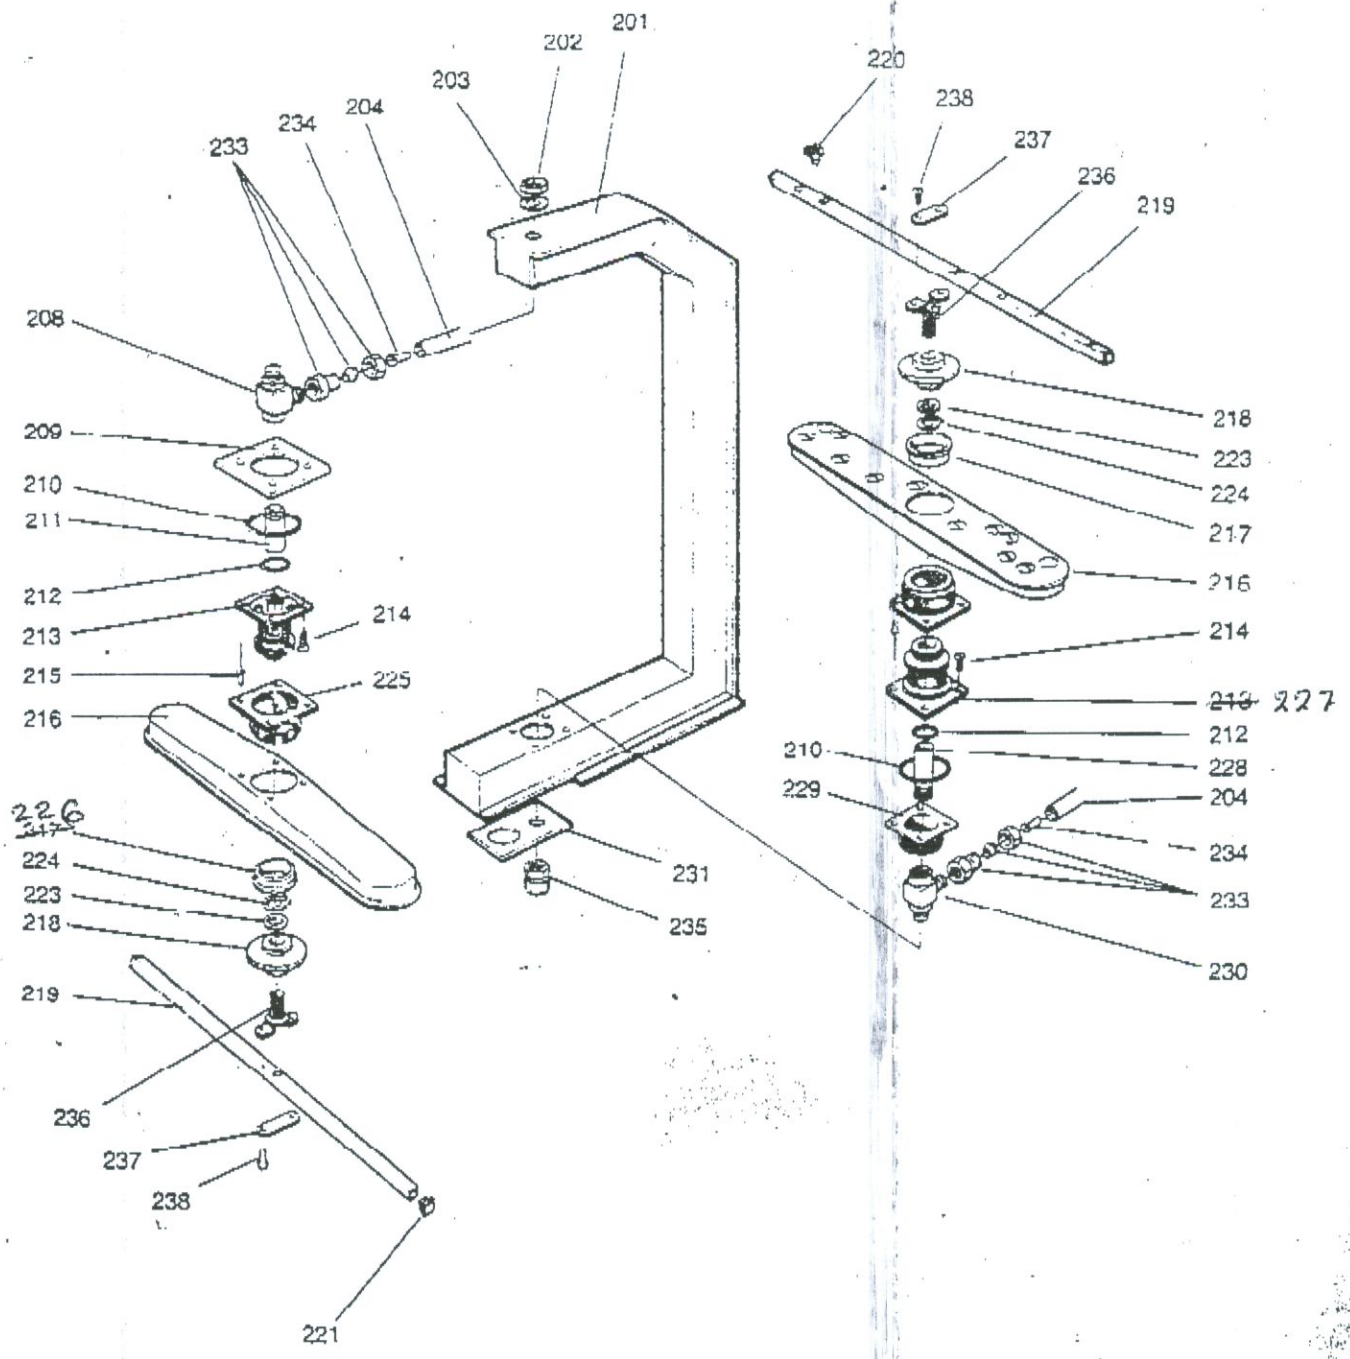


ILLUSTRATION 208 55

ID12

Reservdelists
Spare Parts List
Ersatzteilliste

No. 478 12 93-17 | 7:160 |

81
Side
Page
SeiteWashtech WT750
Spolssystem
Rinsing system
SpülsystemIllustration
20855Utgåva
Edition
Ausgabe
1Månad
Month
Monat
11År
Year
Jahr
88

Pos	Antal Quant. Anzahl	Art. nr Art. No. Teil Nr.	Benämning	Description	Benennung
201	1	476 06 90 00	Stamrör	Main pipe	Stammleitung
202	1	741 11 11 24 3/8	Rörmutter	Pipe nut	Rohrmutter R 3/8"
203	2	460 81 92 03	Packning	Gasket	Dichtung
204	1	475 79 25 24	Rör	Pipe	Rohr
208	1	475 82 58 02	T-koppling	T-connection	T-kupplung
209	1	475 82 46 00 5/8	Stänkskär	Splash shield	Spritzblech
210	2	740 44 16 00 5/8	O-ring	O-ring	O-ring
211	1	475 77 92 01	Rör	Pipe	Rohr
212	2	740 43 11 00 1/8	O-ring	O-ring	O-ring
213	2	477 61 79 01 1/4	Lagerbock	Attachement	Lagerbock
214	8	724 52 93 40 7/8	Skruv	Screw	Schraube MKFX 4*16
215	5	722 78 43 19 5/8	Popnit	Pop rivet	Popniete
216	2	476 00 85 01	Diskarm	Wash arm	Spülarm
217	2	475 78 04 00 1/2	Glidring	Slide ring	Gleitring
218	2	475 86 97 00 1/4	Slutspollager	Bearing	Lager
219	2	477 81 92 00	Spolarm	Rinse arm	Spülarm
220	10	464 21 45 00 7/8	Munstycke	Nozzle	Düse
221	4	475 77 99 00 7/8	Propp	Plug	Pfropfen
223	2	475 79 49 00 5/8	Bricka	Washer	Scheibe
224	2	735 31 14 07 3/8	Spärring	Retaining ring	Seegerring
225	2	475 78 02 00 1/2	Diskarmslager	Bearing, wash arm	Lager, Spülarm
228	1	475 77 92 00 1/4	Rör	Pipe	Rohr
229	1	482 01 48 00	Strypbricka	Reducing plate	Drosselscheibe
230	1	475 82 58 00	T-koppling	T-connection	T-kupplung
231	1	476 12 53 00	Stamrörspackning	Gasket	Dichtung
233	3	743 46 25 10	Rörkoppling	Pipe connection	Rohrschaltung
234	3	743 41 17 94 1/8	Stödhylsa	Sleeve	Stützhülse
236	2	477 72 25 00	Fäste	Holder	Halter
237	2	477 72 23 00	Propp	Plug	Pfropfen
238	4	729 52 89 90	Skruv	Screw	Schraube K 40*10

235 → E743462510

226 - E475780300 OK1054

Washtech WT750 Spolsystem Rinsing system Spülsystem				Illustration 20855		Utgåva Edition Ausgabe 1		Månad Month Monat 11		År Year Jahr 88	
Pos	Antal Quant. Anzahl	Art. nr Art. No. Teil Nr.	Benämning	Description	Benennung						
201	1	476 06 90 00	Stamrör	Main pipe	Stammleitung						
202	1	741 11 11 24 3/8	Rörmutter	Pipe nut	Röhrmutter	R 3/8"					
203	2	460 81 92 03	Packning	Gasket	Dischtung						
204	1	475 79 25 24	Rör	Pipe	Rohr						
208	1	475 82 58 02	T-koppling	T-connection	T-kupplung						
209	1	475 82 46 00 5/8	Stänkplåt	Splash shield	Spritzblech						
210	2	740 44 16 00 5/8	O-ring	O-ring	O-ring						
211	1	475 77 92 01	Rör	Pipe	Rohr						
212	2	740 43 11 00 1/8	O-ring	O-ring	O-ring						
213	2	477 61 79 01 1/4	Lagerbock	Attachement	Lagerbock						
214	8	724 52 93 40 7/8	Skruv	Screw	Schraube	MKFX 4*16					
215	5	722 78 43 19 5/8	Popnit	Pop rivet	Popniete						
216	2	476 00 85 01	Diskarm	Wash arm	Spülarm						
217	2	475 78 04 00 1/2	Glidring	Slide ring	Gleitring						
218	2	475 86 97 00 1/2	Slutspollager	Bearing	Lager						
219	2	477 81 92 00	Spolarm	Rinse arm	Spülarm						
220	10	464 21 45 00 1/2	Munstycke	Nozzle	Düse						
221	4	475 77 99 00 1/4	Propp	Plug	Pfropfen						
223	2	475 79 49 00 1/2	Bricka	Washer	Scheibe						
224	2	735 31 14 07 7/8	Spärring	Retaining ring	Seegerring						
225	2	475 78 02 00 1/2	Diskarmalager	Bearing, wash arm	Lager, Spülarm						
228	1	475 77 92 00 1/2	Rör	Pipe	Rohr						
229	1	482 01 48 00	Stryppbricka	Reducing plate	Drosselscheibe						
230	1	475 82 58 00	T-koppling	T-connection	T-kupplung						
231	1	476 12 53 00	Stamrörspackning	Gasket	Dichtung						
233	3	743 46 25 10	Rörkoppling	Pipe connection	Rohrschaltung						
234	3	743 41 17 94 1/8	Stödhylsa	Sleeve	Stützhülse						
236	2	477 72 25 00	Fäste	Holder	Halter						
237	2	477 72 23 00	Propp	Plug	Pfropfen						
238	4	729 52 89 90	Skruv	Screw	Schraube	K 40*10					

Waghtech HT750
Stativ och plåtar
Base and panels
Gestell und Blech

Illustration
20838


Utgåva
Edition
Ausgabe
1

Månad
Month
Monat
11


År
Year
Jahr
88

Pos	Antal Quant. Anzahl	Art. nr Art. No. Teil Nr.	Benämning	Description	Benennung
301	1	478 09 81 00	Gejdskena	Guide bar	Aufleiderscheine
302	5	735 11 46 40	Bricka	Washer	Scheibe
303	5	731 23 14 40	Mutter	Nut	Mutter
304	1	475 78 11 007	Gejdram	Guide frame	Aufleiterahmen
305	2	57 03 98 06	Packning	Gasket	Dichtung
306	2	734 49 17 40	Bricka BRB 6,5x16	Washer	Scheibe
307	2	735 11 53 40	Bricka FBB 6,1	Washer	Scheibe
308	2	732 31 18 40	Mutter MHM6	Nut	Mutter
309	-	-	Ryggsplåt	Rear panel	Rückblech
310	-	-	Isolering	Insulate	Isolierung
311	1	476 08 27 02	Tank	Tank	Tank
312	-	-	Dämpskiva	Insulate	Isolierung
313	-	-	Snabblåsmutter	Quick locking nut	Schnappschlossmutter
314	-	-	Skruv	Screw	Schraube
315	1	475 76 51 015	Sida, höger	Side panel, right	Seitenblech, Rechts
316	1	724 53 35 40 1/2	Skruv MKFX 5x30	Screw	Schrauben
317	1	733 61 14 01 1/7	Korgmutter	Nut	Mutter
318	4	476 01 25 00 7/7	Ben	Leg	Bein
319	4	475 75 54 00	Fot	Foot	Fuss
320	1	476 08 67 00	Frontplåt	Front panel	Vorderblech
321	-	-	Dämpmatta	Insulate	Isolierung
322	1	475 76 51 00 7/7	Sida, vänster	Side panel, left	Seitenblech, Links
323	-	-	Dämpmatta	Insulate	Isolierung
324	-	-	Dämpare	Insulate	Isolierung
325	2	476 08 57 01	Rörgejd	Pipe guide	Rohraufleiter
326	2	476 08 48 00 1/4	Bromsklack	Brake block	Bremsenase
327	1	477 97 39 00			
328	2	725 23 66 40	Skruv M6S 6x12	Screw	Schraube
329	2	481 66 64 00	Stänkskärm	Splash panel	Spitzblech

Prod. no.
97 60 03 26
97 60 03 29

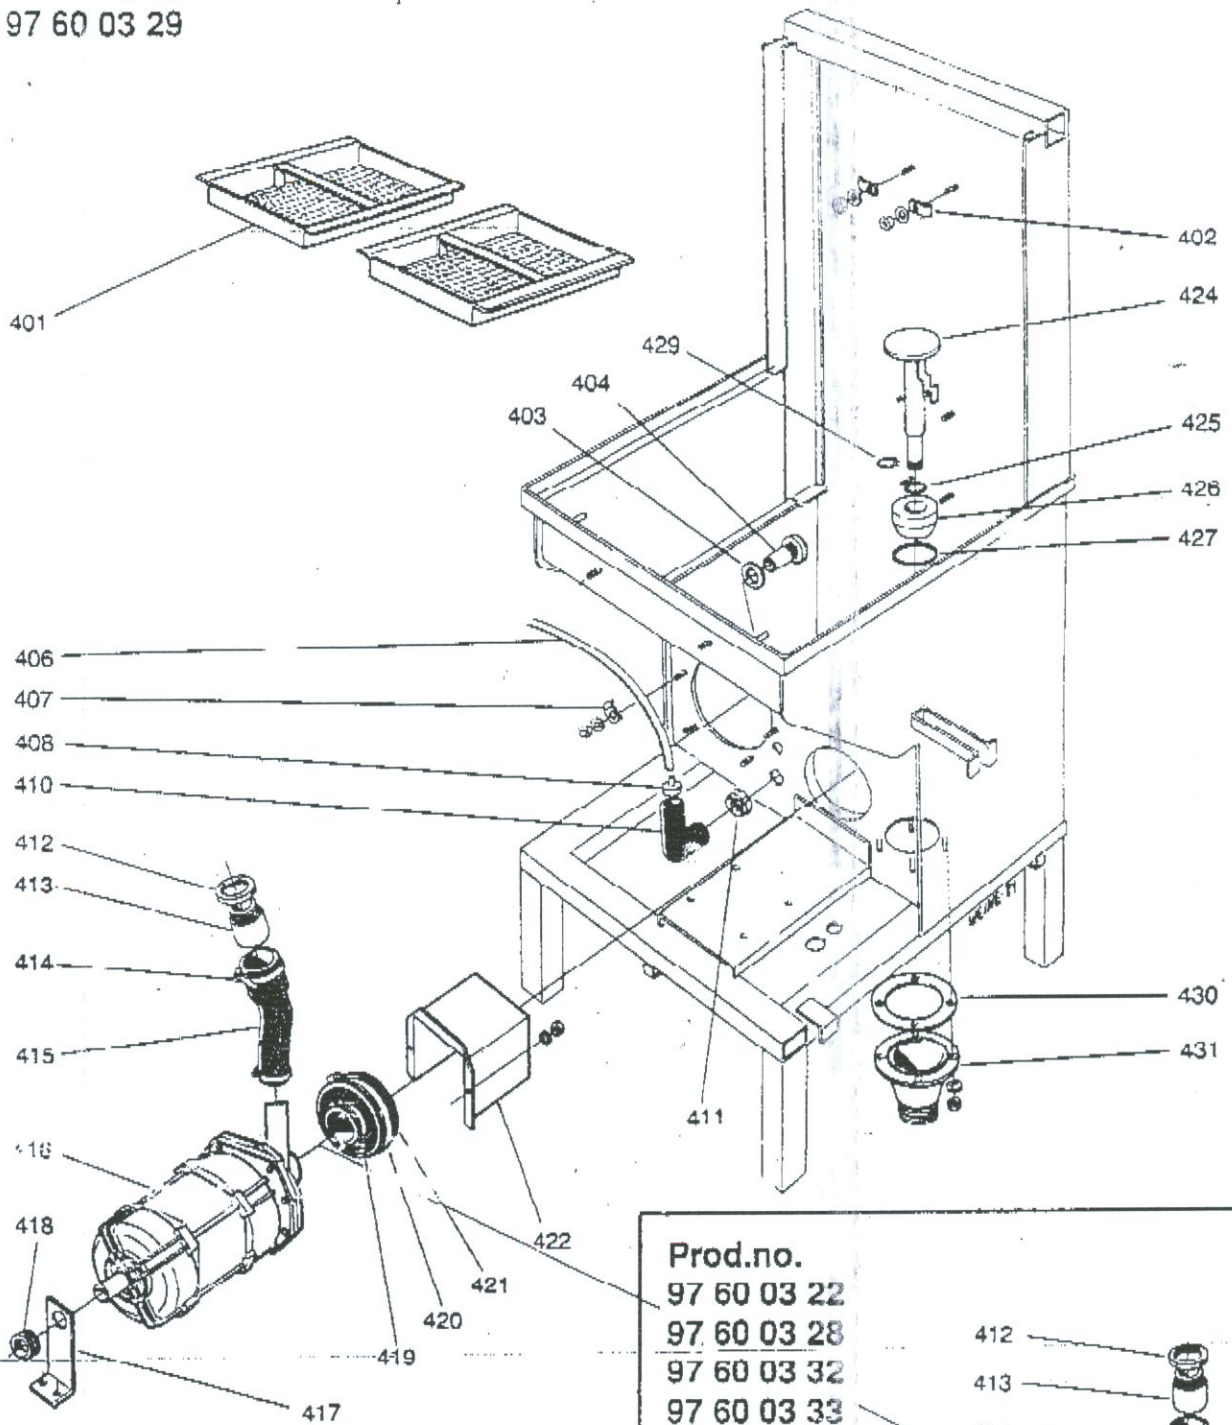

Prod.no.
97 60 03 22
97 60 03 28
97 60 03 32
97 60 03 33
97 60 03 34

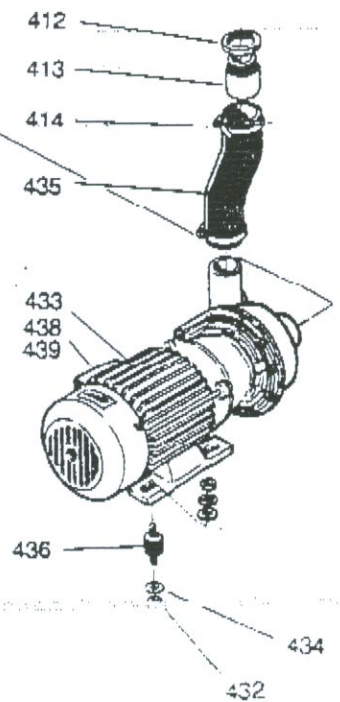


PCB
GE/477628002

ILLUSTRATION 209 03

Dishwasher
Pump och avlopp
Pump and drain
Pumpe und AblaufIllustration
20903Utgåva
Edition
Ausgabe
3Månad
Month
Monat
11År
Year
Jahr
91

Pos	Antal Quant. Anzahl	Art. nr Art. No. Teil Nr.	Benämning	Description	Benennung
401	2	475 77 87-00	Sillåda	Strainer box	Siebkasten
402	6	475 77 79-00	Klämbricka	Clamp	Klemme
403	1	471 24 40-10	Packning	Gasket	Dichtung
404	1	476 13 08-00	Nippel	Nipple	Nippel
406	1	87 75 25-102	Slang 0,6	Hose	Schlauch
407	6	475 77 91-00	Klämbricka	Clamp	Klemme
408	1	11 06 80-00	Lock	Cover	Deckel
410	1	11 06 82-00	Luftklocka	Level tube	Standschlauch
411	1	471 24 40-15	Mutter	Nut	Mutter
412	1	741 11 18-24	Rörmutter	Pipe nut	Rohrmutter
413	1	476 12 57-00	Stamrörsnippel	Nipple	Nippel
414	2	736 28 40-51	Slangklämma	Hose clamp	Schlauchklemme
415	1	482 01 7200	Tryckslang	Press hose	Druckschlauch
416	1	482 13 2200	Pump	Pump	Pumpe
417	1	481 95 0600	Kontaktblock	Pressure device	Drückvorrichtung
418	1	552 20 1800	Pumpvinkel	Angular	Winkelstück
419	1	736 28 3451	Genomföring	Inlet	Durchführung
420	1	736 28 55-90	Slangklämma	Hose clamp	Schlauchklemme
421	1	481 94 7200	Sugstos	Sucting hose	Saugstutzen
422	1	476 14 73-00	Suglåda	Cover	Saugkasten
424	1	475 77 80-00	Bräddavloppsrör	Overflow pipe	Überlaufrohr
425	1	740 44 08-14	O-ring	O-ring	O-ring
426	1	475 77 83-00	Avloppstätning	Drain sealing	Ablaufdichtung
427	1	475 81 24-02	O-ring	O-ring	O-ring
429	1	735 31 30-07	Spärring	Retaining ring	Seegerring
430	1	477 73 94-00	Packning	Gasket	Dichtung
431	1	475 77 8406	Avloppsrör	Drain connection	Ablaufstutzen
432	8	731 23 18 40	Mutter M6M8	Nut M6M8	Mutter M6M8
433	1	477 60 6001	Pump	Pump	Pumpe
434	8	734 11 6409	Bricka BRB	Washer	Scheibe
435	1	476 06 7000	Tryckslang	Press hose	Druckschlauch
436	4	463 97 7801	Dämpare	Absorber	Dämpfer
438	1	476 12 1201	Isolerbricka	Washer	Scheibe
439	1	552 20 3500	Övergångsmuff	Reducing muff	Reduktionsmuffe


* Art.nummer ej specificerade på denna sida, se sida 26-28
 * Art.number not specified on this page, see page 26-28
 * Art.nummer auf diese Seite nicht aufgeführt, siehe Seite 26-28

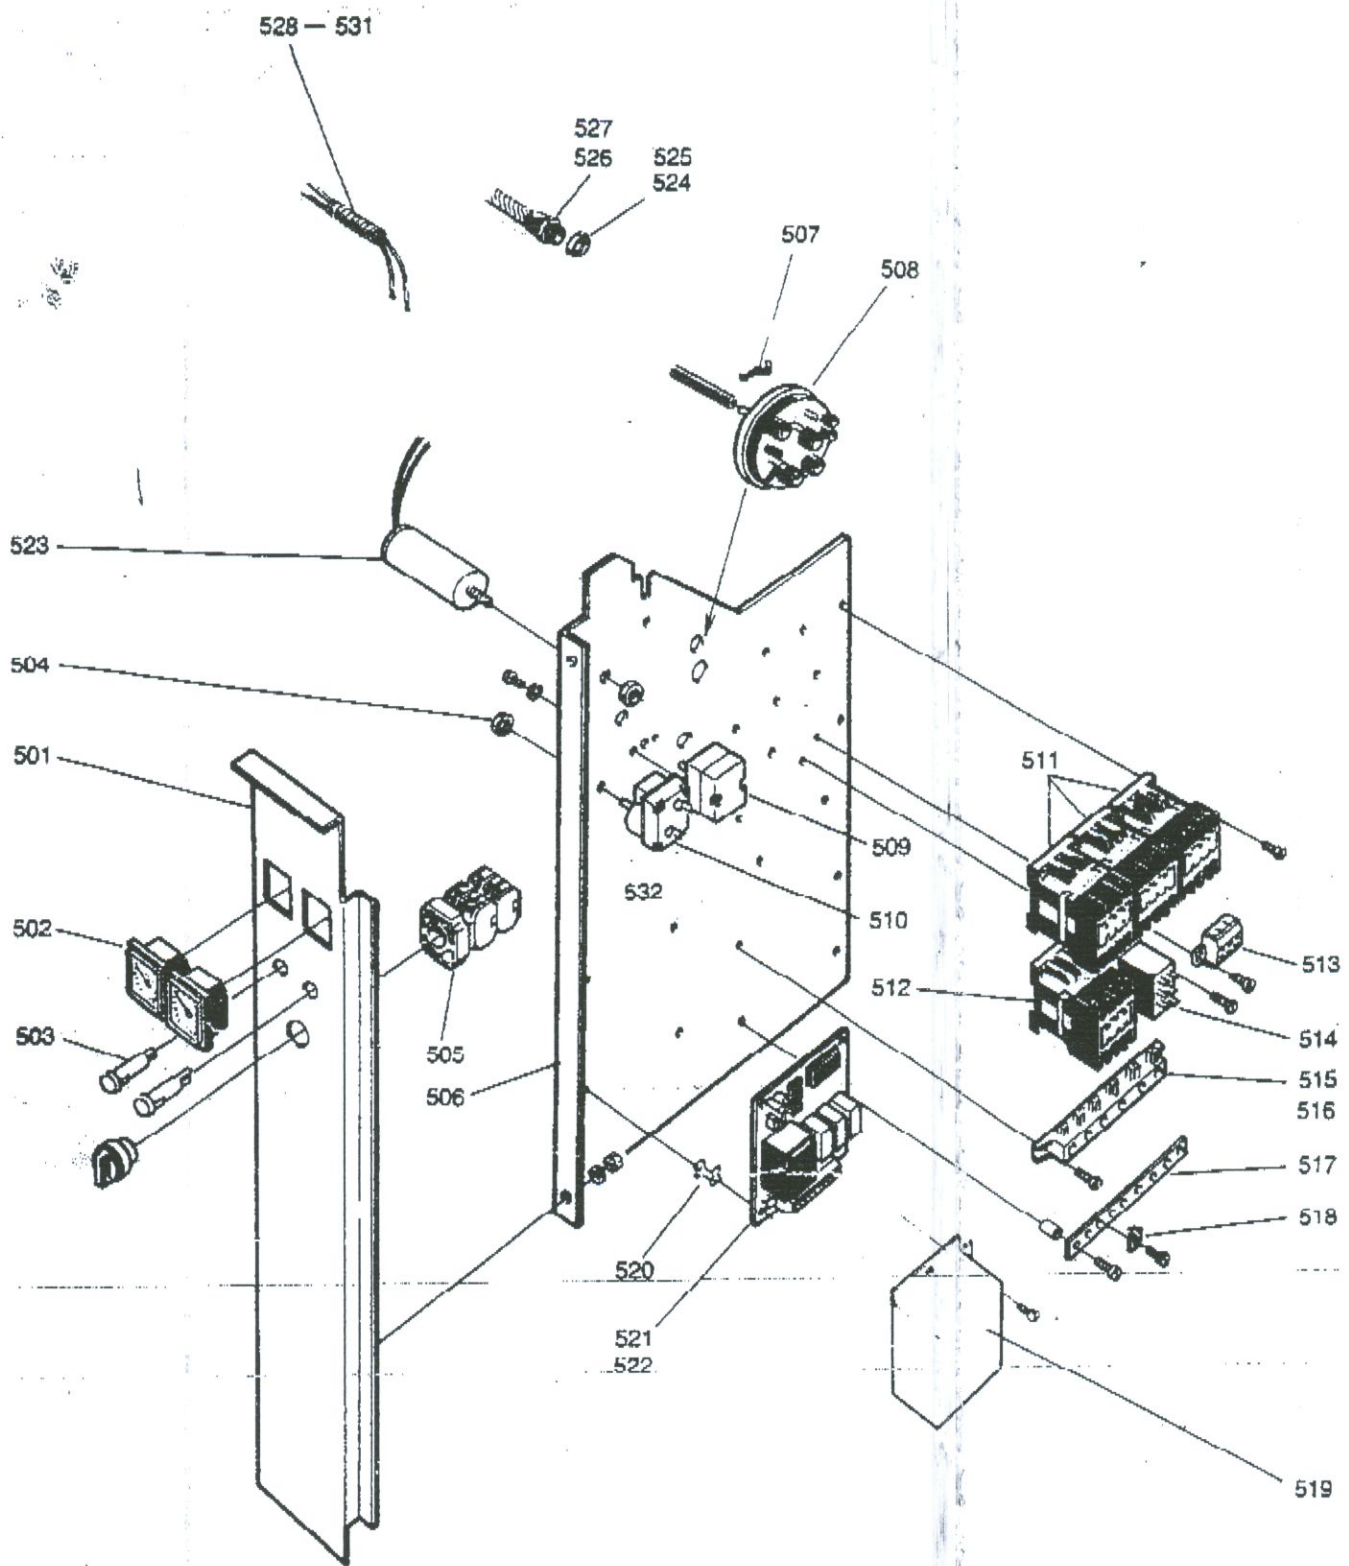


Washtech WT750
El. detaljer
El. details
El. KomponentenIllustration
20857Utgåva
Edition
Ausgabe
1Månad
Month
Monat
11Ar
Yea
Jah
88

Pos	Antal Quant. Anzahl	Art. nr Art. No. Teil Nr.	Benämning	Description	Benennung
501	1	481 95 19 70	Panel	Decorating plate	Zierblech
502	2	481 84 00 01	Termometer	Thermometer	Thermometer
503	2	763 10 01 02/6	Lampa	Lamp	Lampe
504	1	14 01 81 05/8	Mutter	Nut	Mutter
505	1	475 76 50 00/9	Strömställare	Switch	Schalter
506	1	477 60 44 00	Kopplingsplåt	El panel	El blech
507	1	476 10 98 10	Läsfjäder	Clamp	Klemme
508	1	476 10 98 02	Nivåbrytare	Level switch	Standswitch
509	1	475 77 04 00/4	Termostad	Thermostat	Thermostat
510	1	467660805/4	Överh. skydd	Overh. protect	Überhitzungsschutz
511	3	767 51 12 09/3	Boosterkontaktor	Contacto	Kontaktor
512	1	767 51 02 09	Motorkontaktor	Contacto	Kontaktor
513	1	477 93 70 03	Koppl. plint	Terminal block	Klemmenbrett
514	1	471 96 36 03	Relä	Relay	Relais
515	1	481 60 13 00/4	Koppl. plint	Terminal block	Klemmenbrett
516	3	481 60 13 01	Bygel	Clamp	Bügel
517	1	464 14 41 05	Jordskena	Earth rail	Erdschneine
518	4	464 17 46 00	Överfall	Clamp	Klemme
519	1	477 97 38 00	Skyddskåpa	Protective cover	Schutzhaube
520	4	475 79 54 00	Distans	Distance	Distanz
521	1	477 62 80 22	Kretskort	PCB	Schaltkarte
522	1		Säkring	Fuse	Sicherung
523	1	763 75 09 45/1	Kondensator	Condenser	Kondensator
524	2	762 11 08 55	Mutter Pr 15,2	Nut	Mutter
525	1	762 11 09 55	Mutter Pr 18,6	Nut	Mutter
526	2	475 79 88 01	Muff Pr 15,2	Sleeve	Stutzen
527	1	475 79 88 02	Muff Pr 18,6	Sleeve	Stutzen
528	1	475 81 09 02	Slang 15,2x600	Hose	Schlauch
529	1	475 81 09 02	Slang 15,2x600	Hose	Schlauch
530	1	475 81 09 02	Slang 15,2x600	Hose	Schaluch
531	1	477 62 43 01	Slang 18,6x650	Hose	Schlauch
532	1	477 62 69 00	Monteringsknapp	Mount. button	Montageknopf
532	1	464 04 21 00	Jordmarke	Earth mark	Erdemarkierung
542	2	762 71 01 05	Koppl. plint	Terminal block	Klemmenbrett

Remaining pages

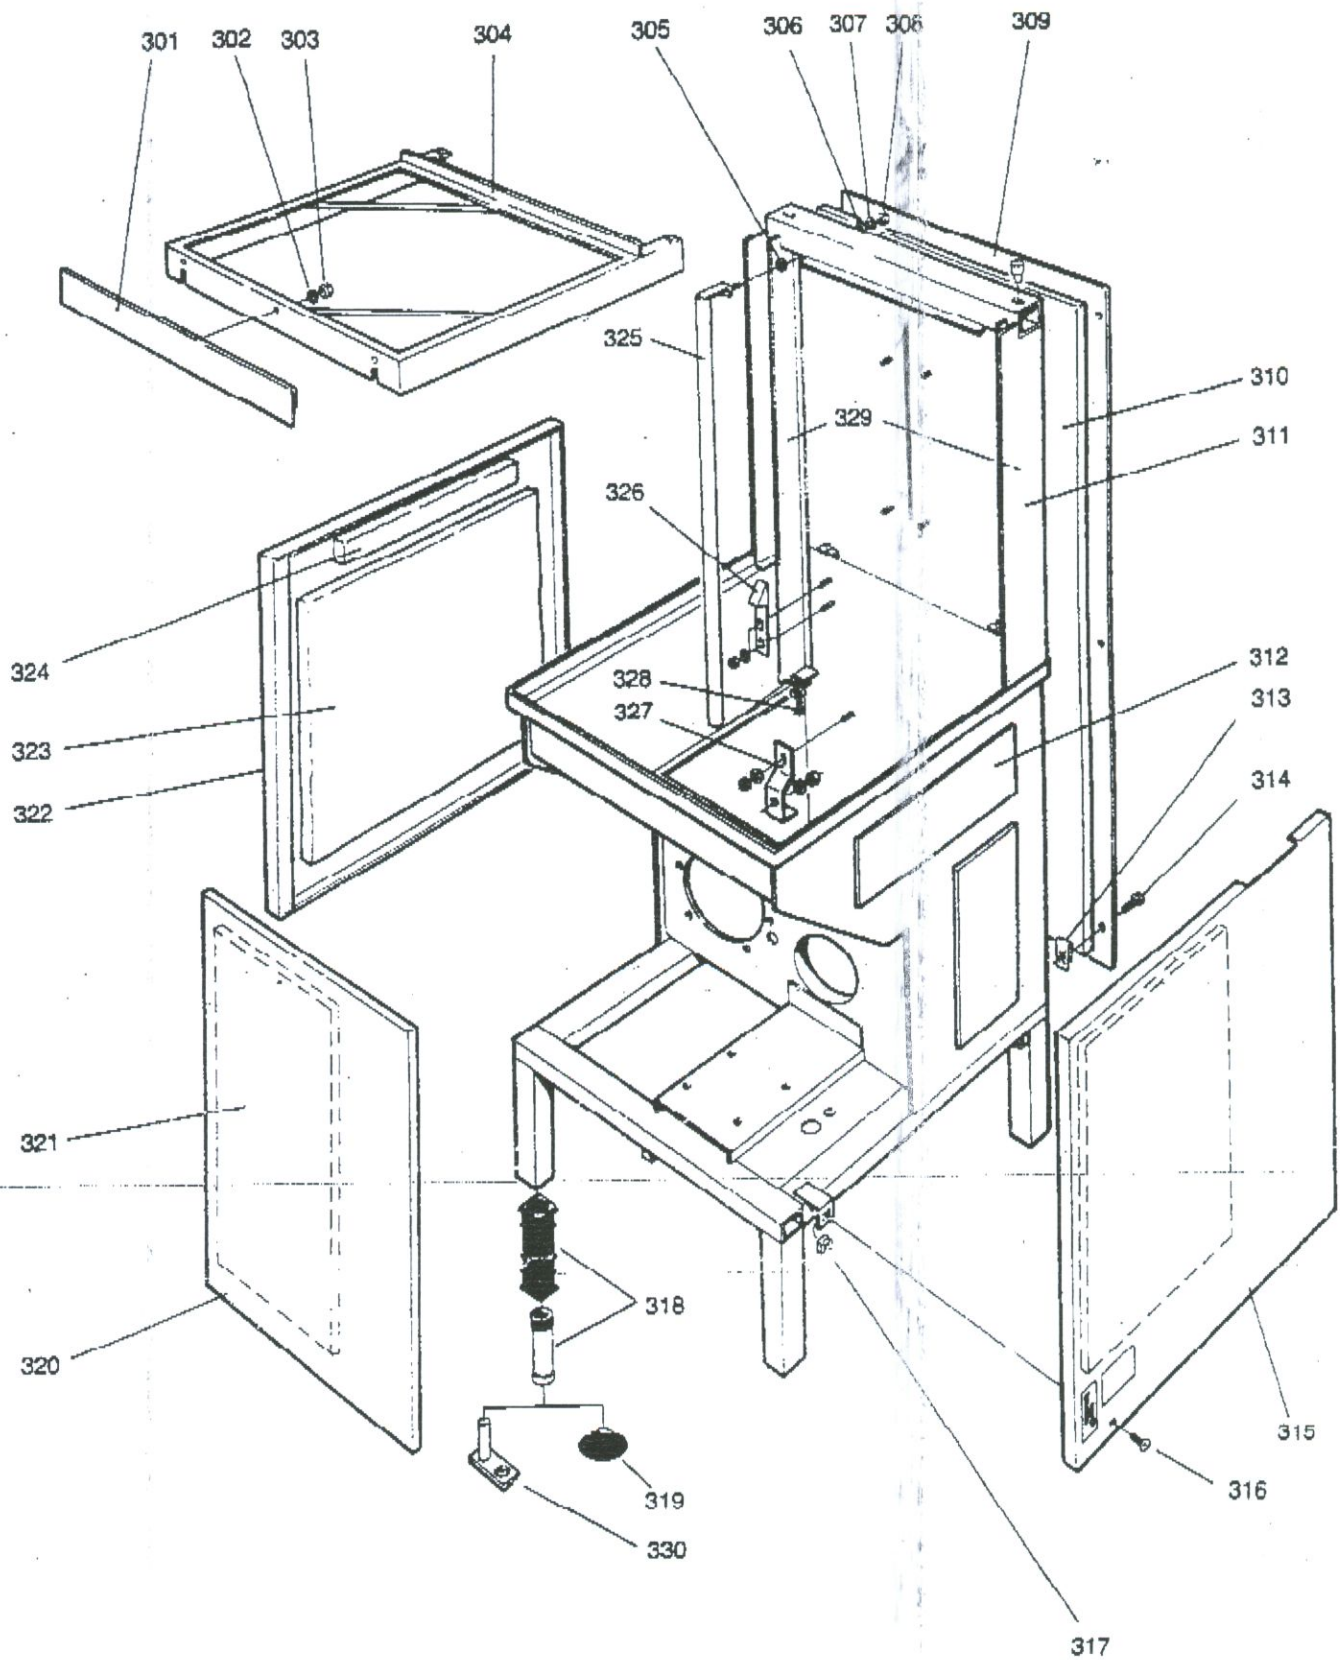

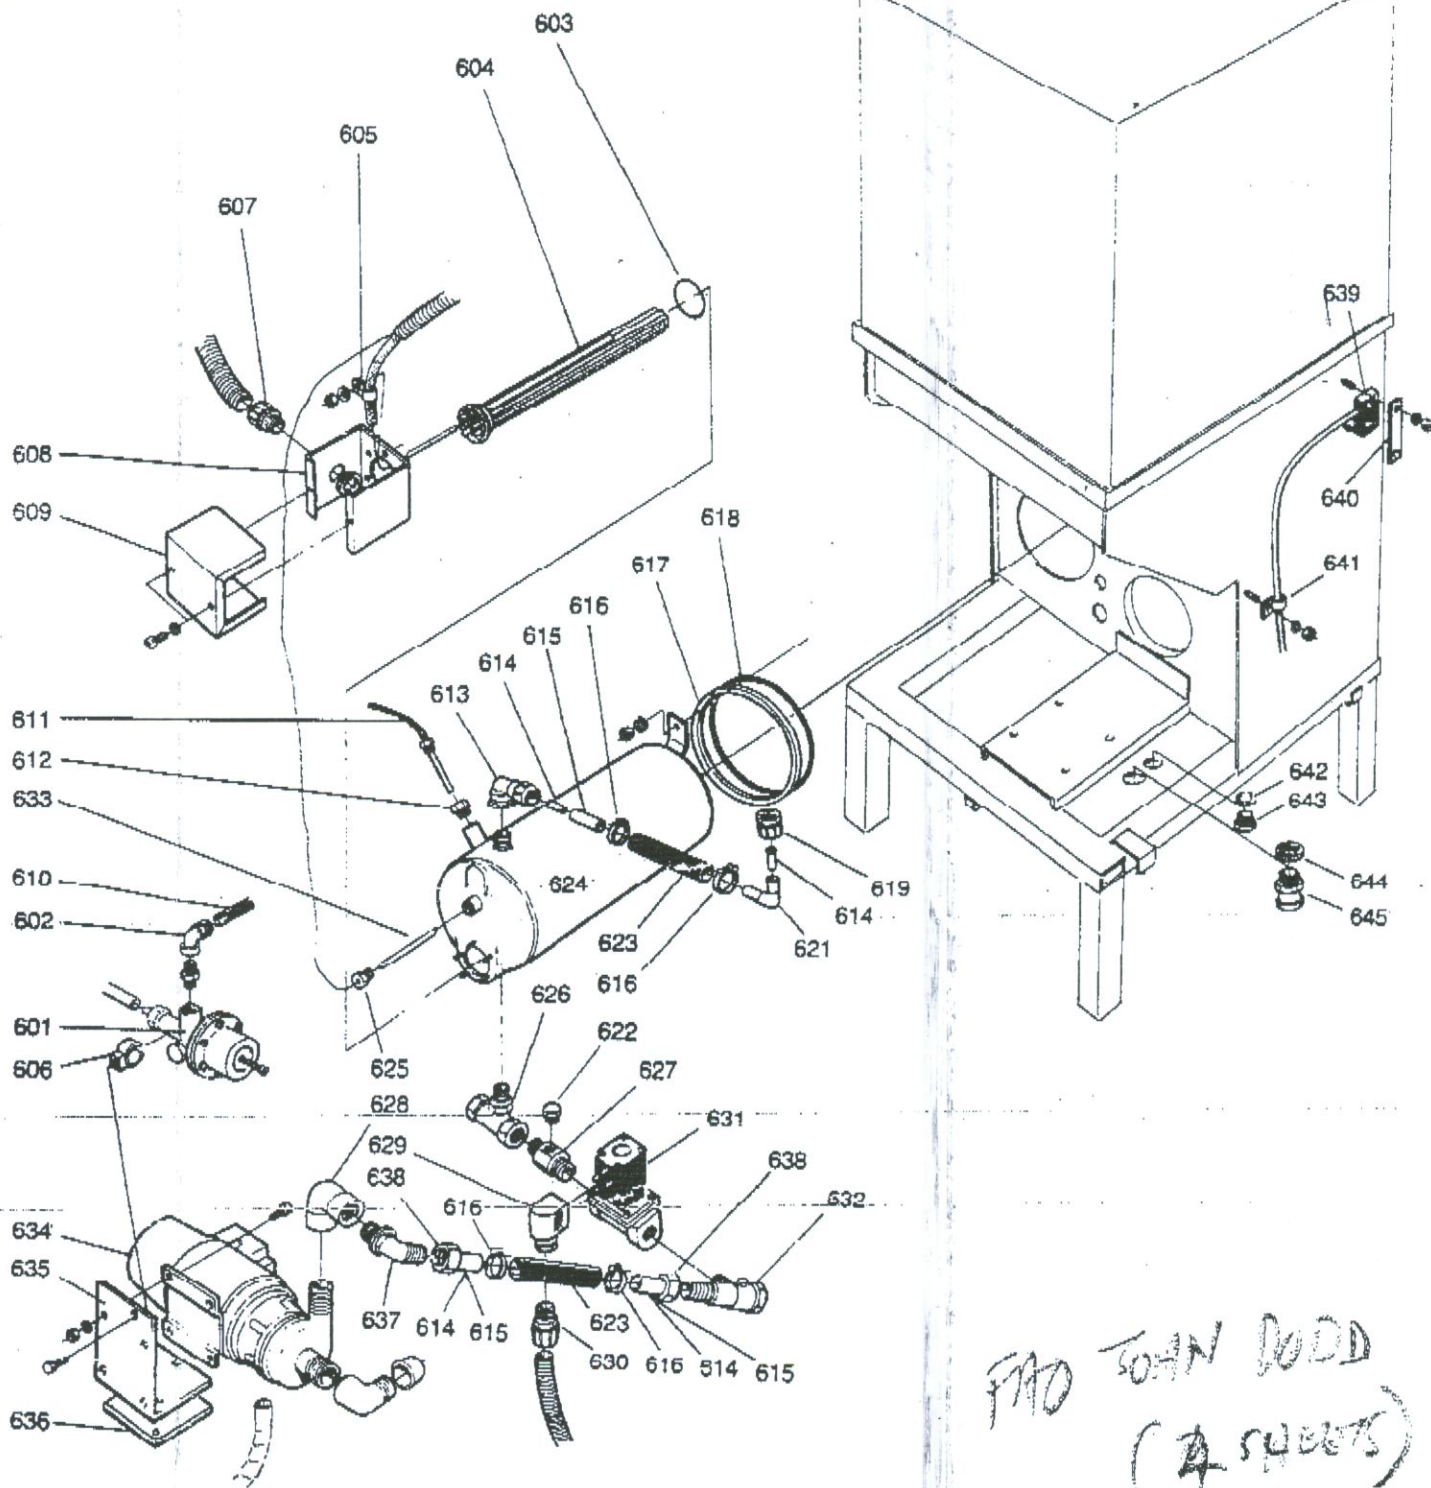

FRO JOHN DODD
(4 SHEETS)

Washtech WT750
Genomströmmare
Booster heater
DurchlaufhitzerIllustration
20858Utgåva
Edition
Ausgabe
1Månad
Month
Monat
11År
Year
Jahr
88

Pos	Antal Quant. Anzahl	Art. nr Art. No. Teil Nr.	Benämning	Description	Benennung
601	1	478 04 47 00	Torkmedelsinjektor	Drying agent injec.	Trockenmittelinjektor
602	1	481 61 19 05	Rörkoppling	Pipe connection	Rohranschluss
603	1	740 48 31 05/3	O-ring	O-ring	O-ring
604	1	481 86 31 00/5	Element	Heating element	Heizkörper
605	1	462 47 98 01	Kabelklämma	Cable clamp	Kabelklemme
606	1	475 76 32 30	Rörhållare	Pipe holder	Rohrhalterung
607	1	87 75 49 100	Muff	Sleeve	Stutze
608	1	481 94 35 30	Kåpa	Casing	Haube
609	1	481 94 36 00	Lock	Cover	Deckel
610	1	481 75 33 00/5	Injektorslang	Tube	Schlauch
611	1	481 84 00 01	Termometer	Thermometer	Thermometer
612	1	481 84 00 10	Förskruvning	Fiddle	Verschraubung
613	1	743 41 35 30	Koppling 74346350	Pipe connection	Rohranschluss
614	3	743 41 23 94/4	Stödhylsa	Supporting sleeve	Stützhülse
615	3	464 04 97 24	Rör	Pipe	Rohr
616	4	736 28 19 51	Slangklämma	Hose clip	Schlauchschele
617	1	475 77 90 30/3	Tryckring	Press ring	Druckring
618	1	475 81 39 01/0	O-ring	O-ring	O-ring
619	1	743 46 25 10/5	Rörkoppling	Pipe connection	Rohranschluss
621	2	481 95 10 00	Rörböj	Pipe bend	Rohrkrümmer
622	1	741 52 09 24	Propp	Plug	Pfropfen
623	2	481 93 44 03	Slang	Tube	Schlauch
624	1	478 94 58 00	Panna	Boiler	Kessel
625	1	478 04 46 00/3	Förskruvning	Fiddle	Verschraubung
626	1	460 81 61 02/4	Radiatorkoppling	Radiator connect.	Radiatoranschluss
627	1	481 68 76 00	Anslutningsrör	Connection pipe	Anschlussrohr
628	1	742 11 15 21	Rörvinkel	Angular tube element	Rohrwinkelstück
629	1	463 97 00 00	Kabelhuvud	Cable casing	Kabelhaube
630	1	87 75 49 101	Muff	Sleeve	Stutze
631	1	478 00 00 02	Magnetventil	Solenoid valve	Magnetventil
632	1	481 66 67 00	Smutsfilter	Dirt filter	Smutzfilter
633	1	740 43 03 14/6	O-ring	O-ring	O-ring
634	1	481 86 30 00	Tryckstegr.pump	Booster pump	Drucksteig.pumpe
635	1	481 97 66 00	Pumpkonsol	Pump base	Pumpenhalter
636	1	481 97 78 00	Dämpmatta	Absorber	Dämpfer
637	1	743 46 45 25/0	V-koppling	Joint	Kupplung
638	1	478 05 08 00	Klämringsmutter	Nut	Mutter
639	1	476 06 64 00/5	Magnetbrytare	Magnetic switch	Magnetausschalter
640	1	476 08 50 00	Överfall	Clamp	Klemme
641	1	462 13 06 02	Kabelklämma	Clamp	Klemme
642	3	762 11 09 55	Mutter	Nut	Mutter
643	3	63 63 23 02	Propp	Plug	Pfropfen
644	1	762 11 12 55	Mutter	Nut	Mutter
645	1	762 21 12 06	Hylsa	Sleeve	Hülse
	1	478 00 00 10	Spole	Coil	Spole 50-60 200-215V
	1	478 00 00 11/5	Spole	Coil	Spole 50-60 220-50 2
	1	478 00 00 20/6	Rd-sats 1)	Spare parts kit 1)	Reparatursatz 1)

478 04 10 26 (BOOSTER) PUMP IMPELLOR

1) Sats bestående av:

Membran
Magnetkärna
Fjäder
O-ring

1) Set consisting of:

Diaphragm
Magnetic core
Spring
O-ring

1) Set bestehend aus:

Membran
Magnetkern
Feder
O-RingPr 18,6
Pr 18,6

Dishwasher
Genomströmmare
Booster heater
Durchlaufrhitzer

Prod.no.
97 60 03 26
97 60 03 29

Illustration
20939

Utgåva
Edition
Ausgaben

Månad
Month
Monat
12

År
Year
Jahr
91

Pos	Antal Quant. Antahl	Art. nr Art. No. Teil Nr.	Benämning	Description	Benennung
601	1	482 29 34-00	Torkmedelsinjektor	Drying agent injec.	Truckenmittelinjektor
603	1	740 48 31-05	O-ring	O-ring	O-ring
604	1	481 86 31-00	Element	Heating element	Heizkörper
605	1	462 47 98-01	Kabelklämma	Cable clamp	Kabelklammer
607	1	87 75 49-100	Muff	Sleeve	Stutze
608	1	481 94 35-00	Kåpa	Casing	Haube
609	1	481 94 36-00	Lock	Cover	Deckel
610	1	481 75 33-00	Injektorslang	Tube	Schlauch
611	1	481 84 00-00	Termometer	Thermometer	Thermometer
612	1	481 84 00-10	Förskruvning	Fiddle	Verschraubung
613	1	743 41 35-30	Koppling	Pipe connection	Rohranschluss
614	2	743 41 23-94	Stödhylsa	Supporting sleeve	Stützhülse
615	3	464 04 97-24	Rör	Pipe	Rohr
616	4	736 28 19-51	Slangklämma	Hose clip	Schlauchschnelle
617	1	475 77 90-00	Tryckring	Press ring	Druckring
618	1	482 14 89-00	Flänspackning	Gasket	Dichtung
619	1	743 41 25-10	Rörkoppling	Pipe connection	Rohranschluss
620	1	741 52 11-24	Propp	Plug	Pfropfen
621	2	481 95 10-00	Rörböj	Pipe bend	Rohrbügel
622	2	741 52 09-24	Propp 2 30 ①x	Plug	Pfropfen
623	2	481 93 44-02	Slang	Tube	Schlauch
624	1	482 14 27-00	Panna	Boiler	Kessel
625	1	478 04 46-00	Förskruvning	Fiddle	Verschraubung
626	1	460 81 61-02	Radiatorkoppling	Radiator connect.	Radiatoranschluss
627	1	481 68 76-00	Anslutningsrör	Connection pipe	Anschlussrohr
629	1	463 97 00-00	Kabelhuvud	Cable casing	Kabelhülle
630	1	87 75 49-101	Muff	Sleeve	Stutze
631	1	482 00 00-02	Magnetventil	Solenoid valve	Magnetventil
633	1	740 43 03-14	O-ring	O-ring	O-ring
639	1	476 06 64-00	Magnetbrytare	Magnetic switch	Magnetausschalter
640	1	476 08 50-00	Överfall	Clamp	Klemme
641	1	462 13 06-02	Kabelklämma	Clamp	Klemme
642	3	762 11 09-55	Mutter	Nut	Mutter
643	3	63 63 23-02	Propp	Plug	Pfropfen
644	1	762 11 12-55	Mutter	Nut	Mutter
645	1	762 21 12-06	Hylsa	Sleeve	Hülse
646	1	481 60 69-10	Slangkoppling 6-82	Hose coupling	Schlauchkupplung
647	1	477 52 43-01	Skyddsslang 18.6	Tube	Schlauch
648	2	460 92 81-02	Vinkelkoppling 16.15	Angular joint	Winkelkupplung
649	1	742 11 13-24	Rörkoppling	Pipe connection	Rohranschluss
649	1	741 31 13-20	Nippel	Nipple	Nippel
670	1	741 31 19-24	Nippel	Nipple	Nippel
672	1	741 38 20-24	Nippel 13.28 X	Nipple	Nippel
673	1	744 31 15-06	Smutsfilter	Dirt filter	Smutsfilter
674	1	476 09 99-00	Anslutningsrör	Connection pipe	Anschlussrohr
676	1	481 67 56-00	Pumpfäste 130.95 X	Pump base	Pumpenhalter
677	1	482 12 84-00	Tryckstegringspump	Booster pump	Drucksteigerungspumpe

* Art. nummer ej specificerade på denna sida, se sida 26-28
 * Art. nummer not specified on this page, see page 26-28
 * Art. nummer auf dieser Seite nicht aufgeführt, siehe Seite 26-28

SK65 KIT

IF-261

WT750

FITTING INSTRUCTIONS

Fitting to the Washtech 1000

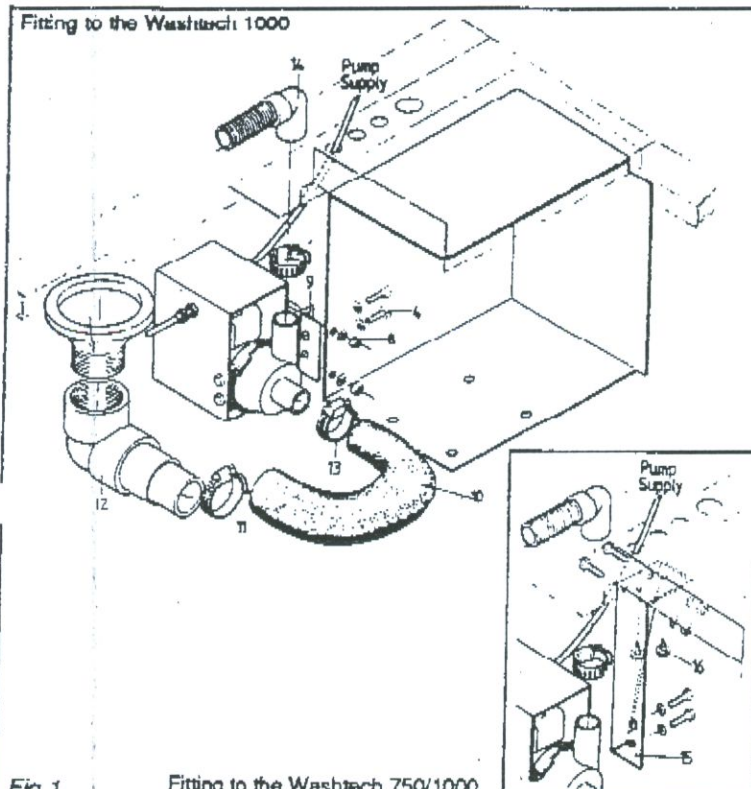


Fig 1

Fitting to the Washtech 750/1000

Item	Part No	Description	Qty
1	6162558000	Pump (From Pump Kit)	1
2	DW34387	Pump Cover	1
3	51297/01	Cable Gland	1
4	3706/12WA	Screw M6 x 12 Lg Pan Hd	6
5	50360/01	Cable 3 Core 1mm ²	1 Mt
6	50345/14	Lock Ring	1
7	6506WA	Washers Single Coll M6	6
8	5006WA	Nut Hex M6	2
9	DV17244	Bracket (R/Pump Brkt is Fitted)	1
10		180° Hose (Pump Kit)	1
11	3025437	Jubilee Clip	1
12	DW28351	Drain Outlet Assembly	1
13		Jubilee Clip (Pump Kit)	2
14		Outlet Hose (Pump Kit)	1
15	DW28352	Bracket (R/Pump Brkt Not Fitted)	1
16	50281/16	Screw Self-Tapping Pan Hd No 10	2
17	50796/02	Carrier Fuse	1
18	50797/01	Fuse 2A	1
19	51116/03	Timer Mechanical	1
20	6004WA	Washer Plain M4	6
21	3704/10WA	Screws M4 x 10 Lg Pan Hd	2
22	5003ZB	Nut M3 Hex Full	1
23	3703/10ZB	Screw M3 x 10 Lg Pan Hd	1

Operation

If the pump is fixed and connected as instructed it will drain the machine automatically under normal operation. When the stand pipe is removed the 3 minute timer will also drain down the machine. It is important to note that the amount of water left in the machine after the 'drain down' cycle finishes, is related to the height of the drain out point and will be back fall water only. The height of the pump has been satisfactorily tested to approximately $\frac{1}{4}$ of the height of the machine.

Fixing the Pump

The kit is made for the Washtech 1000 or 750 with or without Rinse Booster Pump Holding Bracket. The pump should be placed into its protective stainless-steel case having passed the cable through the stuffing gland and crimped terminals fitted such that:

Brown wire	-	Insulated terminal
Blue wire	-	Uninsulated terminal
Yellow/Green Wire	-	Uninsulated terminal

The brown and the blue may be interchanged, but it is essential that the yellow/green (Earth) is connected to the spade terminal on the pump stator (Motor Earth) (Fig 2). Two M6 pins and washers should be used to fix the cover around the body of the pump on the left hand side only, when the pump inlet faces you. Screw on the $1\frac{1}{2}$ " right angled bend to the white plastic outlet of the machine, using sealing compound as required. Leave the right angled bend parallel to the back of the machine with the outlet facing left as seen from the front. Place the large end of the 180° rubber hose onto the outlet of the right angled bend with a jubilee clip left loose. The pump should be arranged so that the outlet is pointing to the 12 o'clock position looking at the front of the pump. Fix the appropriate bracket (7 cm when the rinse pump bracket is fitted and the 20 cm bracket when the timed pump bracket is not used) to the remaining two screw holes on the drain pump with M6 pins and washers. With a jubilee clip in place, secure the smaller end of the 180° hose onto the pump inlet and tighten both jubilee clips.

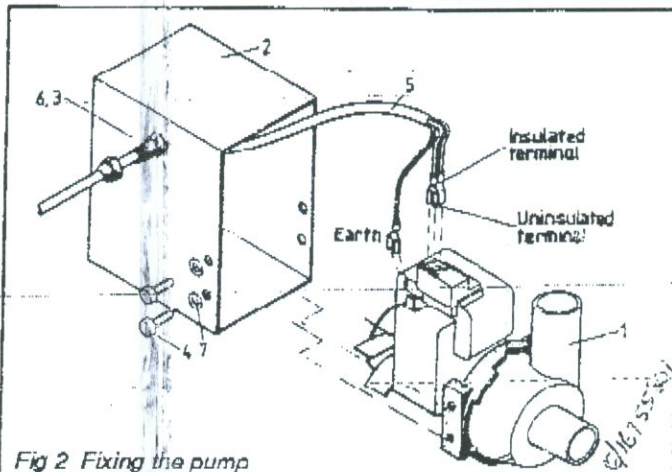


Fig 2 Fixing the pump

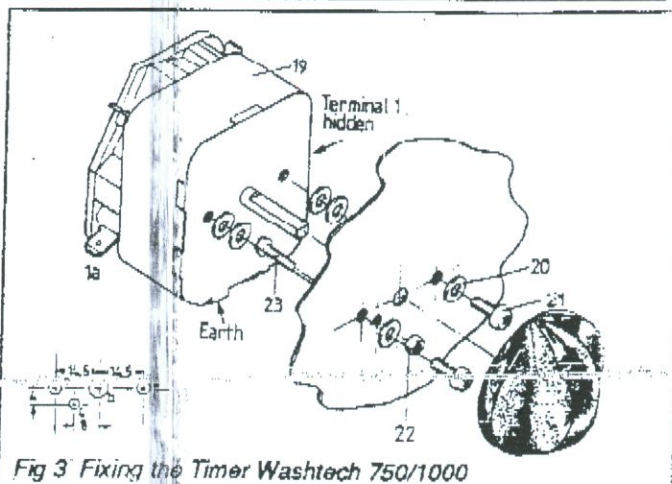


Fig 3 Fixing the Timer Washtech 750/1000

Washtech WT750

Huv
Hood
Haube

Illustration
20116

Utgåva
Edition
Ausgabe
1

Månad
Month
Monat
11

Pos	Antal Quant. Anzahl	Art. nr Art. No. Teil Nr.	Benämning	Description	Benennung
101	2	729 73 42 40	Skruv	Screw	Schraube
102	1	482 00 57 00	Tak	Top	Dach
103	1	482 00 55 00	Isolering	Insulation	Isolierung
104	2	733 78 20 08	Snabblåsmutter	Lock nut	Schnappschlossmutter
105	1	476 05 24 00	Huv	Hood	Haube
106	1	476 06 99 00	Lyftbygel	Raising arm	Hebebügel
107	2	476 08 15 00	Lock	Cover	Deckel
108	2	477 63 36 00	Tryckbrickor	Press washer	Druckscheibe
		476 06 36 00	Täckplåt	Cover plate	Deckblech
109	1	476 11 29 00	Justerstång	Adjusting rod	Einstellungsstange
110	2	477 62 75 00	Justernav	Adjusting nave	Einstellungsnabe
111	4	438 12 00 51	Bussning	Bushing	Busche
112	1	476 07 01 00	Vridfjäder, V	Torision spring, L	Drehfeder, L
113	1	476 07 01 02	Vridfjäder, V	Torision spring, L	Drehfeder, L
114	1	476 07 01 03	Vridfjäder, H	Torision spring, R	Drehfeder, R
115	1	476 07 01 01	Vridfjäder, H	Torision spring, R	Drehfeder, R
116	2	762 91 05 07	Buntband	Bundle strip	Bundband
117	2	476 11 81 00	Bussning	Bushing	Busche
118	1	476 06 61 00	Lyftaxel	Shaft	Achse
119	1	476 06 59 00	Fjädercentrum	Spring centre	Federherz
120	1	721 43 85 40	Stift	Peg	Stift FRP 8*50
121	2	476 07 11 00	Lästapp	Locker	Sperrstift
122	1	477 83 97 01	Huvskört, V	Hood support, L	Haubehalter, L
123	1	477 83 97 00	Huvskört, H	Hood support, R	Haubehalter, R
124	2	476 08 02 00	Dämpare	Damper	Dämpfer
125	2	731 23 14 40	Mutter	Nut	Mutter
127	6	476 08 47 00	Bromsfjäder	Brake spring	Bremsefeder
128	4	724 13 28 40	Skruv	Screw	Schraube MRX 5*14
129	1	461 13 78 02	Magnet	Magnet	Magnet
130	2	734 11 73 09	Bricka	Washer	Scheibe
131	2	476 08 49 00	Lyfthjul	Wheel	Rad
132	10	735 31 12 07	Sparring	Retaining ring	Seegerring
133	2	476 08 51 02	Lyftarm	Shaft	Achse
134	2	476 06 60 00	Lyftarmsfäste	Support	Befestigung
135	2	476 08 16 00	Kapsel	Cover	Kapsel
136	2	721 42 58 40	Stift	Peg	Stift FRP 4*24
137	2	721 43 43 40	Stift	Peg	Stift FRP 6*28
138	2	731 23 14 40	Mutter	Nut	Mutter
		734 11 46 09	Bricka	Washer	Scheibe
139	8	476 08 56 00	Huvhjul	Hood wheel	Hauberad
140	4	476 08 63 00	Länk	Link	Gelenk
141	12	731 23 14 40	Mutter	Nut	Mutter

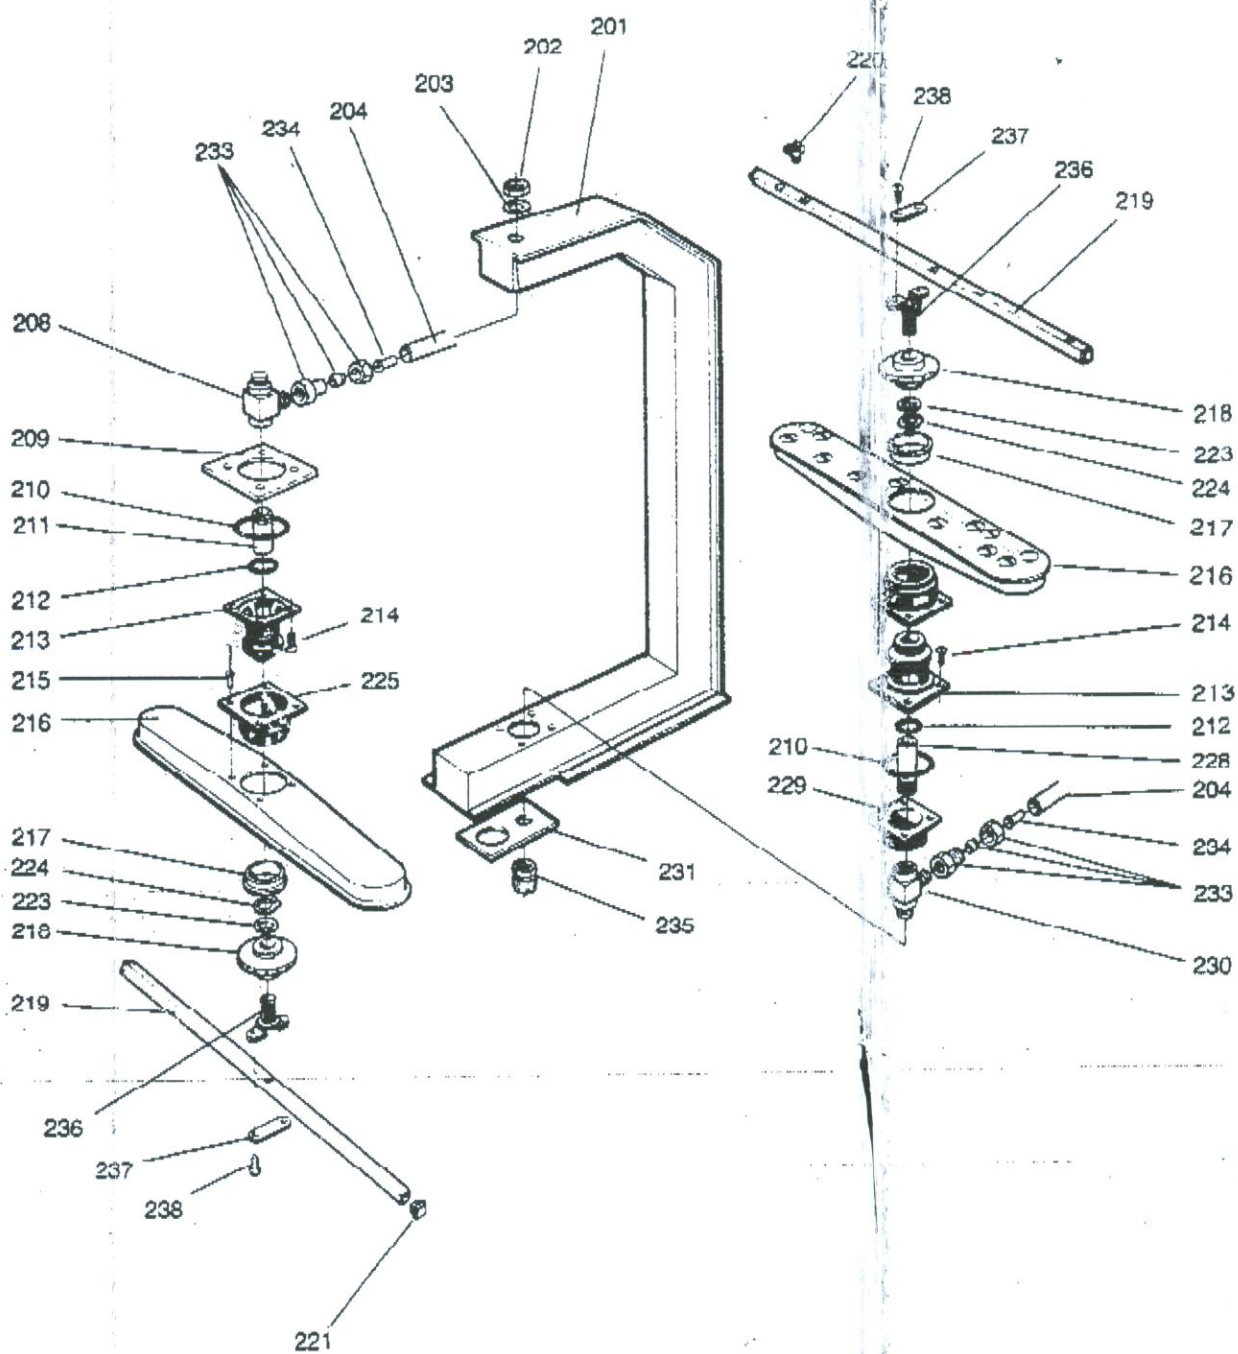


ILLUSTRATION 208 55