


8.1 G47


8.1.1 Main Assembly

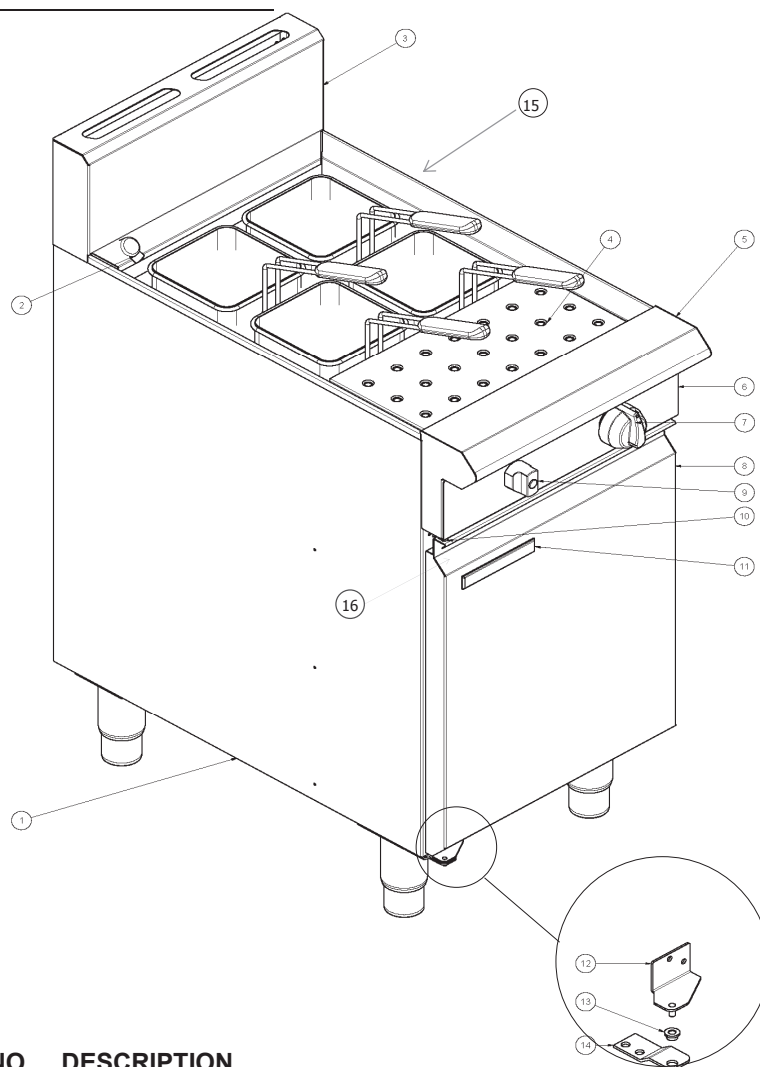

ITEM	PART NO	DESCRIPTION	*RPL
1	227512	SIDE PANEL LH	D
	227511	SIDE PANEL RH	D
2	229804	WATER FILLER SPOUT	D
3	229736	SPLASHBACK BLUESEAL GAS	D
4	229707	BASKET DRAIN TRAY	D
5	227762	HOB FRONT WA BSEAL	D
6	229745	CONTROL PANEL BSEAL GAS	D
7	229695	KNOB BSEAL 10mm GAS PF	C
8	228846	DOOR OUTER	D
9	235403	WATER VALVE (To serial number 488963)	C
	231598	WATER VALVE WASHER (To serial number 488963)	C
	235403	WATER BALL VALVE 1/4 TURN (From Serial No 488964)	C
	235410	WATER VALVE UPGRADE KIT (From Serial No 229703 to 235403)	C
10	228414	TOP PIVOT STUD	D
11	227960	BLUE SEAL BADGE	D
12	228308	HINGE PIVOT WA	C
13	228301	HINGE BUSH	C
14	228300	HINGE PLATE	C
15	229729	GAS PASTA COOKER TANK	D
16	227449	DOOR HANDLE	D


8 Exploded Parts Diagrams

8.1.2 Main Assembly

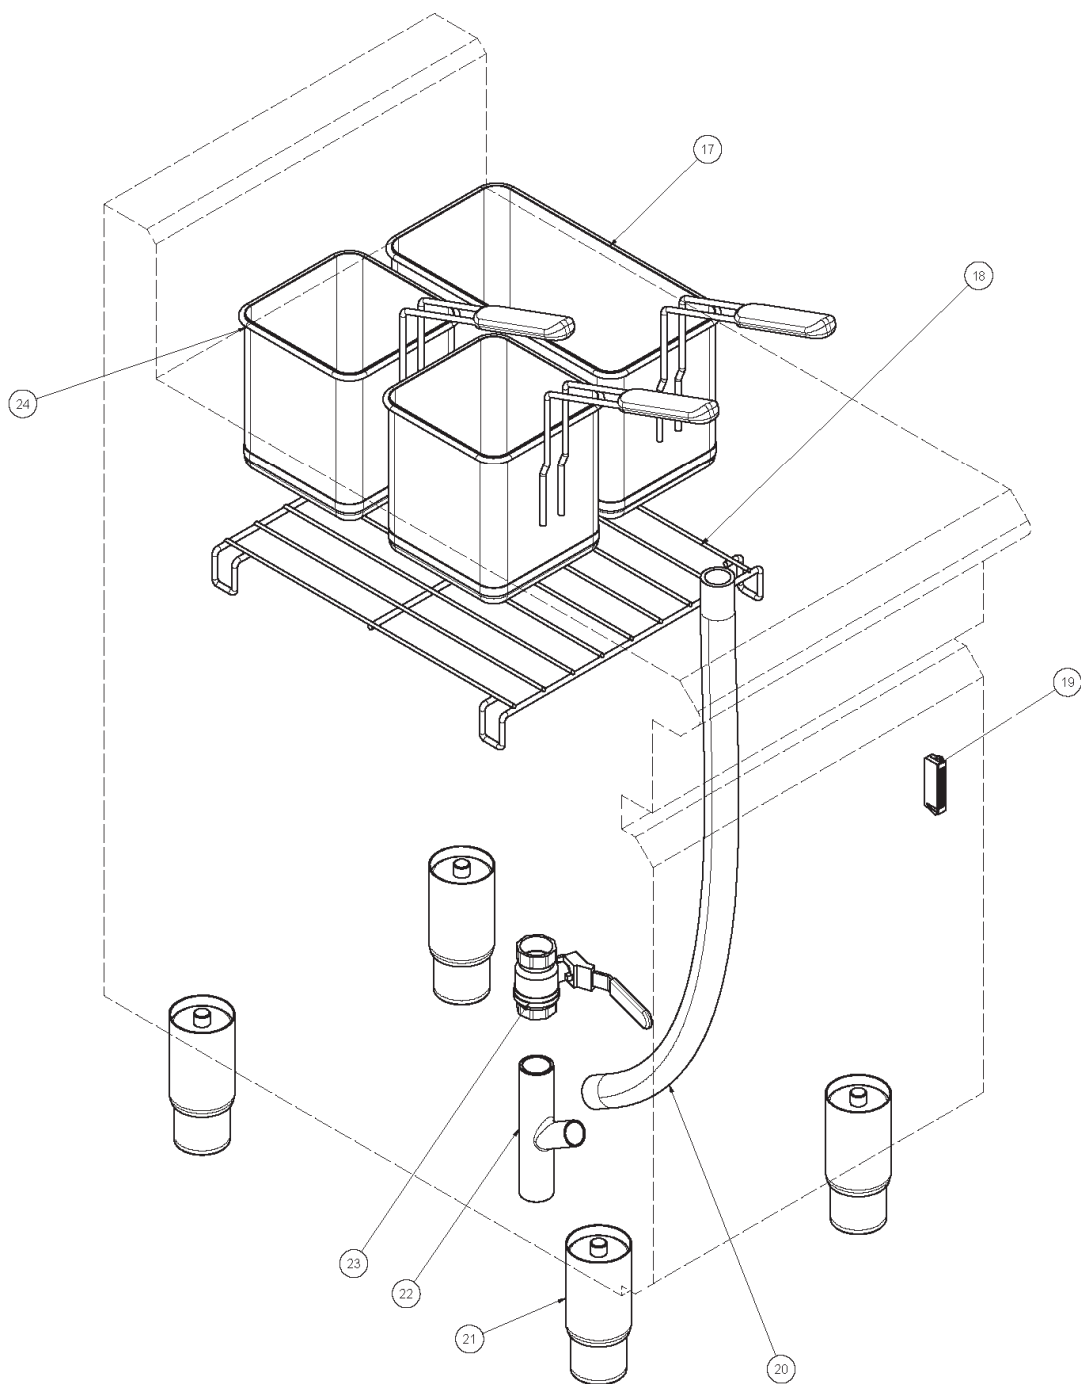

ITEM	PART NO	DESCRIPTION	*RPL
17	229837	BASKET 320 X 165	C
18	229682	BASKET SUPPORT FRAME	D
19	227856	MAGNET CATCH	C
20	229823	OVERFLOW HOSE	D
21	227850	LEG 150mm	D
22	229822	DRAIN "Y" JUNCTION	D
23	019390	BALL VALVE	D
24	229836	BASKET 165 X 165	C

8.1.3 Gas Assembly

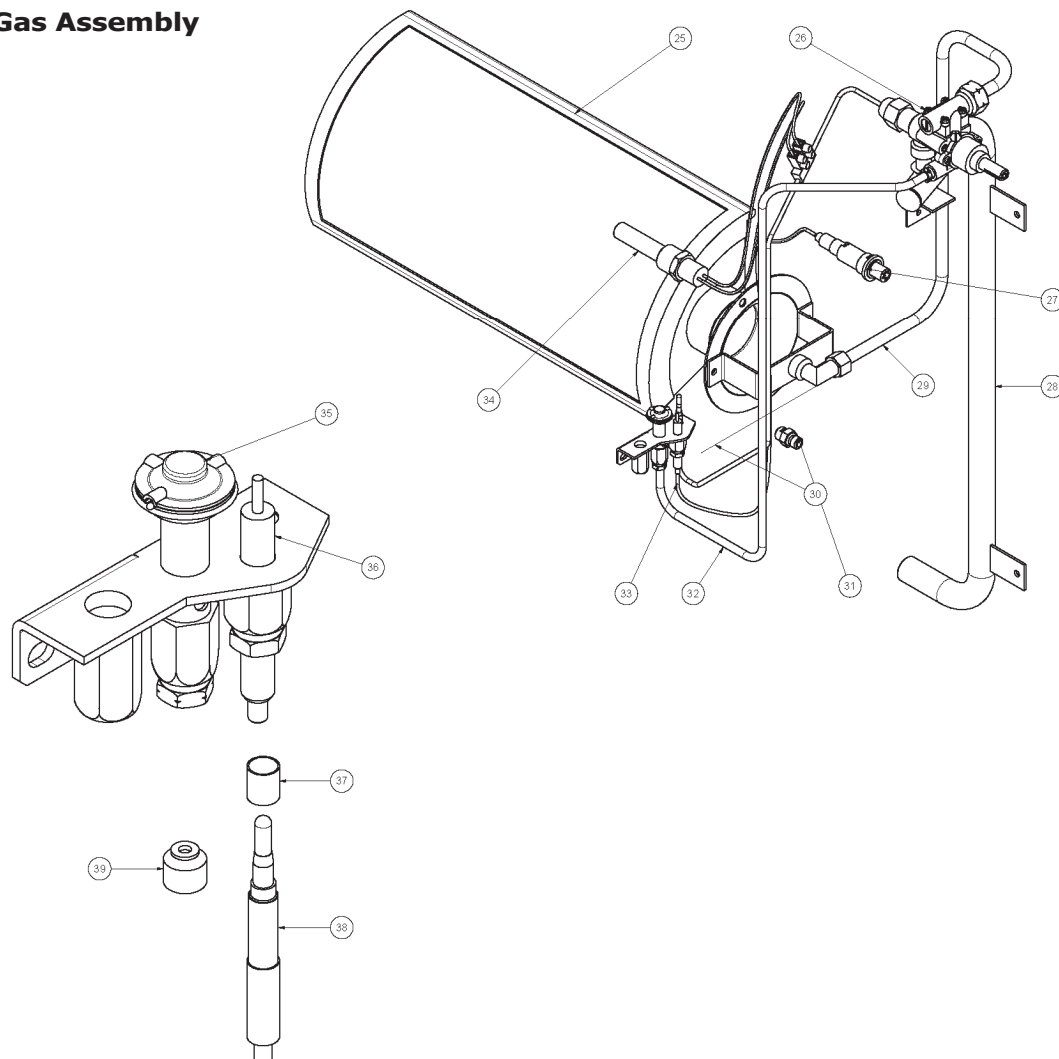

ITEM	PART NO	DESCRIPTION	*RPL
25	022575	BURNER	B
26	229699	GAS CONTROL	A
27	227508	PIEZO	A
28	229683	MANIFOLD	D
29	229814	BURNER SUPPLY PIPE	D
30	229511	INJECTOR ELBOW	D
31	032190	INJECTOR 1.9 mm	C
32	229816	PILOT SUPPLY TUBE	D
33	018095	HT LEAD	A
34	229702	OVERTEMP	A
35	018090	PILOT	A
36	018744	IGNITION ELECTRODE	A
37	018743	THERMOCOUPLE SPACER	C
38	019218	THERMOCOUPLE	A
39	018092	PILOT SPUD - LPG 0.35mm	A