


**Mod.
TV98**

Tagliaverdure da banco • Tagliamozzarella
Bench vegetables-cutter • Mozzarella-cutter
Coupe-légumes de banc • Coupe-mozzarella
Tischgemüseschneider • Mozzarella-schneider
Picadora de verduras de mesa • Picadora de mozzarella



PARTI DI RICAMBIO
SPARE PARTS
PIECES DE RECHANGE
ERSATZTEIL
PIEZAS DE RECAMBIO

SPARE PARTS PIECES DE RECHANGE

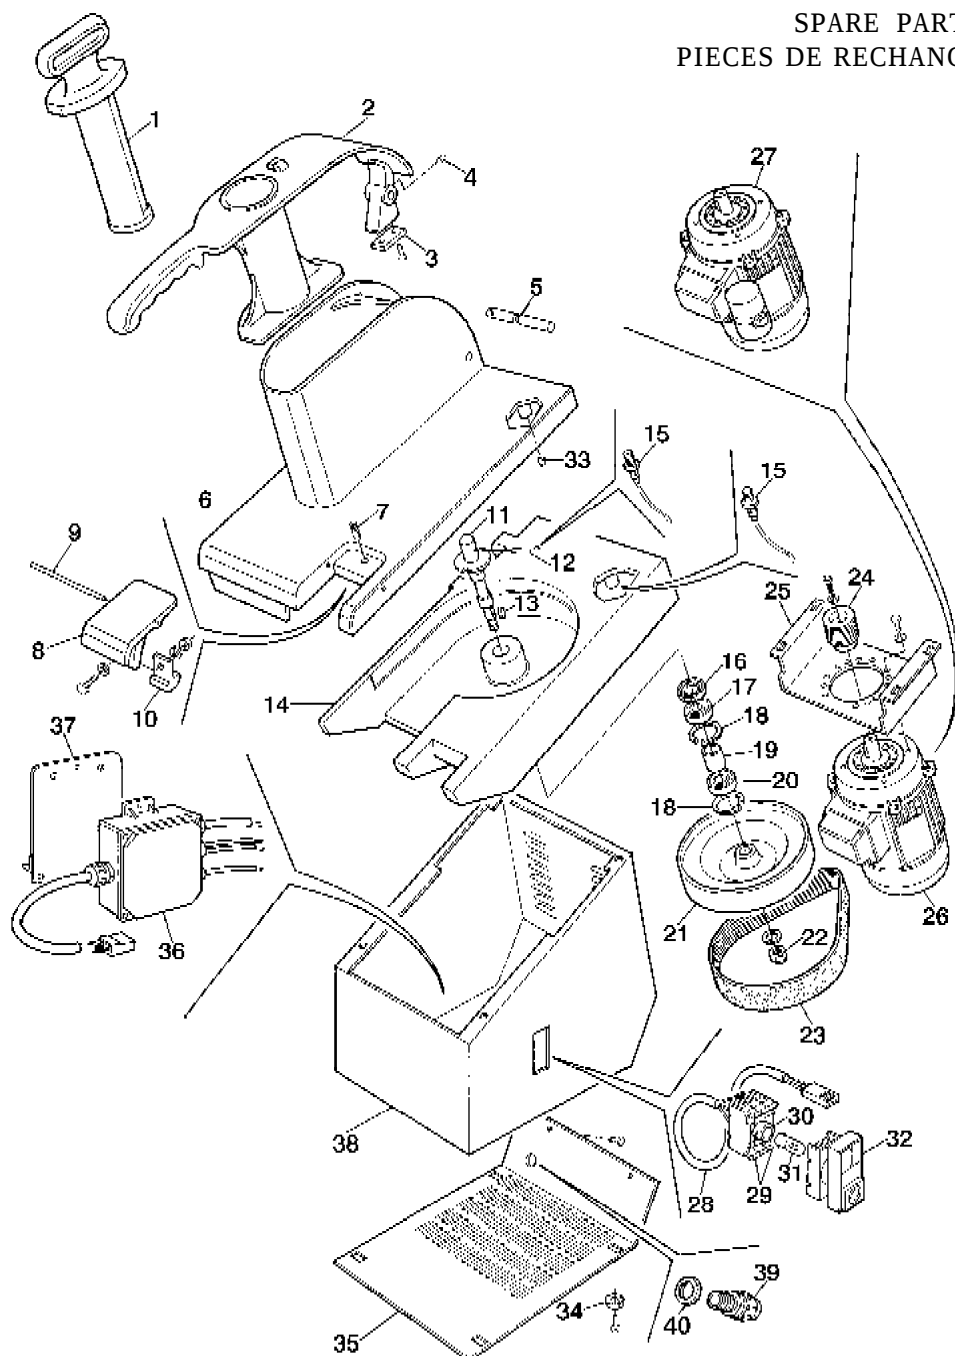

PARTI DI RICAMBIO
SPARE PARTS
PIECES DE RECHANGE
ERSATZTEIL
PIEZAS DE RECAMBIO



Tagliaverdure da banco • Tagliamozzarella
Bench vegetables-cutter • Mozzarella-cutter
Coupe-légumes de banc • Coupe-mozzarella
Tischgemüseschneider • Mozzarellaschneider
Picadora de verduras de mesa • Picadora de mozzarella

**Mod.
TV98**

POS.	DESCRIPTION	DESCRIPTION	COD.
1)	TV98 PESTLE	TV98 PILON	50NAA78050
2)	TV98 INOX PRESSER LEVER	TV98 LEVIER PRESSEUR	35NAA79227
* 3)	TV98 PRESSER MAGNET 45x12 h.5	TV98 MAGNETO PRESSEUR 45x12 h.5	50MAA78008
4)	DOWEL SCREW A2 P/COD. 6x6	VIS GOUJON A2 P/COD. 6x6	50BAA78495
5)	TV98 PRESSER LEVER PIN	TV98 PIVOT LEVIER PRESSEUR	50SFA78047
6)	TV98 COVER	TV98 COUVERCLE	35NAA79103
7)	TV98 SPRING FOR HOOK	TV98 RESSORT POUR CROCHET	50SFA78283
8)	TV98 COVER CLOSING LEVER	TV98 LEVIER DE FERM. COUV.	50NAA79053
9)	TV98 LEVER PIN	TV98 PIVOT LEVIER	50SFA78046
10)	TV98 COVER CLOSING HOOK	TV98 CROCHET DE FERM. COUV.	50NAA78054
* 11)	TV98 CENTRAL SHAFT GROUP	TV98 GROUPE ARBRE CENTRAL	10SIA79370
12)	PIN 5x24	EPINE 5x24	50BFA76376
13)	KEY 5x5x15 UNI 6604/A	LANGUETTE 5x5x15 UNI 6604/A	50BCA76186
14)	TV98 CENTRAL BODY	TV98 CORPS CENTRAL	35NAA79140
* 15)	MICROSWITCH 308 N.O. (2 PIECES)	MICRO-INTERRUPT. 308 N.O. (2 PIECES)	50MAA74155
* 16)	SEAL RING	BAGUE D'ETANCHEITE	50IAA71178
* 17)	BEARING 6202-2RS	COUSSINET 6202-2RS	50IBA71269
* 18)	SEEGER RING Ø 35 (2 PIECES)	ANNEAU SEEGER Ø 35 (2 PIECES)	50BHA76670
* 19)	TV53-98 SPACER Ø 20x30 F. 15	TV53-98 ENTRETOISE Ø 20x30 F. 15	50SFA75169
* 20)	BEARING 6202-ZZ	COUSSINET 6202-ZZ	50IBA71268
21)	TV98 DRIVEN PULLEY	TV98 POULIE CONDUITE	50LUA78174
22)	SELF-LOCKING NUT 12 ZIN. V7474	ECROU AUTO-BLOQUANT 12 ZIN. V7474	50BBA76631
* 23)	BELT POLY DAYCO PV 559J12	COURROIE POLY DAYCO PV 559J12	50LDA71329
24)	TV53-98 DRIVER PULLEY	TV53-98 POULIE MOTRICE	50LUA75140
25)	TV98 ENGINE SUPP. BRACKET	TV98 BRIDE SUPPORT MOTEUR	35HAA78165
26)	TV98 ENGINE KW0,56 230/400/3/5	TV98 MOTEUR KW0,56 230/400/3/5	50DAA78318
27)	ENGINE KW0,55 230/1/50	MOTEUR KW0,55 230/1/50	50DAA78234
28)	PH-PVM-PL-TV WIRING	PH-PVM-PL-TV CABLERIE	50PAA78218
29)	CONTACT BOARD N.A. KG. 40 - TV 98	BLOQUE DE CONTACTS N.A. KG. 40 - TV 98	EF06300
30)	TV98 LAMP HOLDER	TV98 PORTE-LAMPE	50MAA78002
* 31)	BULB LAMP T-10x28 30V.	LAMPE T-10x28 30V.	50EAA71097
* 32)	TV98 PUSHBUTTON	TV98 POUSSOIR	50MAA78001
33)	TV98 MAGNET MN Ø 006 ZBO	TV98 MAGNETO MN Ø 006 ZBO	50MAA78006
34)	SCREW BUFFER 25x11	BUTOIR VIS 25x11	50RAA71352
35)	TV98 BASEMENT BOTTOM	TV98 FOND SOUBASSEMENT	35HAA78191
36)	BOX AND CABLE CIRCUIT UNIT	CIRCUIT AVEC BOITIER ET CABLE	50PAA78240
37)	TV98 BOX FIXING PLATE	TV98 PLAQUE DE FIXAGE BOITE	35HAA78160
38)	TV98 HOUSING	TV98 CARTER	50HAA78652
39)	CABLE-PRESS PG 11	PRESSECABLE PG 11	50EBA71118
40)	NUT	ECROU	50EBA70944

* Parts that undergo greater wear and that are advisable to use as spares.

Parties soumises particulièrement à l'usure et conseillées comme pièces de rechange.

SCHEMA ELETTRICO
ELECTRIC DIAGRAM
SCHEMA ELECTRIQUE
SCHALTSCHHEMA
ESQUEMA ELECTRICO

