



Service Manual

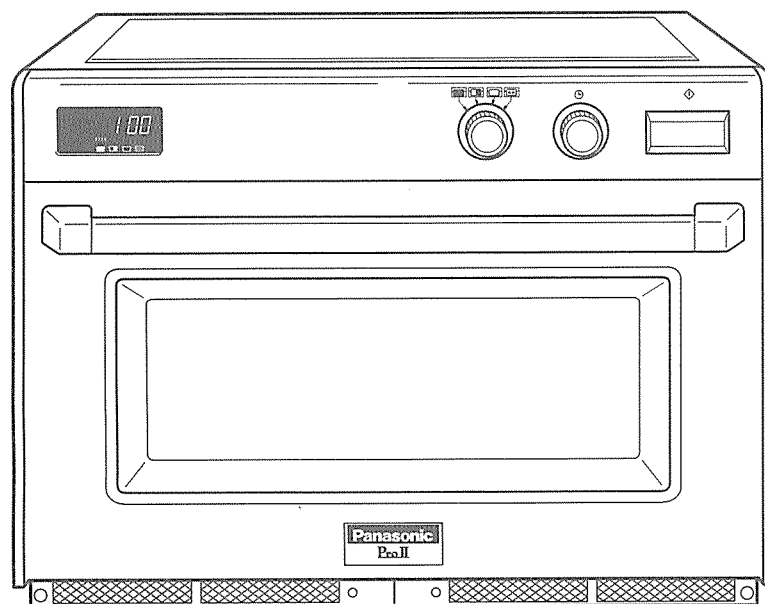

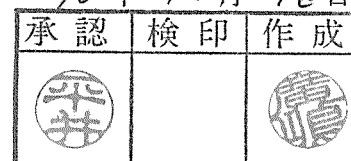

Microwave Oven

NE-2740**NE-1880****NE-1840****NE-1540**

96年 12月 16日



Specifications

		NE-2740	NE-1880	NE-1840	NE-1540
Power Source :		2N 400 V AC 50Hz	230 V AC Single Phase, 50Hz		
Power Requirement :		4.4 KW	3.2 KW		2.6 KW
High frequency Output :	 HIGH	2700 W (IEC-705)	1800 W (IEC-705)		1500 W (IEC-705)
	 MED	1350 W	900 W		750 W
	 LOW	340 W	340 W		340 W
	 DEF	170 W	170 W		170 W
Frequency :		2450 MHz			
Timer :		NE-2740, NE-1840, NE-1540: 60 Min. NE-1880: 15 Min. HIGH, MED 60 Min. LOW, DEF and STAND			
Outside Dimensions :		650 mm (W) X 526 mm (D) X 471 mm (H)			
Oven Cavity Dimensions :		535 mm (W) X 330 mm (D) X 250 mm (H)			
Weight :		65 kg	54 kg		
Specification subject to change without notice.					

Panasonic®

© 1996 Matsushita Electric Industrial Co., Ltd.
 All rights reserved. Unauthorized copying and
 distribution is a violation of law.

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

This service manual covers products for following markets.

When troubleshooting or replacing parts, please refer to the country identifications shown below for your applicable product specification.

EPG.....For Continental Europe

WARNING

This products should be serviced only by trained, qualified personnel.

VARNING

Denna apparat skall repareras endast av härför kvalificerad personal.

VAROITUS

Laitetta saa huoltaa ainoastaan tehtävään koulutettu, ammattitaitoinen huoitomies.

ADVARSEL

Reparasjoner må kun utføres av kvalifisert personell.

ADVARSEL

Disse produkter må kun repareres af kvalificerede teknikere med specialuddannelse.

ATTENTION RAYONNEMENT PAR MICRO-ONDES


LES PERSONNES NE DOIVENT PAS ÊTRE EXPOSÉES À L'ÉNERGIE PAR MICRO-ONDES QUI PEUT PAYONNER DU MAGNÉTRON OU D'UN AUTRE DISPOSITIF GÉNÉRATEUR DE MICRO-ONDES EN CAS D'UTILISATION OU DE CONNEXION INCORRECTES. TOUTES LES CONNEXIONS A MICRO-ONDES D'ENTRÉE ET DE SORTIE. LES GUIDES D'ONDES. FLASQUES ET JOINTS DOIVENT ÊTRE SÛRS. NE JAMAIS FAIRE FONCTIONNER LE GÉNÉRATEUR SANS UNE CHARGE PRÉVUE POUR ABSORBER L'ÉNERGIE PAR MICRO-ONDES, NE JAMAIS REGARDER À L'INTÉRIEUR D'UN GUIDE D'ONDES OUVERT OU UNE ANTENNE PENDANT QUE LE GÉNÉRATEUR EST EN FONCTION.

CONTENTS

	(page)
CONTROL PANEL	3
OPERATING PROCEDURE	4
SCHEMATIC DIAGRAM	8
WIRING DIAGRAM	10
DESCRIPTION OF OPERATING SEQUENCE	12
CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING	13
DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE	18
COMPONENT TEST PROCEDURE	22
MEASUREMENTS AND ADJUSTMENTS	24
TROUBLESHOOTING GUIDE	26
EXPLODED VIEW AND PARTS LIST	28
SCHEMATIC DIAGRAM & PARTS LIST OF DIGITAL PROGRAMMER CIRCUIT	43

OUTLINE DIAGRAM


NE-2740, NE-1840, NE-1540



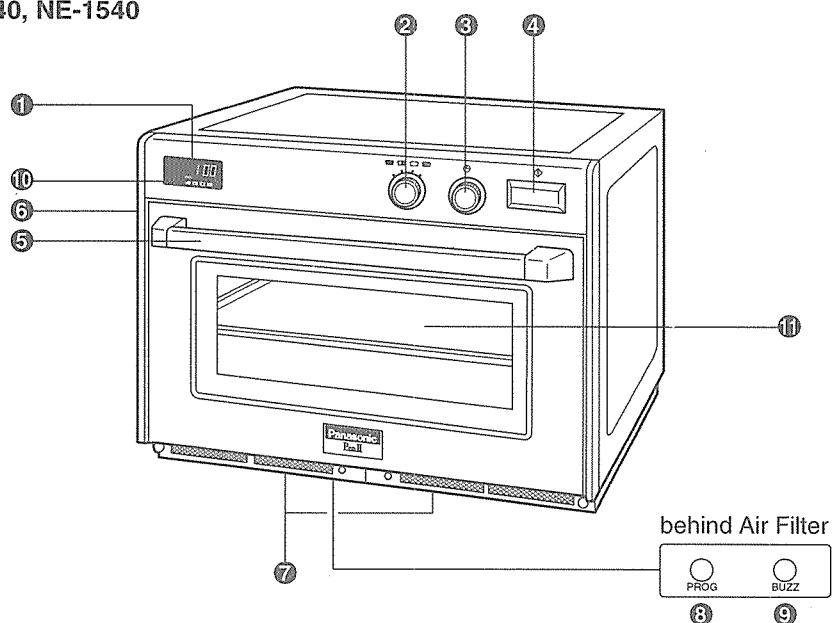



- ① Digital Display Window(see below)
- ② Power Level Selector Dial
- ③ Time Dial
- ④ Start Button
- ⑤ Door Handle

- ⑥ Oven Lamp Cover
- ⑦ Air Filters
- ⑧ Program Entry Switch (behind Air Filters)
- ⑨ Buzzer Switch (behind Air Filters)
- ⑩ Power Level Indicator Display
- ⑪ Middle Shelf

NE-1880

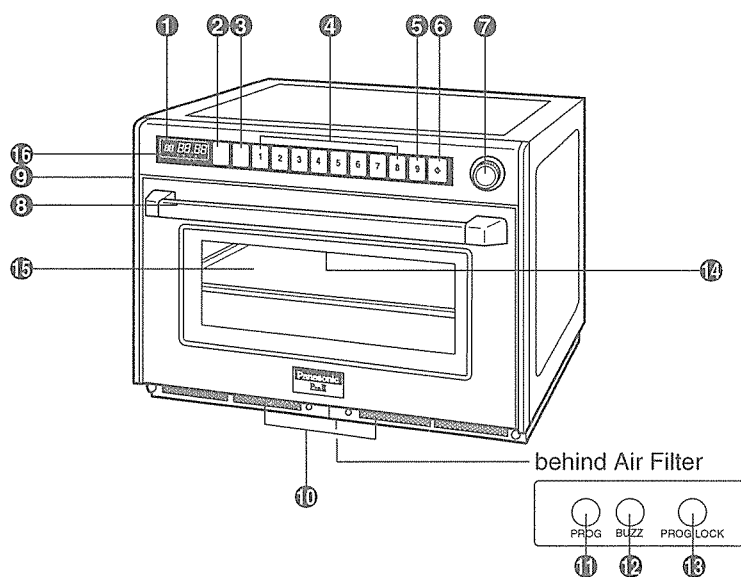











- ① Digital Display Window(see below)
- ② Power Level Selector Pad()
- ③ Memory Shift Pad()
- ④ Memory Pads
- ⑤ Stop Cancel Pad()
- ⑥ Start Pad()
- ⑦ Timer Dial















- ⑧ Oven Lamp Cover
- ⑩ Air Filters
- ⑪ Program Entry Switch (behind Air Filters)
- ⑫ Buzzer Switch (behind Air Filters)
- ⑬ Program Lock Switch (behind Air Filters)
- ⑭ Control Panel

OPERATION PROCEDURE (NE-1880)

1. Manual heating for single stage

OPERATION	DISPLAY
1. Plug the power supply cord into wall receptacle.	
2. Open the door. Place a water load in the oven and close the door.	0
3. Tap [POWER LEVEL] pad () once. (Set to High power)	  0
4. Set the desired heating time by turning the timer dial. (Set to 2 minutes)	  2 00
5. Tap [START] pad ().	  1 59
6. When the time is up, you hear 3 beeps sound.	
7. Open the door and take out the water load. The display goes back to previously setting time.	1  2 00
8. Close the door. 1 minute later, display will return blank.	

2. Manual heating for 2nd or 3rd stage

OPERATION	DISPLAY
1. Follow step 1 to 4 for single stage.	  2 00
2. Tap [POWER LEVEL] pad () twice. (Set to MED power)	1:   0
3. Set the desired heating time by turning the timer dial. (Set to 1 minute)	1:   1 00
4. Tap [START] pad (). (1st stage)	 2  59
5. When the 1st stage time is up, you hear 1 beep sound. (2nd stage)	  59
6. When the time is up, you hear 3 beeps sound.	
7. Open the door and take out the water load. The display goes back to previously setting time.	1 2  3 00
8. Close the door. 1 minute later, display will return blank.	

NOTE: For a 3rd stage heating cycle, select a further power level and time between steps 3 and 4 above.

3. Memory setting for single stage

OPERATION	DISPLAY
1. Display must be blank before programming can begin. Touch (PROG) pad.	
2. Tap [5] pad. (Set to memory pad 5) NOE: Previously selected power and time will appear.	
3. Tap [POWER LEVEL] pad () once. (Set to High power)	
4. Set the desired heating time by turning the timer dial. (Set to 1 minute)	
5. Touch (PROG) pad again.	
6. 3 seconds after, the display window will go blank.	

TO PROGRAM MEMORY AREA B: Follow steps 1 above. Touch the Memory Shift pad [A>B] and a small "B" will appear beneath the flashing "PROG".

Touch the memory pad you wish to program, and the previously selected time and power level will appear in the display window.

NOTE: Once the Memory area B has been selected it cannot be changed back to Memory area A. If you do not require Memory area B, cancel it by touching the cancel pad and begin again.

4. Memory setting for 2nd or 3rd stage

OPERATION	DISPLAY
1. Follow steps 1 to 4 for memory setting for single stage.	
2. Tap [POWER LEVEL] pad () twice. (Set to MED power)	
3. Set the desired heating time by turning the timer dial. (Set to 2 minutes)	

OPERATION	DISPLAY
4. Touch Program pad again. Heating time is displayed by adding single and 2nd stage heating time.	
5. 3 seconds after, the display window will become blank.	

NOTE: For a 3rd stage heating cycle, select a further power level and dial in a time, between steps 3 and 4 above.

5. Memory pad heating

OPERATION	DISPLAY
1. Plug the power supply cord into wall receptacle.	
2. Open the door. Place a water load in the oven and close the door.	
3. Tap [5] pad.	
4. Tap [START] pad (). (1st stage)	
5. (2nd stage)	
6. When the time is up, you hear 3 beeps sounds.	
7. Open the door and take out the water load.	
8. Close the door. Display will return blank after 1 minute.	

NOTE: When program is locked, heating can be started automatically by tapping memory pad.

6. To Read the Cycle Counter

OPERATION	DISPLAY
1. Open the door and close.	0
2. While pressing (BUZZ) switch, press (PROG) switch. The display shows the number of times the oven has been used.	66 66
3. 3 seconds later, the display will go blank.	

NOTE: Total cumulative number includes programming memory heating and manual heating number of times has been used. Cooking times over 99,999 times will be back 0.

7. To Activate Program Lock

OPERATION	DISPLAY
1. Plug the power supply cord into wall receptacle. Do not open the door.	
2. Press and hold (PROG LOCK) switch until the display show "PROG", "P" and "L". (for more than 5 seconds)	-PROG-
3. Programme lock feature now activated.	PROG P L

8. To Release Program Lock

OPERATION	DISPLAY
1. Plug the power supply cord into wall receptacle.	
2. Press and hold (PROG LOCK) switch until the display will show "PROG" and "P". (for more than 5 seconds)	0
3. Program lock feature is now deactivated.	PROG P

9. To Select Beep Tone Options

OPERATION	DISPLAY
1. Plug the power supply cord into wall receptacle.	
2. Press (PROG) switch.	-PROG-
3. Press (BUZZ) switch.	-PROG- 3 bE EP 1
4. Select the desired sound loudness level by pressing (BUZZ) switch. Repeated pressing of (BUZZ) switch will lower the loudness and all the way to silent.	-PROG- 2 bE EP 1
5. Press (PROG) switch again.	PROG 2 bE EP 1
6. 3 seconds later display window will go blank.	

To select length of tone at end of heating cycle there are 2 options.













A. 3 beeps (factory setting)

B. 60 seconds of short beeps.

To set for 60 seconds of short beeps.

OPERATION	DISPLAY
1. Complete steps 1-4 above.	-PROG- 2 bE EP 1
2. Press (PROG) switch and quickly select the desired tone length by pressing (BUZZ) switch. "1" illuminated 3 beeps. "2" illuminated 60 seconds of beeps.	-PROG- 2 bE EP 2
3. Press (PROG) switch again.	PROG 2 bE EP 2
4. 3 seconds later, the display will go blank.	

OPERATION PROCEDURE (NE-2740/1840/1540)

OPERATION	DISPLAY
1. Plug the power supply cord into wall receptacle.	
2. Open the door. Place a water load and close door.	 
3. Select desired power level if other than  (HIGH) power.	 
4. Set the desired heating time by turning the timer dial.	 
5. Press the start button.	 
6. When the time is up, display will blink "0" until door is opened.	
7. Open the door and remove water load.	 
8. Close the door. 1 minute later, display will go blank.	

Notes:

1. When you press the Start Button with door open, "0" will appear in the display in all cases.
2. Even after setting the heating time you can still change the power level.
3. If you wish to change the heating time during heating, simply adjust the timer to desired minutes and seconds.

SCHEMATIC DIAGRAM
NE-2740




NOTE: Door is closed
Unit is not operated

8

SCHEMATIC DIAGRAM NE-1880/1840/1540

SCHEMATIC DIAGRAM NE-1880/1840/1540

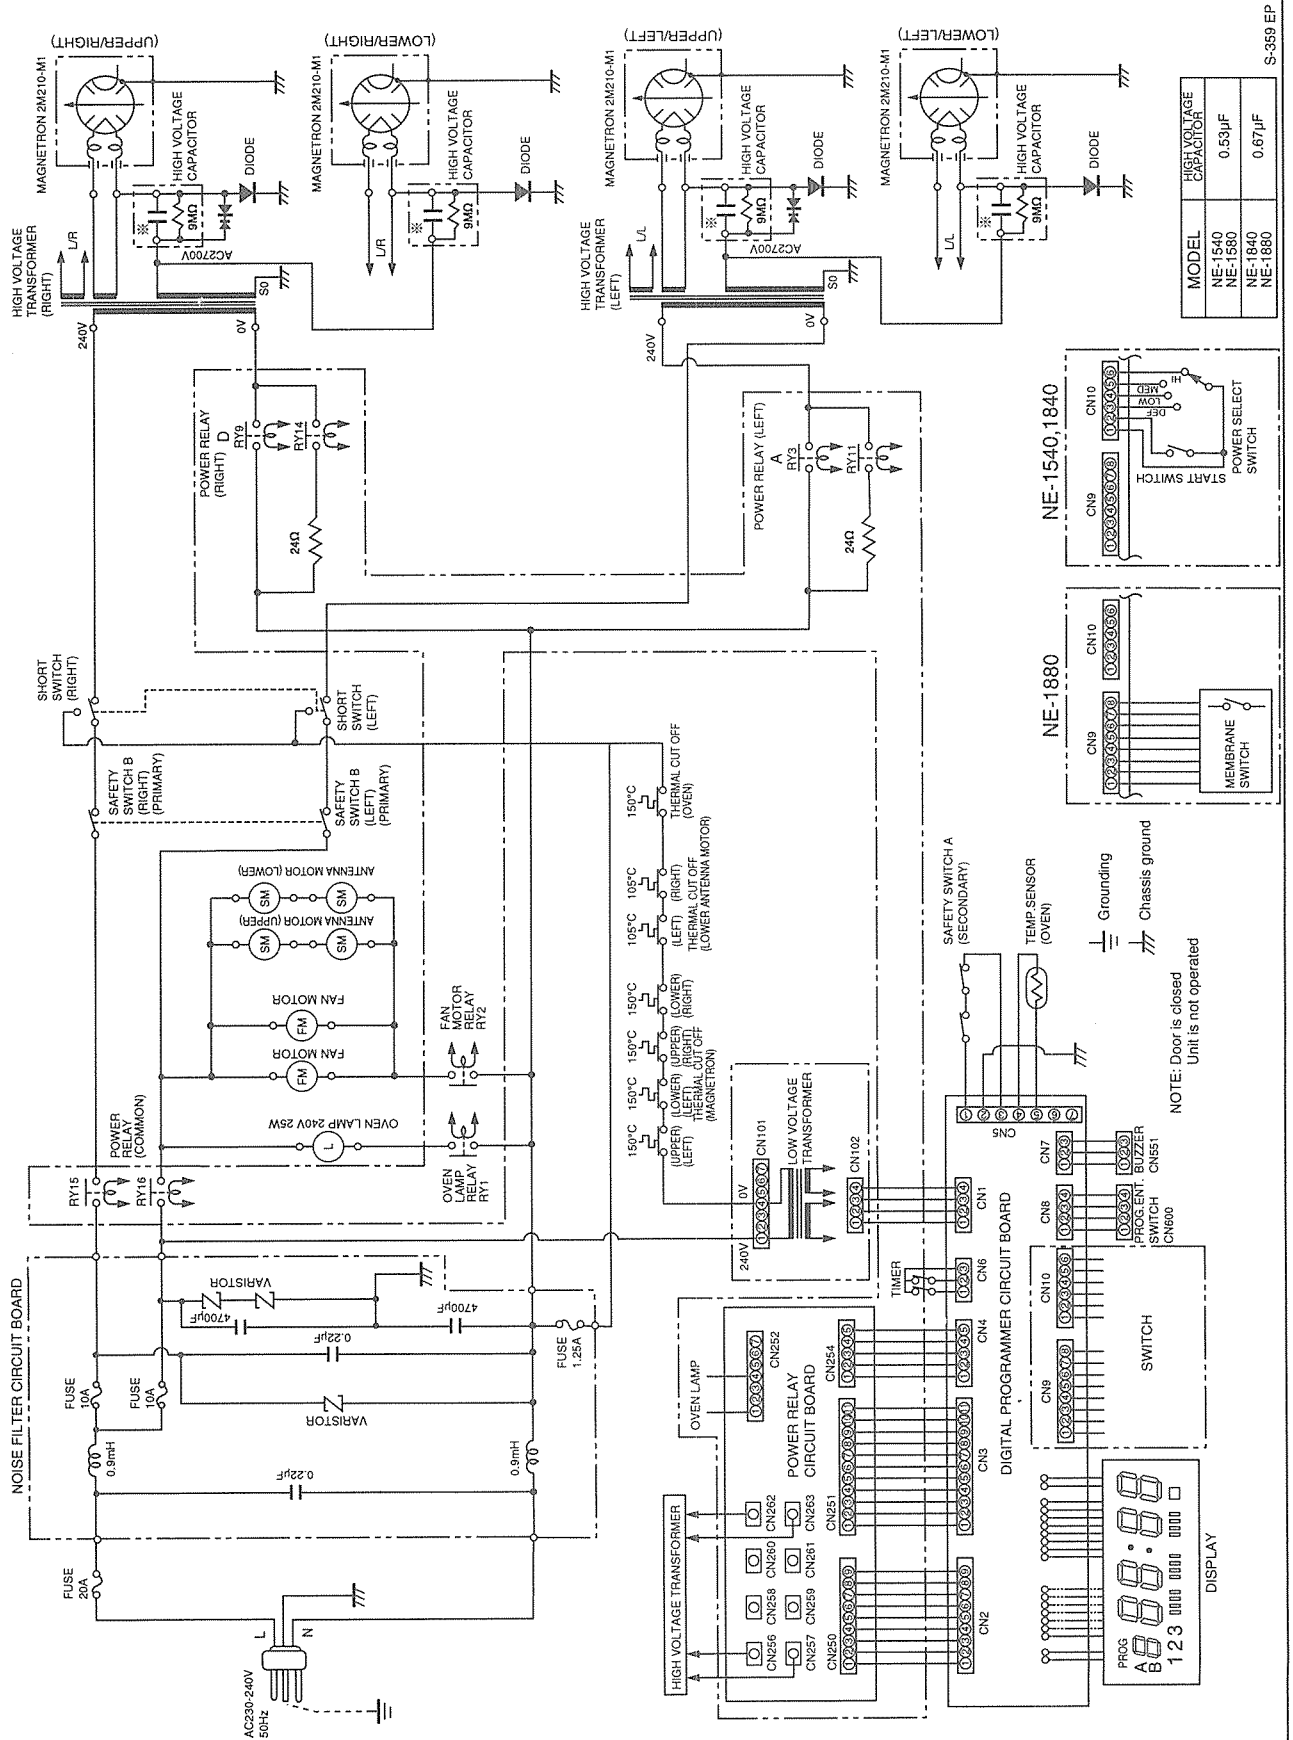






MODEL	HIGH VOLTAGE CAPACITOR
NE-1540	0.53μF
NE-1840	0.67μF
NE-1880	0.67μF

S-359 EP

WIRING DIAGRAM NE-2740

NOTE: When replacing, check the lead wire colour as shown.


RELAYS AND CONNECTOR WIRING ON TOP OF OVEN

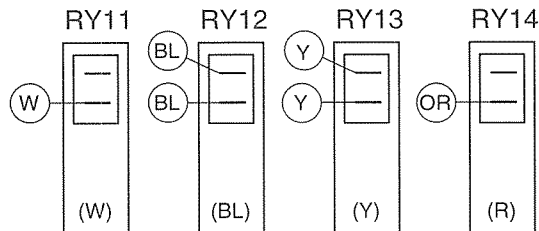


SWITCH WIRING

LEFT


RIGHT

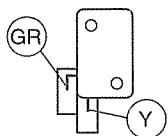


Safety Switch A

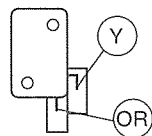


Safety Switch A

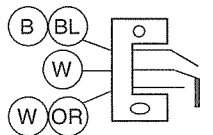


Short Switch

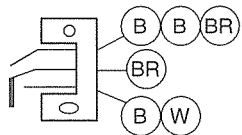


Short Switch



Safety Switch B




Safety Switch B

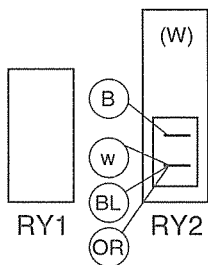


RY1





RY2



RY15



RY16

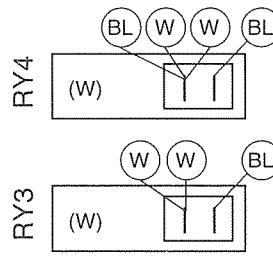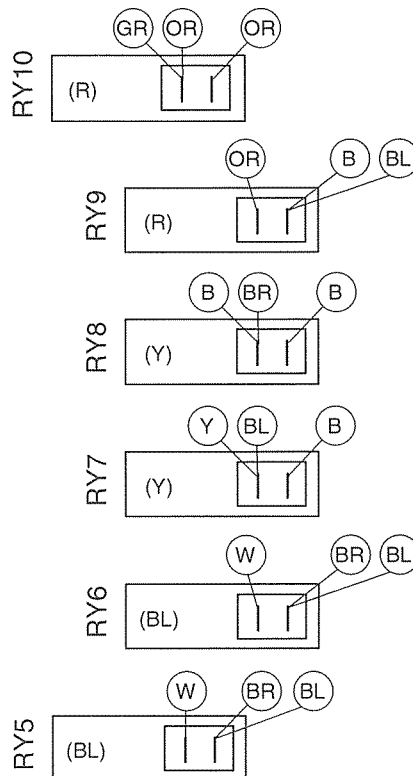

RY4



RY3

SYMBOL	COLOUR
B	BLACK
R	RED
OR	ORANGE
GR	GREY
BR	BROWN
Y	YELLOW
BL	BLUE
W	WHITE
V	VIOLET

S-356 EP
M027

WIRING DIAGRAM NE-1880/1840/1540


RELAYS AND CONNECTOR WIRING ON TOP OF OVEN

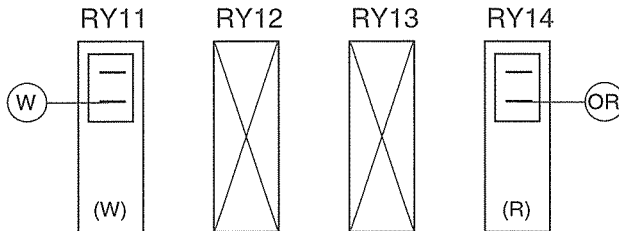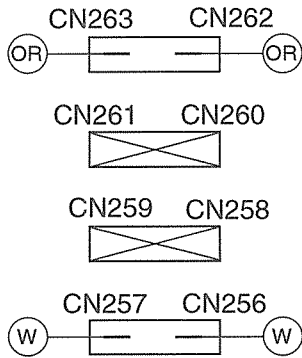


SWITCH WIRING

LEFT


RIGHT

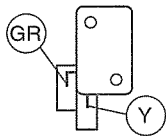


Safety Switch A

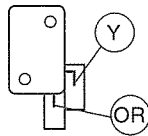


Safety Switch A

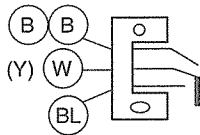


Short Switch

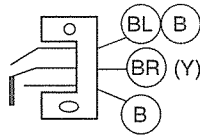




Short Switch

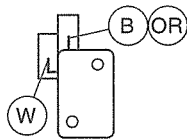

Safety Switch B

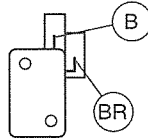

Safety Switch B

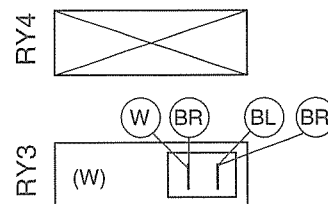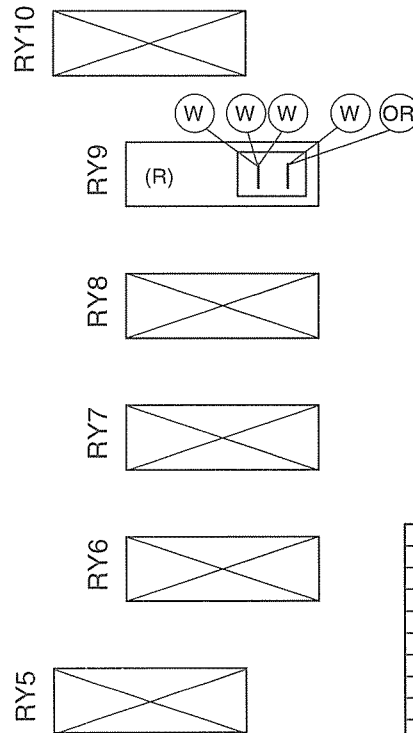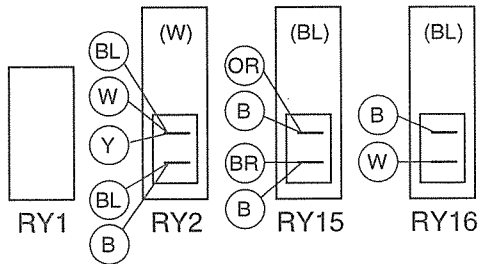

SYMBOL	COLOUR
B	BLACK
R	RED
OR	ORANGE
GR	GREY
BR	BROWN
Y	YELLOW
BL	BLUE
W	WHITE
V	VIOLET

S-359 EP
M028

DESCRIPTION OF OPERATING SEQUENCE




Variable power cooking control

The coil of power relays are energized intermittently by the digital programmer circuit, when the oven is set at any power selection except for High power position. The digital programmer circuit controls the ON-OFF time of the power relays contacts in order to vary the output power of the microwave oven. The relation between indications

on the control panel and the output power of the microwave oven is as shown in table.




NOTE: ON-OFF time of power relays are changed by digital programmer circuit when remaining cooking time or selected cooking time are within 8 minutes at MED, LOW and Defrost cooking mode.

NE-2740

POWER	POWER RELAY	ON-OFF TIMING OF POWER RELAY
HIGH 	POWER RELAY D	ON OFF
	POWER RELAY C	ON OFF
	POWER RELAY B	ON OFF
	POWER RELAY A	ON OFF
MED 	POWER RELAY D	ON OFF
	POWER RELAY C	ON OFF
	POWER RELAY B	ON OFF
	POWER RELAY A	ON OFF
LOW 	POWER RELAY D	ON OFF
	POWER RELAY C	ON OFF
	POWER RELAY B	ON OFF
	POWER RELAY A	ON OFF

96-003M

NE-1880, NE-1840, NE-1540

POWER	POWER RELAY	ON-OFF TIMING OF POWER RELAY
HIGH 	POWER RELAY D	ON OFF
	POWER RELAY A	ON OFF
MED 	POWER RELAY D	ON OFF
	POWER RELAY A	ON OFF
LOW 	POWER RELAY D	ON OFF
	POWER RELAY A	ON OFF


62-009M

2. Defrost control

When defrost power and defrosting time is selected and Start pad is touched:

- The digital programmer circuit (DPC) divides the total defrosting time into 8 equal periods, consisting of four defrosting periods, each followed by a standing period. (See figure)
- During defrosting power periods, power relay ON-OFF time is controlled at Low power mode by DPC.
- During Standing periods, power relay is always open resulting in no microwave power.

NOTE: Defrost time selected is converted into seconds by the DPC but display will show selected time in minutes and seconds as programmed. The total number of seconds is divided into 8 time periods. The remainder (seconds not equally divisible by 8) are added to the last standing time period.

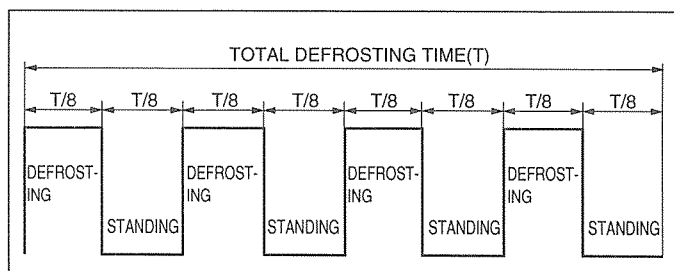

96-004M

CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING

Unlike many other appliances, the microwave oven is high voltage, high current equipment. Though it is free from danger in ordinary use, extreme care should be taken during repair.

CAUTION

Servicemen should remove their watches whenever working close to or replacing the magnetron.

1. Check the earthing

Do not operate on a 2 wire extension cord. The microwave oven is designed to be used in a completely earthed condition. It is imperative, therefore, to make sure it is properly earthed before beginning repair work.

2. If the door lock, the door switch, the door seal or the door develops a malfunction, be sure not to operate the oven until complete repairs are made.

If the oven is operated with any of these parts in imperfect condition, hazardous microwave leakage might occur.


WARNING

Never operate the oven until the following are confirmed:

- (A) The door is tightly closed.
- (B) There is no broken hinge or door arm.
- (C) The door seal is not damaged.
- (D) The door is not bent or warped.
- (E) There is no other visible damage.

3. Warning about the electric charge in the high voltage capacitor.

For about 30 seconds after the oven is turned off, an electric charge remains in the high voltage capacitor. When replacing or checking parts, remove the power plug from the outlet, wait 30 seconds and short the terminal of the high voltage capacitor (terminal of lead wire from diode) to chassis ground with an insulated jumper lead wire or an insulated handle screwdriver to discharge.

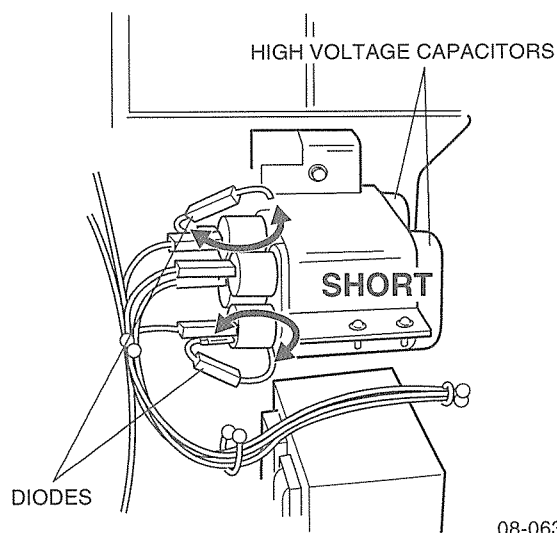

Discharge the 2 High Voltage Capacitors. Touch chassis side first then short to the high voltage capacitor terminal.

Important Note

1. High voltage above 250 volts are existing on following parts during operation.

- *Magnetron
- *High Voltage Transformer
- *High Voltage Diode
- *High Voltage Capacitor

Unusual attention should be paid during repair or troubleshooting of product.

2. If the microwave oven is operated with incorrect installed door hinge or magnetron, it can cause microwave leakage of over 5mW/cm². Hence it is absolutely necessary to check if magnetron and door hinge are correctly and safely installed after repairs or replacement.

WARNING

Never touch any circuit wiring with your hand nor with an insulated tool during operation.

4. When parts must be replaced, always remove the power plug from the outlet, and discharge the high voltage capacitor.

5. Confirm after repair

- (A) After repair or replacement of parts, make sure that the screws of the oven, etc. are neither loose nor missing. Microwave might leak if screws are not properly tightened.
- (B) Make sure that all electrical connections are tight before inserting the plug into the wall outlet.

6. Avoid inserting nails, wire, etc. through holes in unit during operation.

Never insert a wire, nail or any other metal object through the lamp holes on the cavity or any other holes or gaps, because such objects may work as an antenna and cause microwave leakage.

7.

CAUTION MICROWAVE RADIATION

Personnel should not be exposed to the microwave energy which may radiate from the magnetron or other microwave generating device if it is improperly used or connected all input and output microwave connections waveguides, flanges, and gasket must be secure. Never operate the device without a microwave energy absorbing load attached. Never look into an open waveguide or antenna while the device is energized.

8.

CAUTION

High voltage parts may become uncovered when outer cabinet is removed.

SÄKERHETSÅTGÄRDER ATT TAGA HÄNSYN TILL VID FELSÖKNING OCH REPARATION

Till skillnad från andra apparater har mikrovågsugnar högspänningstark-strömsutrustning. Även om ugnen är helt säker vid normalt bruk, skall största försiktighet vidtagas vid reparation.

VARNING

Vid reparation i närheten, eller vid byte av magnetron, skall armbandsur avtagas.

1. Kontroll av jordning.

Använd ej en 2-ledad anslutningssladd. Mikrovågsugnen är tillverkad så att den skall användas jordad. Tillse därför att ugnen är ordentligt jordad innan arbetet påbörjas.

2. Om dörrlåset, dörrromkopplaren eller dörrtillslutningen visar någon felaktighet, använd ej ugnen innan felet är avhjälpt.

Om ugnen används när något av dessa fel har uppstått kan ev. Mikrovågsläckage uppstå.


VARNING

Sätt aldrig på ugnen innan följande har kontrollerats:

- (A) Dörren är ordentligt stängd.
- (B) Dörrtättningslisten inte är skadad.
- (C) Dörren är skev, böjd eller otät.
- (D) Gångjärnen är hela.
- (E) Att annan synlig skada inte finns.

3. Varning för elektrisk ström i högspänningskondensatorn

CA: 30 sekunder efter det att ugnen stängts av, kvarstår en elektrisk laddning i högspänningskondensatorn. Vid utbyte eller kontroll av delar, stäng av ugnen, vänta i 30 sekunder och kortslut därefter kondensatorn (Anslutningen för ledning från dioden) till ytter höljets jord genom att använda en isolerad kortslutningskabel.

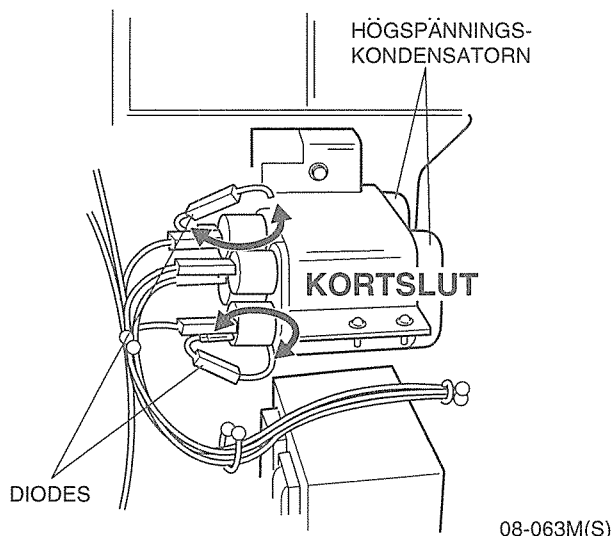

Kontrollera att kortslutningskabeln är jordad till chassit innan högspänningskondensatorn kortslutes

VIKTIGT

1. Under drift finns spänning överstigande 250V i apparaten på följande ställen:

- *Magnetronen
- *Högspänningstransformatorn
- *Högspänningsdioden
- *Högspänningskondensatorn

Stor försiktighet skall iakttas under felsökning och reparation.

2. Om ugnen används med felaktigt installerad dörr och/eller magnetron kan mikrovågsläckage överstigande 5mW/cm² uppträda. Följaktligen är det absolut nödvändigt att kontrollera att dörr och/eller magnetron är korrekt och säkert installerade efter utbyte eller reparation.

VARNING

Gör inga mätningar i högspänningsdelen eller av glödspänning för magnetronen.

4. Vid byte av delar, tag alltid ur nätkontakten från vägguttaget och urladda högspänningskondensatorema.

5. Kontroll efter reparation.

- (A) Efter reparation eller vid byte av delar tillse att skruvar, flänsar och tätningar ej fattas eller å lösa. Mikrovågor kan läcka ut om detta ej åtgärdats.
- (B) Alla elektriska kopplingar skall < ara väl förbundna innan nätkontakten anslutes.

6. Stoppa aldrig in någon form av metallföremål i håligheter eller springor under det att apparaten är påslagen.

Metallföremål kan fungera som antenn och förorsaka mikrovågs läckage.

7.

VARNING

för

MIKROVÅGSSTRÅLNING.

Mikrovågsenergi kan stråla från magnetronen eller från annan mikrovågsgenererande anordning om den används eller ansluts felaktigt. Alla anslutningar för mikrovåg, såsom flänsar och tätningar måste vara betryggande ur säkerhetssynpunkt. Starta aldrig anordningen utan mikrovågsabsorberande belastning. Mikrovågsstrålning från en öppen vågledare eller antenn har sådan strålningstäthet att uppenbar skaderisk föreligger.

LAITTEEN HUOLLOSSA JA KORJAUKSESSA HUOMIOONOTETTAVIA VAROTOIMENPITEITÄ

Toisin kuin monet muut kotitalouskoneet toimii mikroaaltouuni suurella käyttöjännitteellä ja-virralla. Vaikkakin uuni on täysin turvallinen normaalikäytössä, on sen korjauksessa noudatettava ehdottomasti varotoimenpiteitä.

VAROITUS

Magnetronia vaihdettaessa tai sen läheisyydessä työskennellessä tulee rannekello irroittaa.

1. Jos uunin oven lukkoon, sen kytkimeen tai tiivistisiin tai itse oveen tulee jokin vika, ei uunia saa käyttää ennenkuin vika on korjattu.

Jos uunia käytetään oven tai sen jonkin osan ollessa vioittunut, saattaa tapahtua vaarallista mikroaaltovuotoa.


VAROITUS

Ennen uunin käynnistämistä on aina ensin tarkistettava että:

- (A) Uunin ovi on suljettu kunnolla.
- (B) Oven tiivistyslistat eivät ole vahingoittuneet.
- (C) Ovi ei ole vino, vääntynyt tai epätiivis.
- (D) Oven saranat ovat ehjät.
- (E) Ettei uuni ole mitenkään näkyvästi vaurioitunut

2. Huom! Sähkö varautuu korkeajännitekondensaattoriin.

Kun uuni on kytketty OFF-asentoon jää sähkövaraus korkeajännitekondensaattoriin noin 30: neksi sekunniksi. Kun asennat tai tarkistat uunin osia kytke uuni OFF-asentoon, odota 30 sekuntia ja oikosulje korkeajännitekondensaattorin kosketin (Diodin liitosjohtimen pääte) kojeiston runkoa vasten eristetyllä "hyppylangalla".

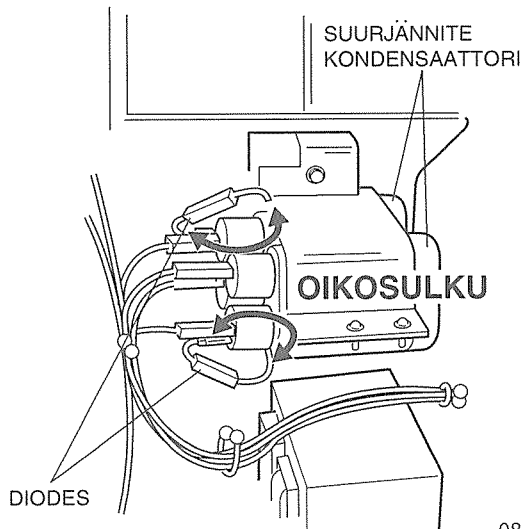

08-063M(F)

Varmistakaa että hyppylanka on maadoitettu laitteen rungon sivuun ennen suurjännite kondensaattorin päätteen oikosulkemista

Tärkeä varoitus

1. Laitteen toimiessa seuraavissa osissa on yli 250 V suurjännite.

- *Magnetroni
- *Suurjännitemuuntaja
- *Suurjännitediodi
- *Suurjännitekondensaattori

Laitteen korjaamisessa täytyy siksi olla erityisen varovainen.

2. Uunin väärin asennettu luukku tai magnetroni voi aiheuttaa mikroaaltovuotoa, joka ylittää 5 m W/cm². Tämän vuoksi korjauksen ja osien vaihdon jälkeen on ehdottomasti tarkastettava magnetronin ja uuniluukun oikea asennus.

VAROITUS

Magnetronin hehkujännitettä tai sen suurjänniteosan jännitettä ei saa mitata.

3. Kun laitteeseen vaihdetaan osia on virtajohdin aina irroitettava seinästä ja korkeajännitekondensaattorien jännite purettava.

4. Tarkistukset korjaustöiden jälkeen.

- (A) Korjauksen tai osien vaihdon jälkeen on tarkistettava että kaikki ruuvit, laipat ja tiivisteet ovat paikallaan ja kiristettyinä. Mikroaallot saattavat vuotaa löysistä liitoksista.
- (B) Kaikki sähköiset liitännät on suoritettava ennen virran kytkemistä.

5. Uunin kotelon reikiin tai aukkoihin ei saa työntää mitään metalliesineitä uunin ollessa käytössä.

Metalliesineet voivat toimia antennina ja aiheuttaa mikroaaltovuotoa.

6.

MIKROAALTOSÄTEILYÄ

Käyttäjä ei saa joutua alttiiksi mikroaaltoenergialle, jota voi säteillä magnetronista tai muusta mikroaaltoja kehittävästä laitteesta, jos sitä käytetään väärin tai jos se kytketään väärin. Kaikkien mikroaaltoliitännöiden sekä syöttö-että ulostulopuolella, aaltoputkien laippojen ja tiivisteiden tulee olla varmistettuja. Mikroaaltouunia ei koskaan saa käyttää ilman kuormaa jossa mikroaaltoenergiaa kuluu. Avoimeen aaltoputkeen tai antenniin ei koskaan saa katsoa virran ollessa kytkettynä.

SIKKERHETSTILTAK SOM MÅ TAS HENSYN TIL VED FEILSØKING OG REPARASJON

I motsetning til annet kjøkkenutstyr har mikrobølgeovnen høyspenning, sterkstrømsutstyr. Selv om ovnen er helt sikker ved normal bruk, må man være spesielt forsiktig ved reparasjon.

ADVARSEL

Ved reparasjon i nærheten, eller ved bytte av magnetron skal armbåndsur tas av.

1. Kontroll av jording.

Bruk ikke 2-lederkabel, mikrobølgeovnen er laget slik at den skal jordes. Pass derfor på at ovnen er skikkelig jordnet før arbeidet påbegynnes.

2. Om det finnes feil på dørlås, dørbryter eller dørtetning må ikke ovnen brukes før feilen er rettet. I motsatt fall kan mikrobølgelekkasje oppstå.


ADVARSEL

Bruk aldri ovnen før følgende er kontrollert:

- A. Døren er ordentlig stengt.
- B. Dørtetningslisten ikke er skadet.
- C. Døren er skjev, bøyd eller utett.
- D. Gangjernene er hele.
- E. At det ikke er annen synlig skade.

3. Advarsel vedrørende elektrisk ladning i høyspenning kondensatoren.

Ca. 30 sekunder etter at ovnen er slått av, vil det fortsatt være igjen en elektrisk ladning i høyspenning kondensatoren. Ved kontroll eller skifting av deler, slå av ovnen, vent 30 sekunder og kortslutt høyspenning kondensatoren (Sammenkoblingspunkt for ledning fra dioden) til chassis med en isolert ledning som vist på.

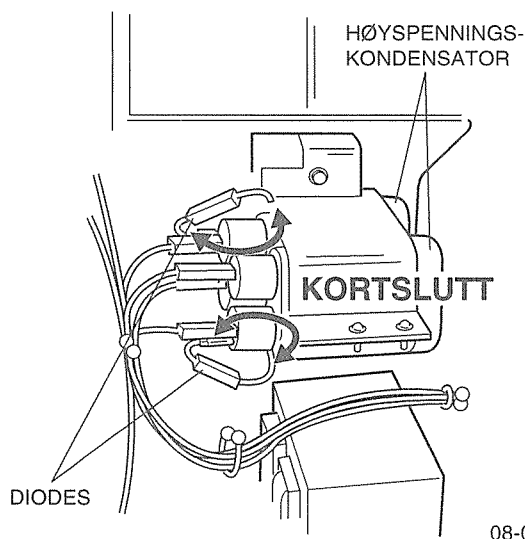

Vær sikker på at kortslutningskabeln er jordnet til chassis før kortslutning av høyspenningskondensatoren

Advarsel

1. Høyspenning over 250 volt finnes på følgende deler under drift:

- *Magnetron
- *Høyspenningstransformator
- *Høyspenningslikeretter
- *Høyspenningskondensator

Vær spesielt oppmerksom under arbeid med disse delene.

2. Hvis mikrobølgeovnen blir brukt med feil montert dørhengsler eller magnetron, kan dette forårsake lekkasje av mikrobølgestråling på mer enn 5mW/cm². Derfor er det absolutt påkrevet å kontrollere at dørhengsler og magnetron er korrekt montert etter reparasjon eller utskifting.

ADVARSEL

Foreta aldri målinger i høyspenningsdelen eller glødespenningen for magnetronen.

4. Ved utskifting av deler, fjern alltid støpslet fra kontakten og kortslutt høyspenningskondensatorene.

5. Kontroller etter reparasjon:

- (A) At skruer, flenser og tetninger ikke mangler eller er løse. Mikrobølger kan ellers lekke ut.
- (B) At alle elektriske koblinger er i orden før kontakten settes i.

6. Putt aldri metallgjenstander inn i hull eller sprekker mens ovnen er tilkoblet.

Slike kan virke som antenne og forårsake mikrobølgelekkasje.

7.

ADVARSEL MOT MIKROBØLGESTRALING

Personer må aldri utsettes for stråling av mikrobølgeenergi. Alle tilkoblinger for mikrobølger, som flenser og tetninger må være sikkerhetsmessig betryggende utført. Start aldri apparatet uten mikrobølgeabsorberende belastning. Mikrobølgestråling fra åpen bølgeleder eller antenne har så stor strålingstetthet at det er stor risiko for skadevirkninger.

SIKKERHEDSFORSKRIFTER VED FEJLFINDING OG REPARATION

I modsætning til mange andre elektriske apparater arbejder mikrobølgeovne ved høje spændinger og store strømme. Selv om en mikrobølgeovn er fuldstændig sikker ved normal brug, skal reparation foretages med højeste forsigtighed.

ADVARSEL

Tag Deres armbåndsurs af, hvis De skal arbejde i nærheden af eller udskifte magnetronen.

1. Kontrol af jordforbindelse

Tilslut ikke ovnen ved hjælp af et 2-leder kabel. Mikrobølgeovnen er konstrueret til at arbejde med jordforbindelse. Se derfor efter at ovnen er forsvarligt jordet, før reparationen påbegyndes.

2. Hvis der er fejl ved låsen til ovndøren, omskifteren for døren eller tætningen af døren, må ovnen ikke anvendes, før fejlen er afhjulpet.


Hvis ovnen bruges, uden at sådanne fejl er afhjulpet, er der risiko for udstråling af mikrobølger.

ADVARSEL

Tænd aldrig for ovnen, før De har kontrolleret, at
(A) Døren er forsvarligt lukket,
(B) Tætningslisten omkring døren ikke er beskadiget,
(C) Ovndøren ikke er skæv, bøjet eller utæt,
(D) Hængslerne er hele, og
(E) Der ikke findes andre synlige beskadigelser.

3. Advarsel om opladning af højspændingskondensatoren

Indtil omkring 30 sekunder efter at ovnen er afbrudt, vil højspændingskondensatoren stadig være opladet. Afbryd ovnen, når De skal udskifte eller kontrollere komponenter, vent 30 sekunder og kortslut højspændingskondensatorens ene tilslutning (Tilslutning for ledning fra dioden) til chassiset med et isoleret stykke ledning.

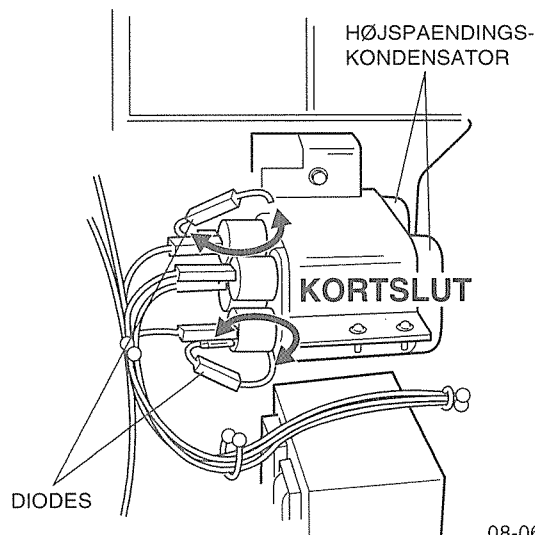

08-063M(D)

Kortslutningstråden skal være stelforbundet før højspændingskondensatoren kortsluttes

VIGTIGT

1) Følgende komponenter bærer højspænding (over 250 volt) under drift:

- *Magnetron
- *Højspændingstransformator
- *Højspændingsensretter
- *Højspændingskondensator

Extra opmærksomhed bør udvises ved reparation/fejlfinding.

2) Såfremt ovnen betjenes med forkert monteret dørhængsel eller magnetron, vil der være risiko for mikrobølgelækage over $5\text{mW}/\text{cm}^2$.

Det er derfor bydende nødvendigt at kontrollere disse komponenter efter endt reparation/udskiftning.

ADVARSEL

Undgå at berøre kredsløbene, hverken med hånden eller med isoleret værktøj, mens ovnen er i gang.

4. Hvis det er nødvendigt at udskifte komponenter, skal De altid fjerne netstikket fra stikkontakten og aflade højspændingskondensatorerne.

5. Kontrol efter reparation

- (A) Efter reparation eller udskiftning af komponenter må De se efter, at alle skruer og tætningslister er på plads og fastspændt. Der kan opstå lækage af mikrobølger, hvis skruerne ikke er forsvarligt strammet.
- (B) Alle elektriske forbindelser skal være i orden, før De sætter netstikket i stikkontakten.

6. Sæt under ingen omstændigheder metalgenstande i åbninger på apparatet, mens det er i gang.

Metalgenstande kan virke som antenner og forårsage lækage af mikrobølger.

7.

FORSIGTIG MIKROBØLGEUDSTRÅLING

Personer må ikke udsættes for mikrobølgeenergi, som kan udstråles fra magnetronen eller anden mikrobølgegenerator, hvis den er forkert anvendt eller forbundet. Alle mikrobølgefórbindinger, bølgeledere, flanger og pakninger skal være sikre. Tilslut aldrig apparatet uden en belastning, som kan absorbere mikrobølgeenergi. Se aldrig ind i en åben bølgeleder eller antenne, mens apparatet er i gang. Mikrobølgestrålingen fra en åben bølgeleder eller antenne har så stor intensitet, at der er overhængende risiko for skader.

DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE

CAUTION

Servicemen should remove their watches whenever working close to or replacing the magnetron.

1. Magnetrons (Upper and Lower)


Upper magnetrons (Right and Left)

- (A) Discharge electric charge remaining on the high voltage capacitors.
- (B) Remove the entire rear panel by removing screws as shown in figure.
- (C) Disconnect all lead wires from magnetron and thermal cutout.
- (D) Remove the 4 screws holding magnetron.
- (E) Remove 2 screws holding thermal cutout.
- (F) Remove the mounting bracket from magnetron and install it on the new magnetron.


Lower magnetrons (Right and Left)

- (A) Discharge electric charge remaining on the high voltage capacitors.
- (B) Remove the entire rear panel by removing screws as shown in figure.
- (C) Disconnect all lead wires from magnetron and thermal cutout.
- (D) Remove the 4 screws holding magnetron.
- (E) Remove 2 screws holding thermal cutout.
- (F) Remove the air guide from magnetron and install it on the new magnetron.

NOTE: To prevent microwave leakage, tighten mounting screws properly making sure there is no gap between the waveguide and the magnetron.

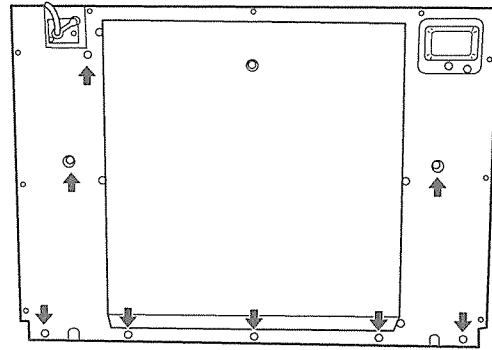

02-049M

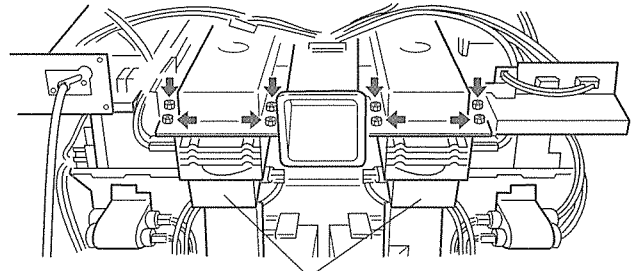


UPPER
MAGNETRONS

02-050M

CAUTION


When connecting 2 filament lead wires to the magnetron terminals, be sure to connect the lead wires in the correct position. The lead wire with blue connector should be connected to "FA terminal" and white one should be connected to "F terminal". (See Figure)

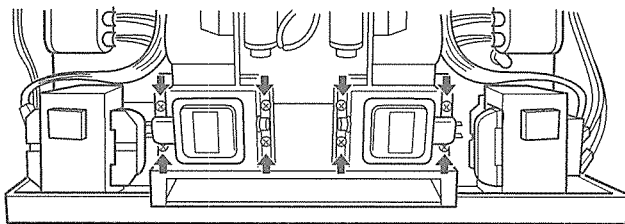

02-051M

MOUNTING
BRACKET

SLIDE IN/OUT

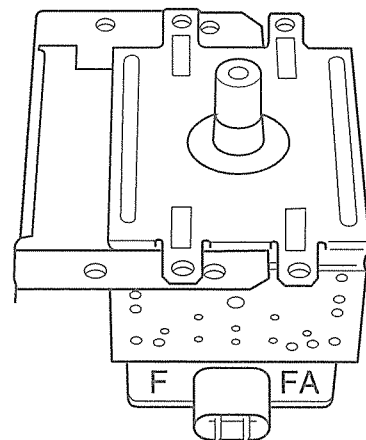

08-039M

2. Digital programmer circuit board

- (A) Remove grounding screw for membrane switch and D.P.C. ground.
- (B) Remove 2 screws holding control panel assembly to detach it from main unit then remove connectors.
- (C) Remove 2 screws holding the D.P.C. board and remove the board by freeing catch hooks.

NOTE: Please use care in handling the power supply P.C.B. and D.P.C. board to avoid damage.

3. Low voltage transformer and/or power relays

NOTE: Be sure to ground any static electric charge built up on your body before handling the DPC.




- (A) Using solder wick or a desoldering tool and 30W soldering iron, carefully remove all solder from the terminal pins of the low voltage transformer and/or power relays.

NOTE: Do not use a soldering iron or desoldering tool of more than 30 watts on DPC contacts.

- (B) With all the terminal pins cleaned and separated from DPC contacts, remove the defective transformer/power relays and install new transformer/power relays making sure all terminal pins are inserted completely. Resolder all terminal contacts carefully.

4. Disassembly of door assembly

- (A) Detach the door spring ends from right and left door arms.
- (B) Remove the arm lever right and left by removing 2 screws each on both sides.
- (C) Remove the sashes right and left by removing 1 screw each on both sides.
- (D) By holding the door assembly, remove the right and left sides door hinge pins.
The door assembly is now free from the oven.
- (E) Remove 3 screws holding the door A.
- (F) Remove the door C by using a flat screwdriver as figure.
- (G) Remove 4 screws holding door handle.
- (H) Separate door A and door E.
- (I) Remove the door arms by removing 1 pin each on both sides.

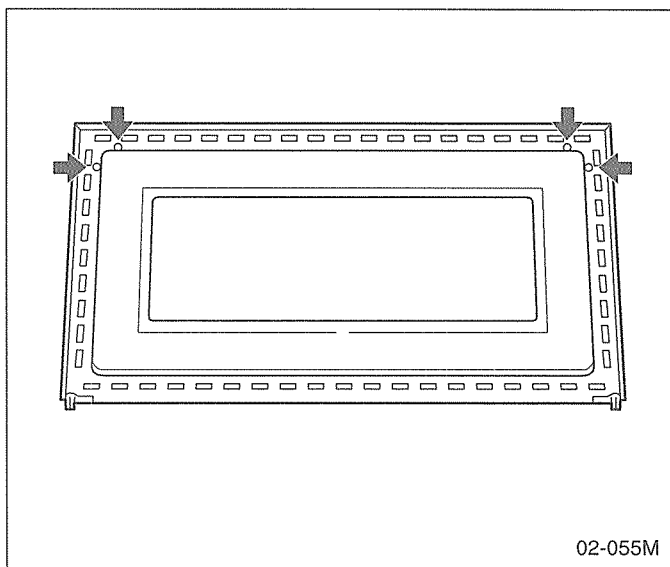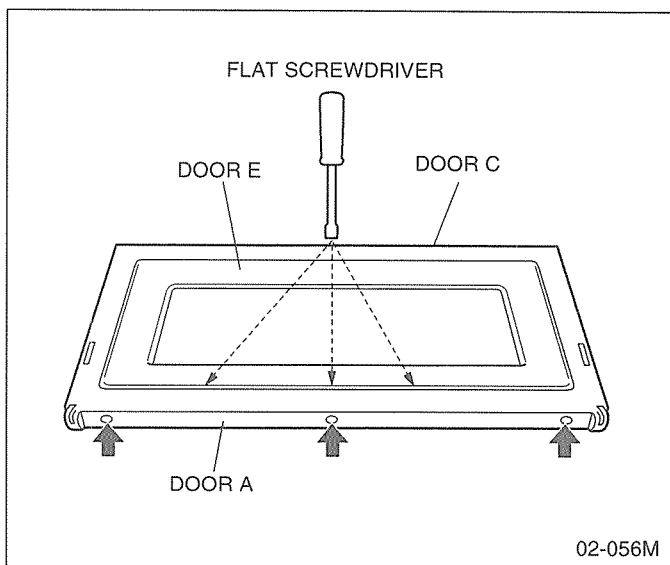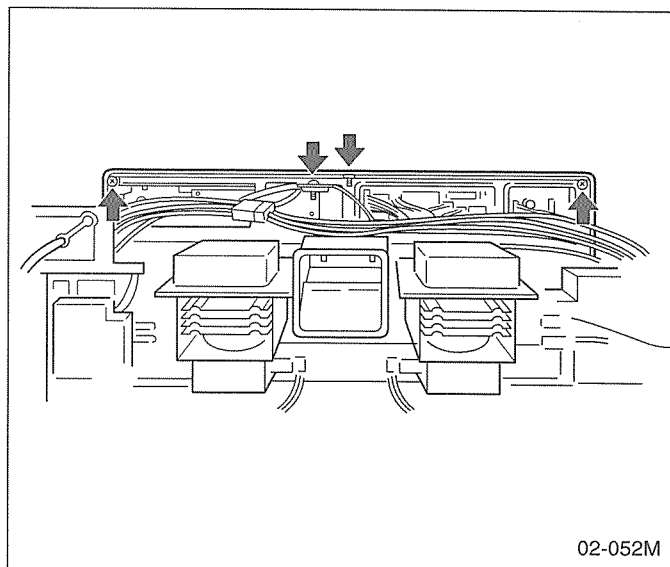

5. Upper antenna (Right and Left)





Upper antenna (Right and Left)

- (A) Remove 8 plastic clips holding ceiling plate and exhaust guides by using flat screwdriver or the like.
- (B) Remove 2 screws holding upper antenna assy by inserting screwdriver through the opening on the antenna as shown in figure.

6. Lower antenna (Right and Left)

Lower antenna (Right and Left)

- (A) To remove the floor shelf, insert a screwdriver through the openings on the right and left sides of the oven cavity and carefully lift the floor shelf as shown in figure.
- (B) Remove 2 screws holding lower antenna assy by inserting screwdriver through the opening on the antenna as shown in figure.

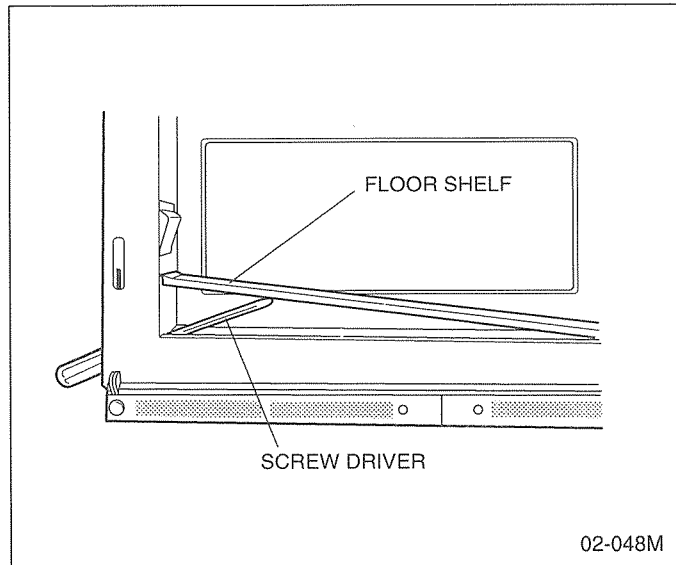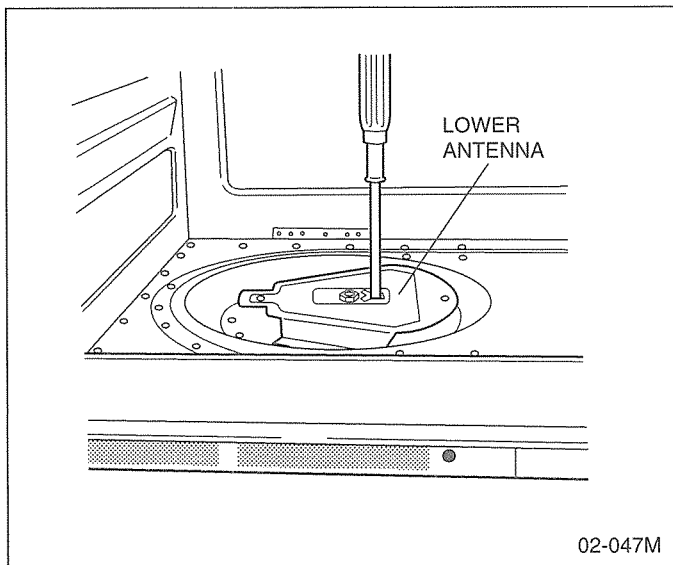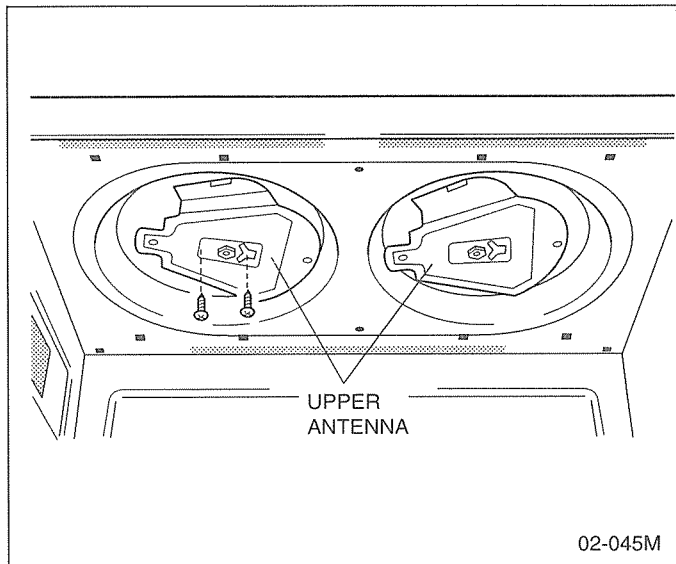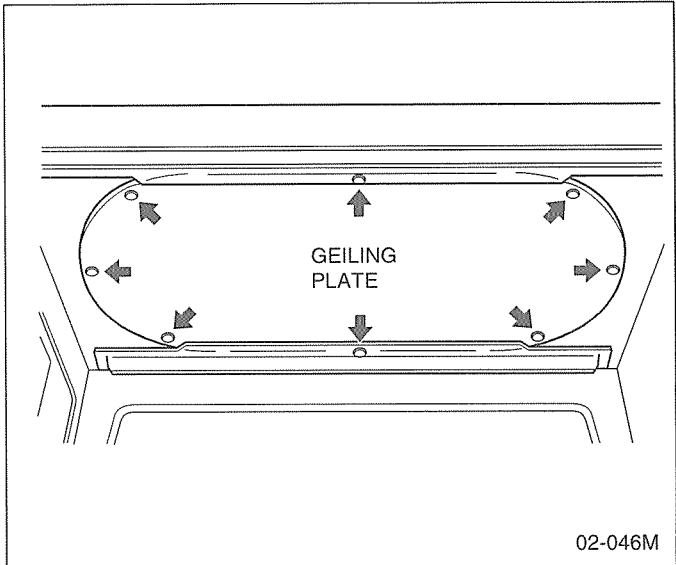

7. Replacement of temperature sensor (Thermal protector)

- (A) Cut 2 lead wires at the top of sensor terminals.
- (B) Remove 2 screws holding temp sensor and replace with new one.
- (C) Solder the lead wires securely to the sensor terminals.


8. Replacement of antenna motors (upper and lower)

- (A) The upper antenna motor may be removed by disconnecting the lead wire connectors and removing its 2 mounting screws.
- (B) To remove the lower antenna motor, carefully place the unit on its left side.
- (C) Remove the motor cover by removing 2 screws and follow same procedure as for upper antenna.

CAUTION

There are two types of antenna motors Therefore please replace with correct one as showing below.

Upper Antenna Motor	PART NO. : ANE61446030AP (RATED: 120V)
Lower Antenna Motor	PART NO. : A6144-3280 (RATED: 120V)

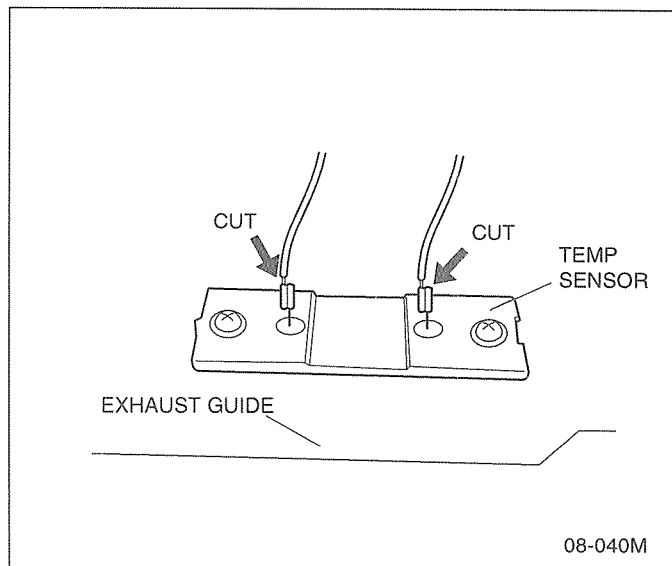

COMPONENT TEST PROCEDURE

CAUTION

1. High voltage is present at the high voltage terminal of the high voltage transformer during any cook cycle.
2. It is neither necessary nor advisable to attempt measurement of the high voltage.
3. Before touching any oven components, or wiring, always unplug the oven from its power source and discharge the high voltage capacitor.

1. High voltage transformer

- (A) Remove connections from the transformer terminals and check continuity.
- (B) Normal (cold) resistance readings should be as follows:
- | | |
|-------------------------|------------------------------------|
| Secondary winding | Approx. 40 Ω ~ 100 Ω |
| Filament winding | Approx. 0 Ω |
| Primary winding | Approx. 0 Ω ~ 3 Ω |




2. High voltage capacitor

- (A) Check continuity of capacitor with meter on highest OHM scale.
- (B) A normal capacitor will show continuity for a short time, and then indicate 9M Ω once the capacitor is charged.
- (C) A shorted capacitor will show continuous continuity.
- (D) An open capacitor will show constant 9M Ω .
- (E) Resistance between each terminal and chassis should be infinite.

3. Magnetron

Continuity checks can only indicate an open filament or a shorted magnetron. To diagnose for an open filament or shorted magnetron.

- (A) Isolate magnetron from the circuit by disconnecting the leads.
- (B) A continuity check across magnetron filament terminals should indicate one ohm or less.
- (C) A continuity check between each filament terminal and magnetron case should read open.

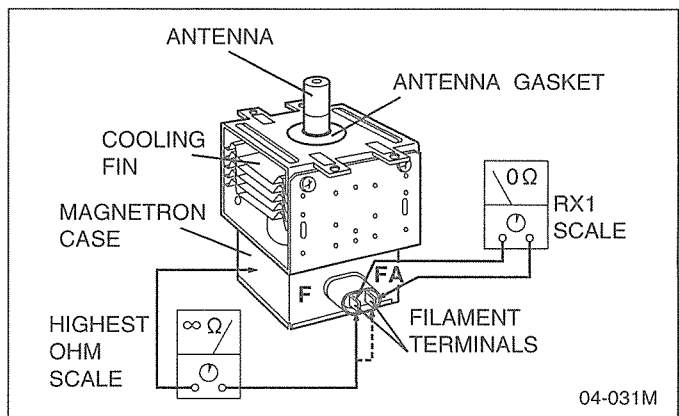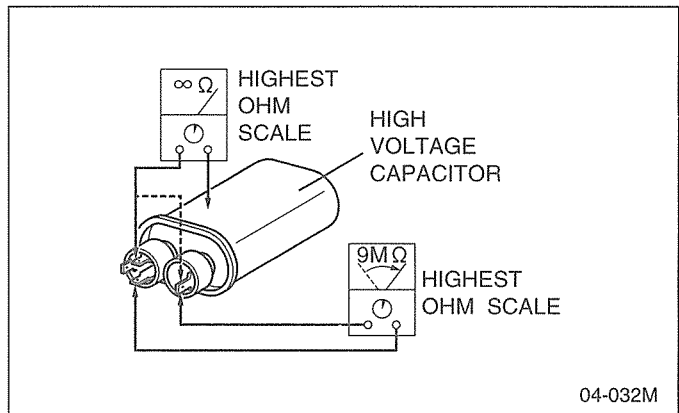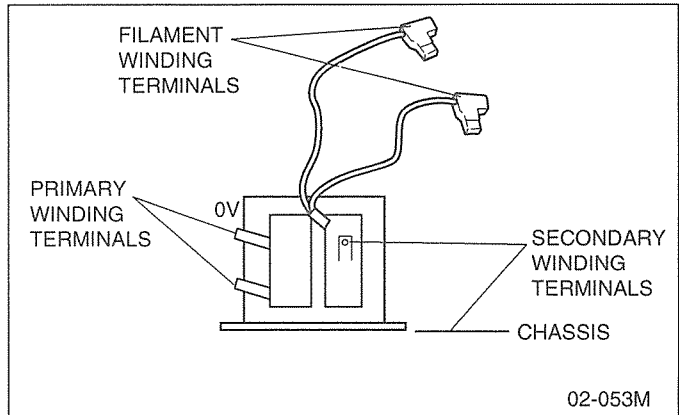

4. Diode

- (A) Isolate the diode from the circuit by disconnecting the leads.
- (B) With the ohmmeter set on the highest resistance scale, measure the resistance across the diode terminals. Reverse the meter leads and again observe the resistance reading. Meter with 6V, 9V or higher voltage batteries should be used to check the front-to-back resistance of the diode, otherwise an infinite resistance may be read in both directions.
- A normal diode's resistance will be infinite in one direction and several hundred k Ω in the other direction.

5. Membrane key board

(Membrane switch assembly)

Check continuity between switch terminals, by tapping an appropriate pad on the key board. The contacts assignment of the respective pads on the key board is as shown in digital programmer circuit.

6. Protector diode

- (A) Isolate the protector diode assembly from the circuit by disconnecting its leads.
- (B) With the ohmmeter set on the highest resistance scale, measure the resistance across the protector diode terminals. Reverse the meter leads and again observe the resistance reading. A normal protector diode's resistance will be infinite in both directions.
- It is faulty if it shows continuity in one or both directions.

7. Temp sensor (Thermal protector)

A temp sensor is mounted on exhaust guide. Its purpose is to automatically shut off the oven in case the cavity overheats for any reason.

The thermal protector will operate at 257°F (125°C).



The device is connected to the DPC on touch control models.

When the thermal protector exceeds its temperature it will turn off the power to oven cavity and display will go to reset mode.

The cooking program can be reset after cool-down.

THERMISTOR RESISTANCE VALUE

30K-120K at 10°C-30°C (50°F-86°F)

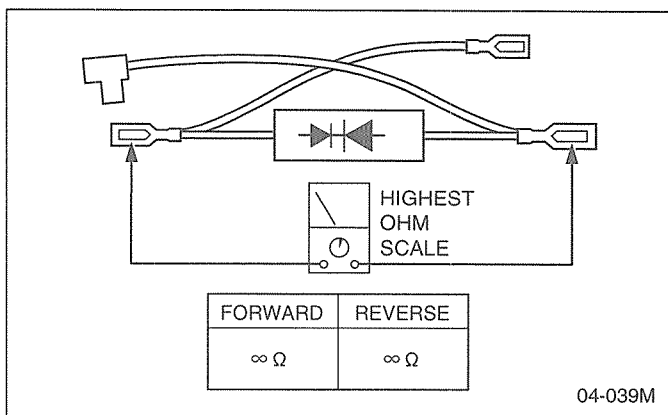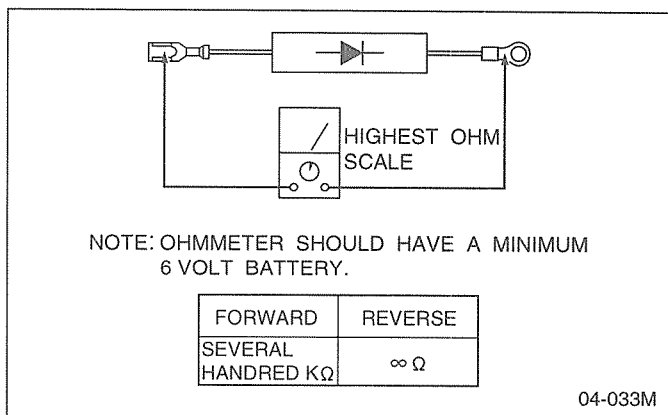

MEASUREMENTS AND ADJUSTMENTS

1. Adjustment of the safety switch B (Right and Left side)

(A) Switch operation

When the door is slightly opened, the safety switch B opens the main circuit.

The movement of the door from the closed position to the operation position (shown as ℓ) of the switch when it opens the main circuit, must maintain within following tolerances.

SAFETY SWITCH B (ℓ) = 3 mm ~ 5 mm

(When safety switch B opens the main circuit)

Note: Make sure that safety switch A turns off prior to the safety switch B when the door is gradually opened.

(B) How to adjust safety switch B

Loosen 2 screws which secure the safety switch B bracket to the bracket of the oven assembly and then adjust the safety switch B bracket by moving it to either direction as shown in figure.



2. Adjustment of the Short Switch (Right and Left side)

(A) When the door is slightly opened, the Short Switch opens the main circuit and closes the contacts for short circuit.

The movement of door from its closed position to open position at which the Short Switch contacts open the main circuit (shown as ℓ) must maintain within 8 mm ~ 11 mm and at which the switch contacts close the short circuit should be 20 mm ~ 35 mm.

(B) How to adjust

Loosen the 2 screws holding the short switch to the short switch bracket, and then adjust the safety switch A by moving it to either direction as shown in figure.

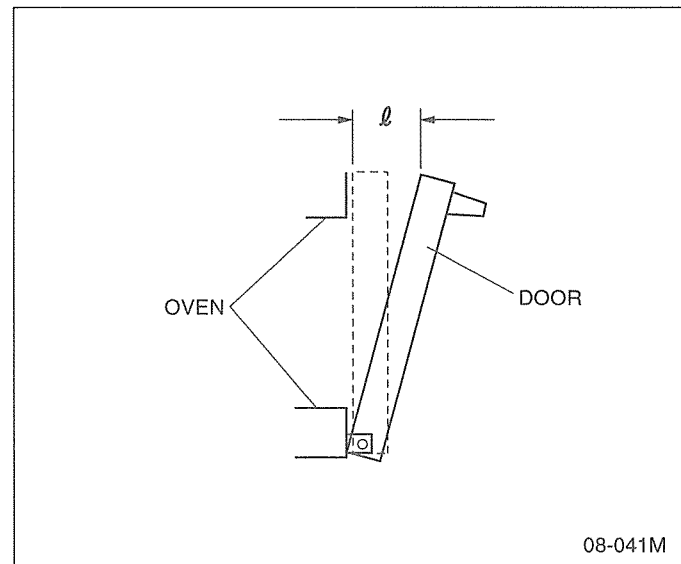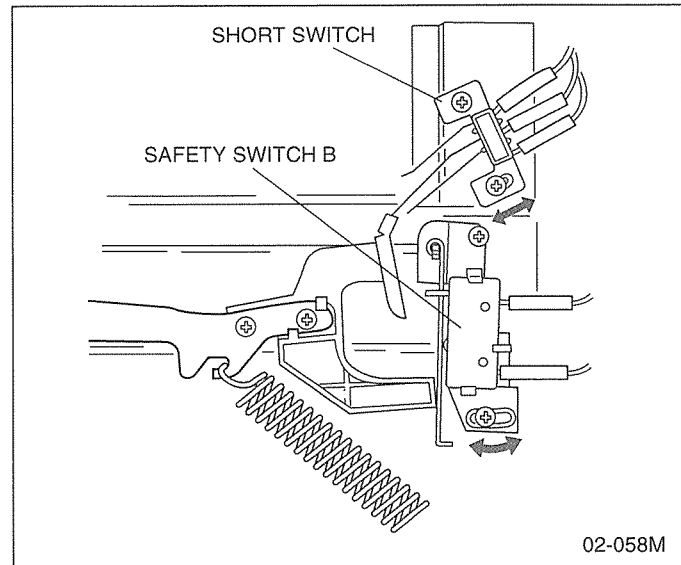

3. Adjustment of the safety switch A (Door switch) (Right and Left side)

(A) Switch operation

When the door is slightly opened, the contacts of safety switch A opened to give digital programmer circuit the information that the door is opened. The allowable movement of the door from the closed position to the operating position (shown as ℓ) of the switch when it opens the circuit, is specified as follows;


SAFETY SWITCH A (ℓ) = 1 mm ~ 3 mm

(When safety switch A opens the circuit)

Note: Make sure that safety switch A turn off prior to the safety switch B when the door is gradually opened.

(B) How to adjust safety switch A

Loosen 2 screws which secure the safety switch A bracket to the bracket of the oven assembly and then adjust the safety switch A bracket by moving it to either direction as shown in figure.

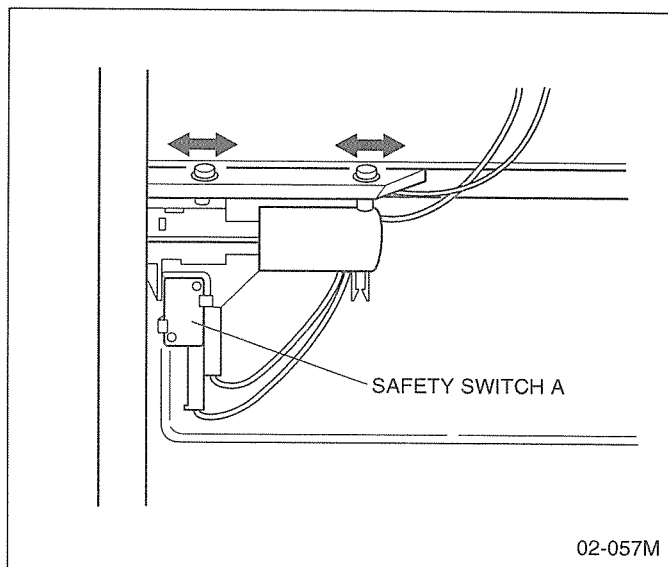

4. Measurement of microwave output

The output power of the magnetron can be determined by performing IEC standard test procedures. However, it is possible to test the magnetron by following procedure outlined below.

Necessary equipment:

* 1 litre beaker * Glass thermometer

* Wrist watch or stopwatch

NOTE: Check the line voltage under load to ensure it meets specifications. Low voltage condition will cause a reduction in magnetron output. Temperature readings and heating time, should be as accurate as possible.

Output power performance test procedure.

(A) Fill the beaker with exactly one litre of tap water.

Stir the water using the thermometer and note the temperature.


(Record as T1)

(B) Place the beaker in the center of cook plate.


Set the oven for High power and heat for exactly one minute.

(C) After completion of the heating cycle, stir the water again with the thermometer and note the temperature.

(Record as T2)


The normal temperature rise (T2-T1) at High power position () for each models is as shown in following table.

Model	Temperature Rise (1 ℓ - 1 Min.)
NE-2740	Min. 22C°
NE-1880	Min. 16C°
NE-1840	Min. 16C°
NE-1540	Min. 13C°

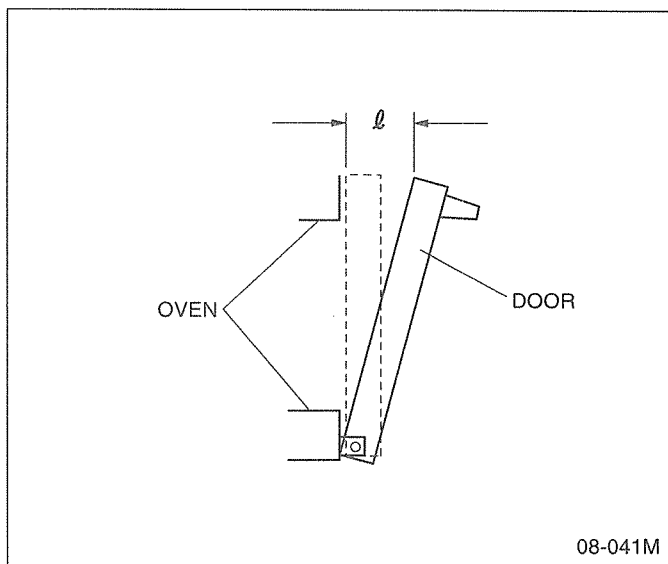

TROUBLESHOOTING GUIDE



CAUTION

1. Check grounding before checking for trouble.
2. Be careful of the high voltage circuit.
3. Discharge high voltage capacitor.
4. When checking the continuity of the switches or the high voltage transformer, disconnect one lead wire from these parts and then check continuity with the AC plug removed. To do otherwise may result in a false reading or damage to your meter.
When disconnecting a plastic connector from a terminal, you must hold the plastic connector instead of the lead wire and then disconnect it, otherwise lead wire may be open or the connector cannot be removed.
5. Be sure to ground any static electric charge built up in your body, before handling the D.P.C.
6. A 230-240V AC is present at the shaded area  of the power supply circuit board (Terminals of power relays and primary circuit of low voltage transformer). When troubleshooting, be cautious of possible electrical shock hazard.

First of all operate the microwave oven following the correct operating procedures described on pages 3 of this service manual in order to find the exact cause of any trouble.



NOTE: If the unit shows faulty symptom as shown below, check the parts listed in possible cause column depending on failure indication e.g. F81, F82 in the display.

[TROUBLE] Oven does not operate at all or oven does not start cooking. NE-2740

DISPLAY	CONDITIONS	POSSIBLE CAUSE	TIMING OF FAILURE INDICATION
F33	Open temperature sensor (exhaust)	1.Temperature sensor failure 2.Digital programmer circuit failure 3.Loose connector CN5	It is appeared when failure occurred.
F34	Short temperature sensor (exhaust)	1.Temperature sensor failure 2.Digital programmer circuit failure	It is appeared when failure occurred.
F44		1.Shorted power select switch 2.Shorted membrane switch	It is appeared 2 minutes after failure occurred.
F01 (With continuous beep sounds)	Exhaust temperature exceeds 120°C	1.Burning food in the oven due to over cook	It is appeared when exhaust temperature exceeds above 120°C
F03	Input voltage exceed + 12.5%	1.Increase in power source voltage	It is appeared when the unit is plugged in. Note that it returns normal operation mode by tapping the RESET pad ().
F04	Input voltage is less than – 12.5%	1.Decrease in power source voltage	It is appeared when the unit is plugged in. Note that it returns normal operation mode by tapping the RESET pad ().
F05	Memory failure	1.Digital programmer circuit failure	
No display	1.25A fuse blown	1.Switch failure (short switch) 2.Low-Voltage transformer failure	
No display	1.25A fuse is OK	1.Thermal cutout failure 2.Low voltage transformer failure 3.Digital programmer circuit failure	
F81	No voltage supply to high voltage trans. (lower/left)	1.Relay failure RY-3 (A) 2.Loose connector CN256, CN257 3.Digital programmer circuit failure	It is appeared when failure occurred.
F82	No voltage supply to high voltage trans. (lower/right)	1.Relay failure RY-5 (B) 2.Loose connector CN258, CN259 3.Digital programmer circuit failure	It is appeared when failure occurred.


DISPLAY	CONDITIONS	POSSIBLE CAUSE	TIMING OF FAILURE INDICATION
F83	No voltage supply to high voltage trans. (upper/left)	1.Relay failure RY-7 (C) Loose connector CN260, CN261 2.Digital programmer circuit failure	It is appeared when failure occurred.
F84	No voltage supply to high voltage trans. (upper/right)	1.Relay failure RY-9 (D) Loose connector CN262, CN263 2.Digital programmer circuit failure	It is appeared when failure occurred.
F86	Shorted contacts of RY-3	1.Relay failure RY-3 (A) 2.Digital programmer circuit failure	It is appeared when failure occurred.
F87	Shorted contacts of RY-5	1.Relay failure RY-5 (B) 2.Digital programmer circuit failure	It is appeared when failure occurred.
F88	Shorted contacts of RY-7	1.Relay failure RY-7 (C) 2.Digital programmer circuit failure	It is appeared when failure occurred.
F89	Shorted contacts of RY-9	1.Relay failure RY-9 (D) 2.Digital programmer circuit failure	It is appeared when failure occurred.

[TROUBLE] Oven does not operate at all or oven does not start cooking. NE-1880/1840/1540

DISPLAY	CONDITIONS	POSSIBLE CAUSE	TIMING OF FAILURE INDICATION
F33	Open temperature sensor (exhaust)	1.Temperature sensor failure 2.Digital programmer circuit failure 3.Loose connector CN5	It is appeared when failure occurred.
F34	Short temperature sensor (exhaust)	1.Temperature sensor failure 2.Digital programmer circuit failure	It is appeared when failure occurred.
F44		1.Shorted power select switch 2.Shorted membrane switch	It is appeared 2 minutes after failure occurred.
F01 (With continuous beep sounds)	Exhaust temperature exceeds 120°C	1.Burning food in the oven due to over cook	It is appeared when exhaust temperature exceeds above 120°C
F03	Input voltage exceed + 12.5%	1.Increase in power source voltage	It is appeared when the unit is plugged in. Note that it returns normal operation mode by tapping the RESET pad ().
F04	Input voltage is less than - 12.5%	1.Decrease in power source voltage	It is appeared when the unit is plugged in. Note that it returns normal operation mode by tapping the RESET pad ().
F05	Memory failure	1.Digital programmer circuit failure	
No display	1.25A fuse blown	1.Switch failure (short switch) 2.Low-Voltage transformer failure	
No display	1.25A fuse is OK	1.Thermal cutout failure 2.Low voltage transformer failure 3.Digital programmer circuit failure	
F81	No voltage supply to high voltage transformer (left)	1.Relay failure RY-3 (A) 2.Loose connector CN256, CN257 3.Digital programmer circuit failure	It is appeared when cooking is completed.
F84	No voltage supply to high voltage transformer (right)	1.Relay failure RY-9 (D) 2.Loose connector CN262, CN263 3.Digital programmer circuit failure	It is appeared when cooking is completed.
F86	Shorted contacts of RY-3	1.Relay failure RY-3 (A) 2.Digital programmer circuit failure	It is appeared when failure occurred.
F89	Shorted contacts of RY-9	1.Relay failure RY-9 (D) 2.Digital programmer circuit failure	It is appeared when failure occurred.

EXPLODED VIEW AND PARTS LIST

EXPLODED VIEW

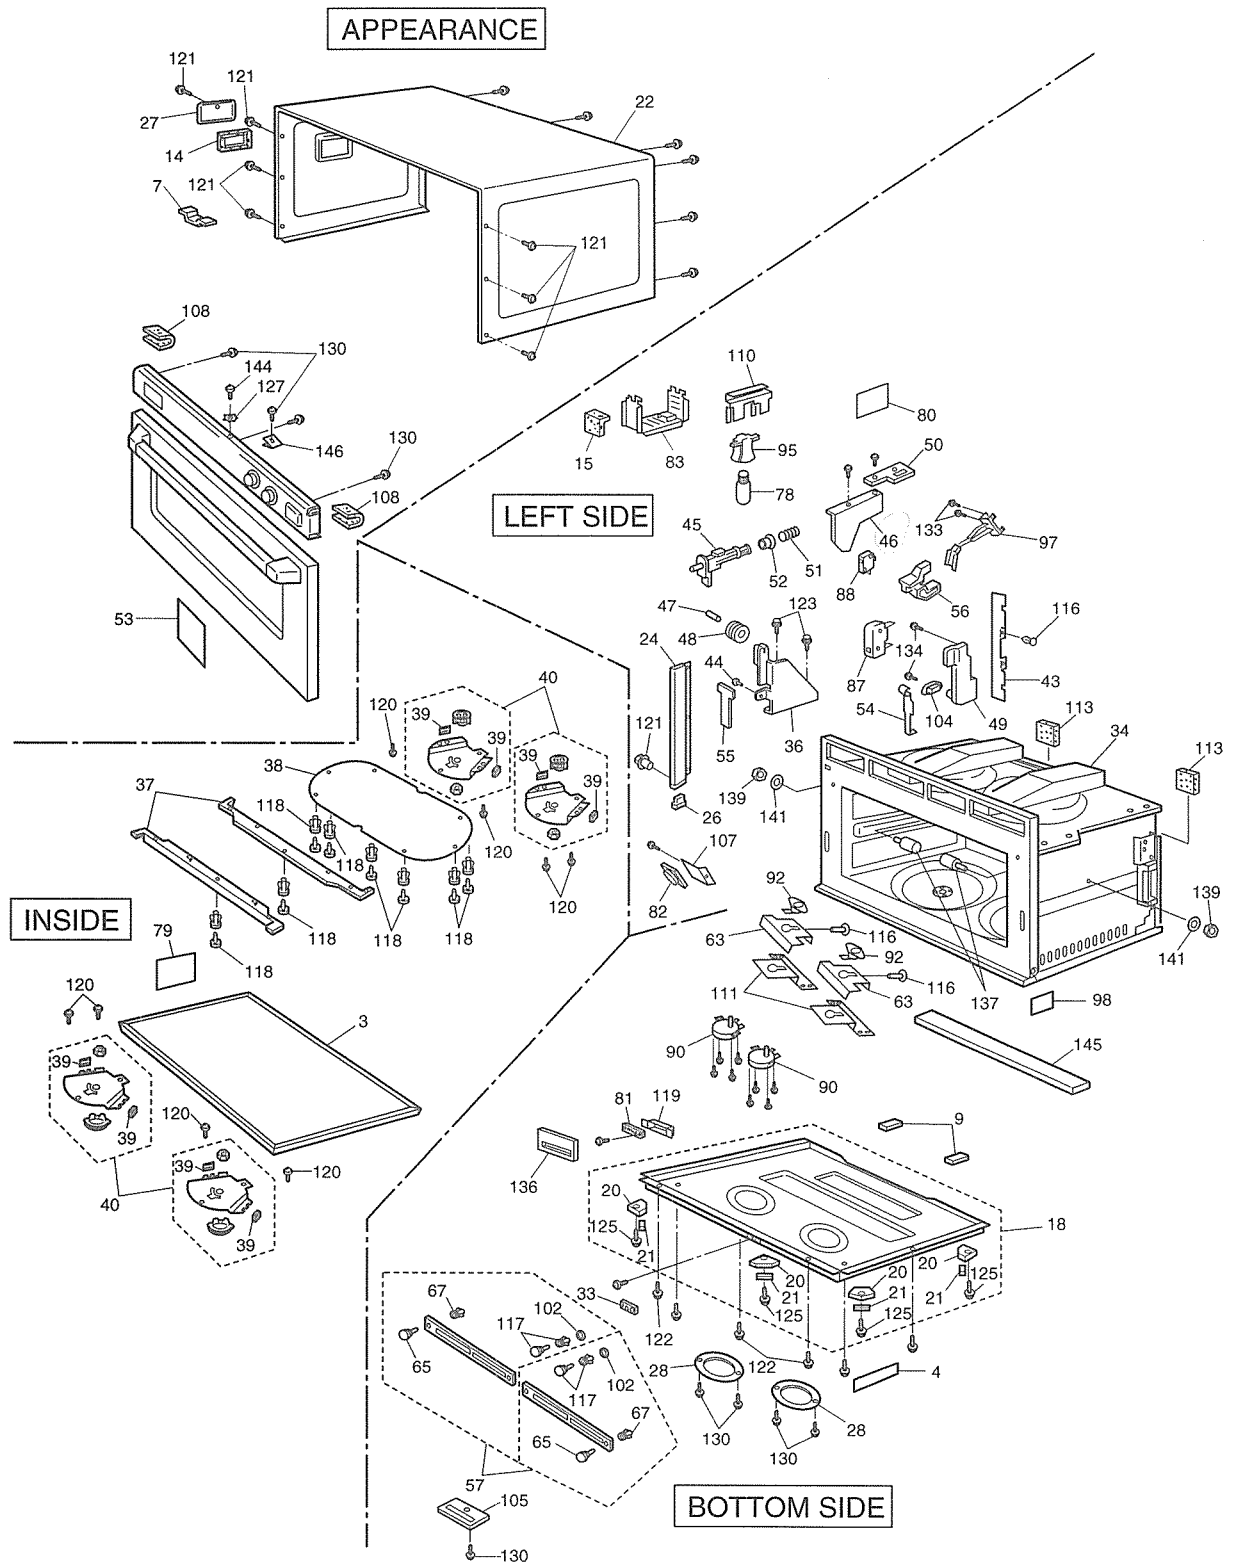

(S-356 EPG)


[illegible]

PARTS LIST



NOTE : When ordering replacement part(s), please use part number(s) shown in this parts list.

Do not use description of the part.

: Important safety notice:

Components identified by  mark have special characteristics important for safety.

When replacing any of these components, use only manufacturer's specified parts.

Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
1		ANE00068U0EP	CAUTION LABEL	1	
2		ANE0033P10GN	FUSE LABEL	1	NE-1540,NE-1840,NE-1880
2		A00333030GP	FUSE LABEL	1	NE-2740
3		A010T3030GP	SHELF	1	
4		A05243600EP	NAME LABEL	1	NE-1540
4		A05243580EP	NAME LABEL	1	NE-1840
4		A05243590EP	NAME LABEL	1	NE-1880
4		A05243560EP	NAME LABEL	1	NE-2740
5		ANE6082P10GN	POWER RELAY BRACKET	1	NE-2740
6		ANE0911000DC	CUSHION RUBBER B	2	NE-2740
7		ANE0911000DF	CUSHION RUBBER B	1	
8		A62304210BP	FUSE	2	NE-1540,NE-1840,NE-1880 10A
8		A67593560GP	FUSE	2	NE-2740 7A
9		ANE0911000EG	CUSHION RUBBER B	2	
10		ANE0911000EH	CUSHION RUBBER B	2	NE-1540,NE-1840,NE-1880
10		ANE0911000EH	CUSHION RUBBER B	4	NE-2740
11		ANE0911000MG	CUSHION RUBBER B	2	NE-2740
12		ANE0917000EB	CUSHION RUBBER B	2	
13		ANE0921000CG	CUSHION RUBBER C	1	
14		ANE000Z000AA	CUSHION RUBBER C	15	
15		ANE0922000JE	CUSHION RUBBER C	1	
16		ANE000Z000AB	CUSHION RUBBER C	2	
17		ANE0924000AB	CUSHION RUBBER C	2	
18		A100A3560GP	BASE	1	(NOTE 1)
19		A100Q3560GP	BACK PANEL	1	
20		A1007-3280	FOOT	4	
21		A1008-3280	RUBBER FOOT	4	
22		A10093030GP	CABINET BODY (U)	1	
23		A101H3170GP	BACK PANEL COVER C	1	
24		A10133030GP	LEFT SIDE SASH	1	
25		A10143030GP	RIGHT SIDE SASH	1	
26		A10203030GP	SASH RUBBER B	1	LEFT
27		A10263030GP	LAMP COVER	1	
28		A10283030GP	ANTENNA MOTOR COVER	2	
29		A10503030GP	SASH RUBBER A	1	RIGHT
30		A10583560GP	BACK PANEL COVER A	1	
31		A10593560GP	BACK PANEL COVER B	1	
32		A11743060GP	SPACER	1	
33		A16163030GP	PANEL B (U)	1	NE-1540,NE-1840,NE-2740
33		A16163060GP	PANEL B (U)	1	NE-1880
34		A200A3560GP	OVEN	1	
35		A200P3030GP	ROLLER BRACKET A	1	RIGHT
36		A200Q3030GP	ROLLER BRACKET B	1	LEFT
37		A20103030GP	CEILING PLATE B	2	
38		A20113030GP	CEILING PLATE	1	
39		A20193030GP	ANTENNA STOPPER	8	
40		A202R3560GP	ANTENNA (U)	4	
41		A22173030GP	BARRIER SHEET A	1	
42		A22183030GP	BARRIER SHEET B	2	NE-2740
43		A22193030GP	BARRIER SHEET C	1	NE-1540,NE-1840,NE-1880
43		A22193030GP	BARRIER SHEET C	2	NE-2740
44		ANE3008P00RN	HINGE PIN	2	
45		A30183030GP	DOOR KEY A	2	


Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
46		A30203030GP	DOOR HOOK A	2	
47		ANE3033-560	DOOR ROLLER PIN	2	
48		ANE3034-560	DOOR GUIDE ROLLER	2	
49		A31123050GP	DOOR HOOK B	2	NE-1540,NE-1840,NE-1880
49		A31123030GP	DOOR HOOK B	2	NE-2740
50		A31363030GP	HOOK SPACER A	2	
51		ANE3155-610	SPRING	2	
52		ANE3157-610	PACKING RUBBER	2	
53		A31863600GP	DOOR PANEL	1	NE-1540
53		A31863580GP	DOOR PANEL	1	NE-1840
53		A31863590GP	DOOR PANEL	1	NE-1880
53		A31863560GP	DOOR PANEL	1	NE-2740
54		A32493030GP	DOOR SWITCH LEVER	2	
55		A32523030GP	DOOR ARM SPACER	2	
56		A33373030GP	DOOR ARM LEVER	2	
57		A400B3040AP	AIR FILTER FLAME (U)	2	
58		A400C3040AP	EXHAUST GUIDE B	1	
59		A402N3030GP	EXHAUST GUIDE A	1	
60		A40253030GP	AIR GUIDE A	2	
61		A40263030GP	AIR GUIDE B	1	
62		A40313030GP	AIR GUIDE C	1	
63		A40423040AP	AIR GUIDE F	2	
64		A40473560GP	AIR GUIDE E	1	
65		A40923030GP	FILTER HANDLE	2	
66		A40963030GP	INSULATION SHEET	1	
67		ANE42408U0AP	FILTER HANDLE B	2	
68		A490W3050GP	FAN MOTOR A (K2RB220BU)	1	NE-1540,NE-1840,NE-1880 48W
68		A490W3030GP	FAN MOTOR A (K2RB32KU)	1	NE-2740 55W
69		A490Y3050GP	FAN MOTOR B (B2RB220AU)	1	NE-1540,NE-1840,NE-1880 48W
69		A490Y3030GP	FAN MOTOR B (BK2RB32JU)	1	NE-2740 55W
70		ANE50328U0AP	MAGNETRON BRACKET	2	
71	⚠	A600B3580GP	H.V.TRANSFORMER	2	NE-1540,NE-1840,NE-1880 1.8KVA
71	⚠	A600B3560GP	H.V.TRANSFORMER	4	NE-2740 1.6KVA
72		A600E3030GP	TERMINAL PLATE	1	
73		A600S3030GP	CAPACITOR BRACKET	2	
74	⚠	ANE6004P60GP	POWER RELAY	1	NE-2740
75		A601L4000AP	TEMP SENSOR	1	
76		A603M3600GP	PC BOARD B (U)	1	NE-1540
76		A603M3580GP	PC BOARD B (U)	1	NE-1840,NE-1880
76		A603M3560GP	PC BOARD B (U)	1	NE-2740
77	⚠	A603Y3560GP	L.V.TRANSFORMER (U)	1	
78		ANE6030Q50GN	INCANDESCENT LAMP	1	240V/25W
79		A60403030GP	OVEN LAMP SHEET	1	
80		A60403040AP	OVEN LAMP SHEET	1	
81		A605Q3030GP	PUSH SWITCH	1	
82		A605S3030GP	PC BOARD H (U)	1	
83		A60733030GP	OVEN LAMP COVER	1	
84		A60823030GP	POWER RELAY BRACKET	1	NE-2740
85	⚠	A60903070BP	H.V.CAPACITOR	4	NE-1540 0.53MF,AC2000V
85	⚠	A60903050BP	H.V.CAPACITOR	4	NE-1840,NE-1880 0.67MF,AC2000V
85	⚠	A63903310GP	H.V.CAPACITOR	4	NE-2740 0.82MF,AC2300V
86		A61073030GP	PARTS BRACKET B	1	
87	⚠	ANE6142-F60	MICROSWITCH	2	NE-1540,NE-1840,NE-1880 V-15G-3C26 SECONDARY LATCH SWITCH
87	⚠	A61423030GP	MICROSWITCH	2	NE-2740 A-20G7-3C108 SECONDARY LATCH SWITCH
88	⚠	ANE61424L0AG	MICROSWITCH	2	V-16G-3C26 PRIMARY LATCH SWITCH
89		ANE0963000AS	CUSHION RUBBER D	2	
90	⚠	A6144-3280	ANTENNA MOTOR	2	2.5W (LOWER)
91	⚠	A61446030AP	ANTENNA MOTOR	2	2.5W (UPPER)

Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
92	⚠	A61454000AP	THERMAL CUTOFF	1	FOR ANTENNA MOTOR
93	⚠	A61454050AP	THERMAL CUTOFF	2	FOR OVEN
94	⚠	A61454210AP	THERMAL CUTOFF	4	FOR MAGNETRON
95	⚠	ANE61522Q0BP	SOCKET	1	
96	⚠	A61583030GP	DOOR SWITCH A	1	RIGHT
97	⚠	A61583050GP	DOOR SWITCH B	1	LEFT
98		A61703030GP	INSULATION SHEET C	1	
99		A62024000AP	DIODE,SI	4	
100	⚠	A62303580GP	FUSE	1	NE-1540,NE-1840,NE-1880 20A
100	⚠	A62303030EP	FUSE	1	NE-2740 20A
101		A62314000AP	FUSE HOLDER	1	NE-1540,NE-1840,NE-1880
101		ANE6231H10RN	FUSE HOLDER	1	NE-2740
102		A62383030GP	SPACER	2	
103		ANE0961000ZL	CUSHION RUBBER D	2	
104		A64083040AP	WASHER	2	
105		A65313030GP	SWITCH HOLDER	1	
106		A65513030GP	H.V.T.MOUNTING	2	NE-2740
107		A65613030GP	BUZZER CASE	1	
108		ANE0962000ZE	CUSHION RUBBER D	2	
109	⚠	A65953170GP	FUSE B	1	NE-1540,NE-1840,NE-1880 1.25A
109	⚠	A65953030GP	FUSE B	1	NE-2740 3A
110		A66033030GP	OVEN LAMP BRACKET	1	
111		A66263040AP	THERMAL CUTOFF MOUNT	2	
112		A66623170GP	EARTH SPACER	1	
113	⚠	A10493030GP	CUSHION RUBBER	2	
114	⚠	A692Y3580GP	NOISE FILTER (U)	1	NE-1540,NE-1840,NE-1880
114	⚠	A692Y3560GP	NOISE FILTER (U)	1	NE-2740
115	⚠	A910A3580GP	AC CORD W/PLUG (U)	1	NE-1540,NE-1840,NE-1880 230V
115	⚠	A910A3560GP	AC CORD W/PLUG (U)	1	NE-2740 400V
116		ANE9080-730	CLIP (YELLOW)	4	NE-1540,NE-1840,NE-1880
116		ANE9080-730	CLIP (YELLOW)	5	NE-2740
117		ANE90828U0AP	CLIP (BLACK)	2	
118		ANE9082930AP	CLIP	8	
119		A98363030GP	CASE	1	
120		XST4+6VS	SCREW	8	4X6 (FOR ANTENNA)
121		XTC4+10BC	SCREW	9	4X10 (FOR CABINET BODY,SASH,LAMP COVER)
122		XTC4+12BK	SCREW (BLACK)	3	4X12 (FOR BASE)
123		XTEANE5+10B	SCREW	4	5X10 (FOR ROLLER BRACKET)
124		XTT4+8E	SCREW	1	4X8 (FOR BACK PANEL COVER C)
125		XTWANE3+8EX	SCREW	8	3X8 (FOR FOOT)
126		XTWANE4+10RU	SCREW	8	4X10 (FOR MAGNETRON:LOWER)
127		XWC4BPN	WASHER	2	FOR BACK PANEL COVER C, ESCUTCHEON BASE
128		XWNEANE53GV	SPACER	1	FOR TERMINAL PLATE
129		XWNEANE65GV	SPACER	1	FOR BACK PANEL COVER C
130		XYD4+EE12F	SCREW	19	4X12 (FOR TERMINAL PLATE, ANTENNA MOTOR COVER, SWITCH HOLDER, DIODE, CAPACITOR BRACKET, EARTH, ESCUTCHEON BASE)
131		XYEANE5+C16T	SCREW	8	5X16 (FOR MAGNETRON:UPPER)
132		XYE6+F20F	SCREW	1	6X20 (FOR BACK PANEL COVER C)
133		XYN4+F12S	SCREW	4	4X12 (FOR DOOR SWITCH)
134		XYN4+F18S	SCREW	4	4X18 (FOR DOOR HOOK B)
135	⚠	2M210-M1EL	MAGNETRON	4	
136		A83613030GP	SWITCH SPACER	1	
137		A18593560GP	SHELF SUPPORT	2	
138		A91433040AP	CLIP B	3	
139		XNW5EFN	NUT	2	FOR SHELF SUPPORT
140		A608E3560GP	P.C.BOARD Q (U)	1	NE-2740
141		XWG5BV	WASHER	2	FOR SHELF SUPPORT

Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
142		ANE0911000CD	CUSHION RUBBER A	1	NE-2740
143		A02433580GP	TERMINAL LABEL	1	NE-1540,NE-1840,NE-2740
143		A02433560GP	TERMINAL LABEL	1	NE-2740
144		XTC4+10FC	SCREW	1	4X10 (FOR ESCUTCHEON BASE)
145		A80163060GP	CUSHION SPACER	1	
146		ANE64086Q0AP	WASHER	2	
147		ANE81508V0V	TERMINAL PLATE B	1	NE-1540,NE-1840,NE-1880

NOTE 1 : Please order name plate together.

DOOR ASSEMBLY

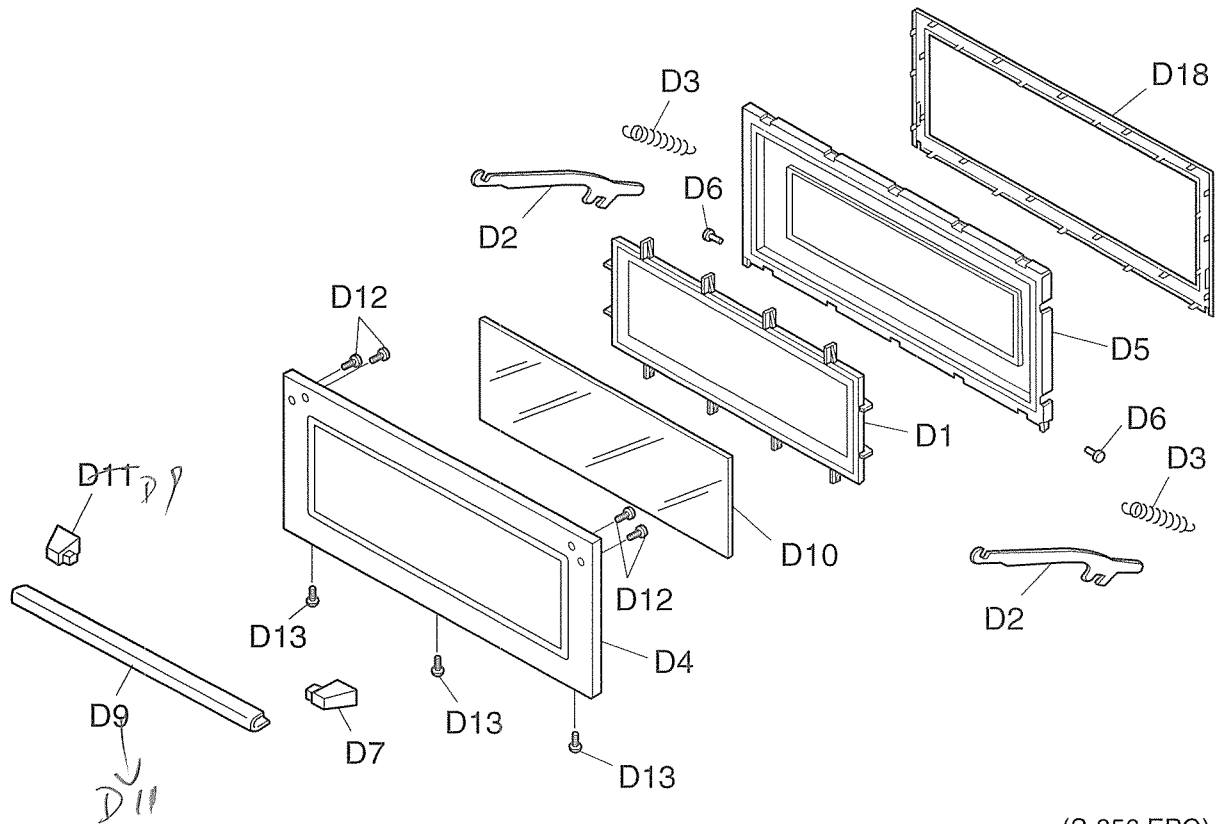


(S-356 EPG)

Ref. No.	Part No.	Part Name & Description	Pcs/ Set	Remarks
D1	A30033030GP	DOOR FRAME	1	
D2	A30043030GP	DOOR ARM	2	
D3	ANE3009P00RN	DOOR SPRING	2	
D4	A301A3030GP	DOOR A	1	
D5	A301Q3030GP	DOOR E (U)	1	
D6	ANE3036P00RN	DOOR ARM PIN	2	
D7	A30703030GP	HANDLE PEICE A	1	
D8	A30853030GP	DOOR C	1	
D9	A31343030GP	HANDLE PEICE B	1	
D10	A31453030GP	DOOR SCREEN A	1	
D11	A31473030GP	HANDLE PEICE C	1	
D12	XYEANE4+C16T	SCREW	4	4X16
D13	XTC4+10BC	SCREW	3	4X10


ESCUTCHEON BASE ASSEMBLY

NE-1540,NE-1840,NE-2740

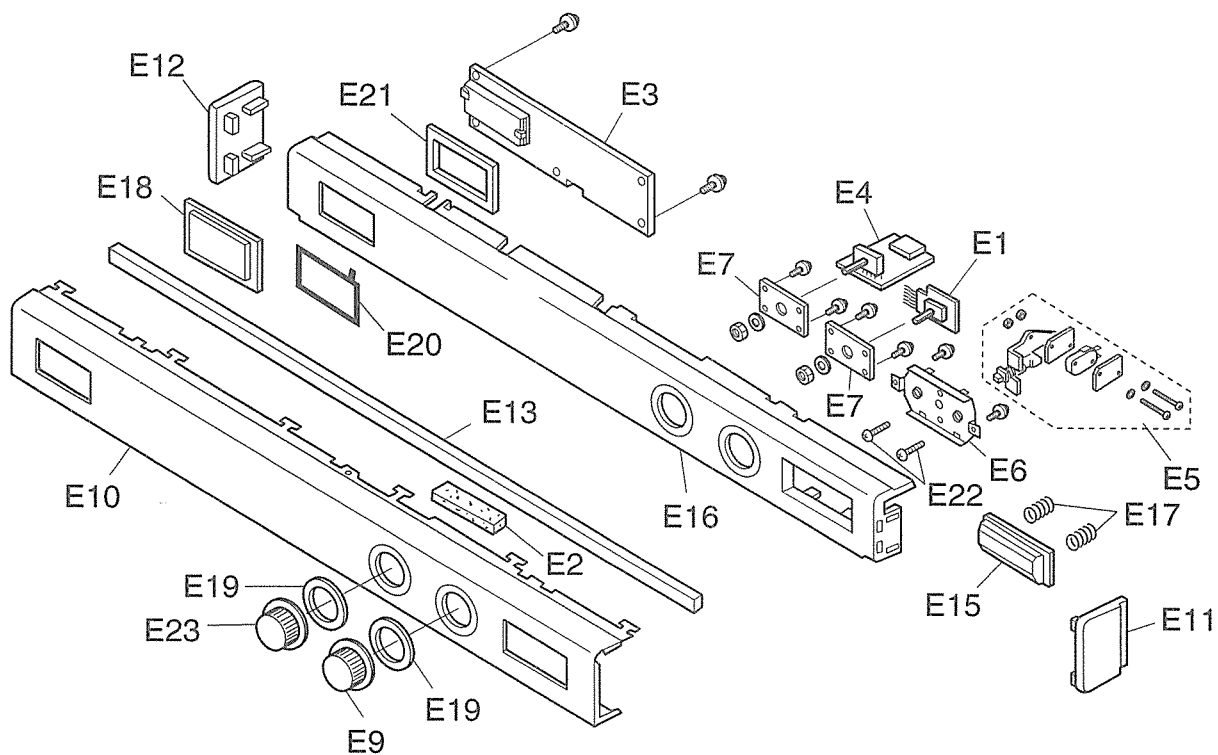

(S-356 EPG)

NE-1880

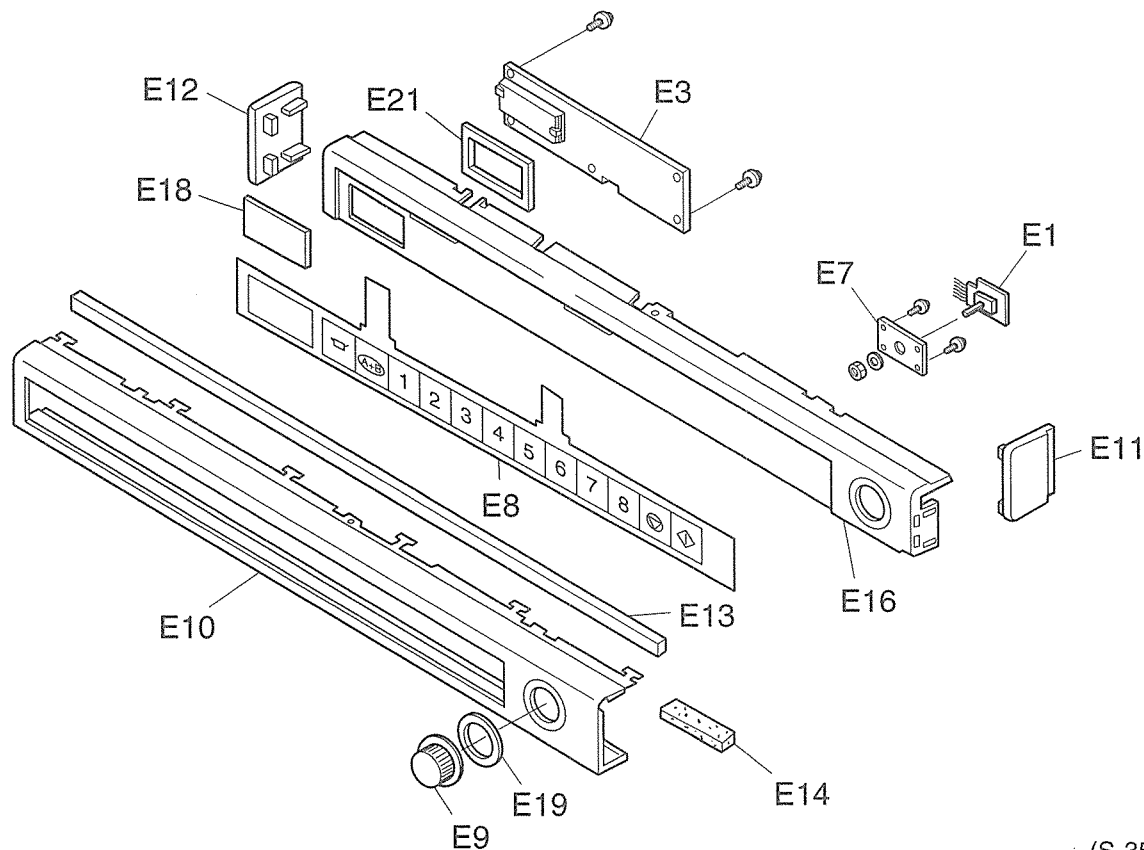


(S-356 EPG)

Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
E1		A03613560GP	TIMER	1	
E2		ANE1062-8U0	CUSHION RUBBER B	1	NE-1540,NE-1840,NE-2740
E3	⚠	A603L3560GP	D.P.CIRCUIT (U)	1	NE-1540,NE-1840,NE-2740 RTL (W/COMPONENT)
E3	⚠	A603L3590GP	D.P.CIRCUIT (U)	1	NE-1880 RTL (W/COMPONENT)
E4		A608C3560GP	POWER SELECT SWITCH	1	NE-1540,NE-1840,NE-2740
E5		ANE610EP00RN	START SWITCH	1	NE-1540,NE-1840,NE-2740 VAPC4
E6		A61623030GP	START SWITCH BRACKET	1	NE-1540,NE-1840,NE-2740
E7		A63433030GP	TIMER BRACKET	2	NE-1540,NE-1840,NE-2740
E7		A63433030GP	TIMER BRACKET	1	NE-1880
E8	⚠	A64793590GP	MEMBRANE SWITCH	1	NE-1880
E9		A800D3060GP	TIMER KNOB	1	
E10		A80013030GP	ESCUTCHEON A	1	NE-1540,NE-1840,NE-2740
E10		A80013060GP	ESCUTCHEON A	1	NE-1880
E11		A80023030GP	ESCUTCHEON B	1	
E12		A80063030GP	ESCUTCHEON D	1	
E13		A80163030GP	CUSHION SPACER	1	
E14		ANE0911000AB	CUSHION RUBBER B	1	NE-1880
E15		ANE8024P00RN	COOK BUTTON	1	NE-1540,NE-1840,NE-2740
E16		A80343030GP	ESCUTCHEON BASE	1	NE-1540,NE-1840,NE-2740
E16		A80343060GP	ESCUTCHEON BASE	1	NE-1880
E17		ANE8037P00RN	COOK BUTTON SPRING	2	NE-1540,NE-1840,NE-2740
E18		A81263030GP	SMOKE PANEL	1	NE-1540,NE-1840,NE-2740
E18		A81263060GP	SMOKE PANEL	1	NE-1880
E19		A82873030GP	SPACER A	2	NE-1540,NE-1840,NE-2740
E19		A82873030GP	SPACER A	1	NE-1880
E20		A83373560GP	ESCUTCHEON SHEET	1	NE-1540,NE-1840,NE-2740
E21		A83423030GP	CUSHION RUBBER B	1	NE-1540,NE-1840,NE-2740
E21		A83423060GP	CUSHION RUBBER B	1	NE-1880
E22		XYN4+C8S	SCREW	2	NE-1540,NE-1840,NE-2740 4X8
E23		A800D3030GP	TIMER KNOB	1	NE-1540,NE-1840,NE-2740

PACKING AND ACCESSORIES


Cut into three parts when packing.

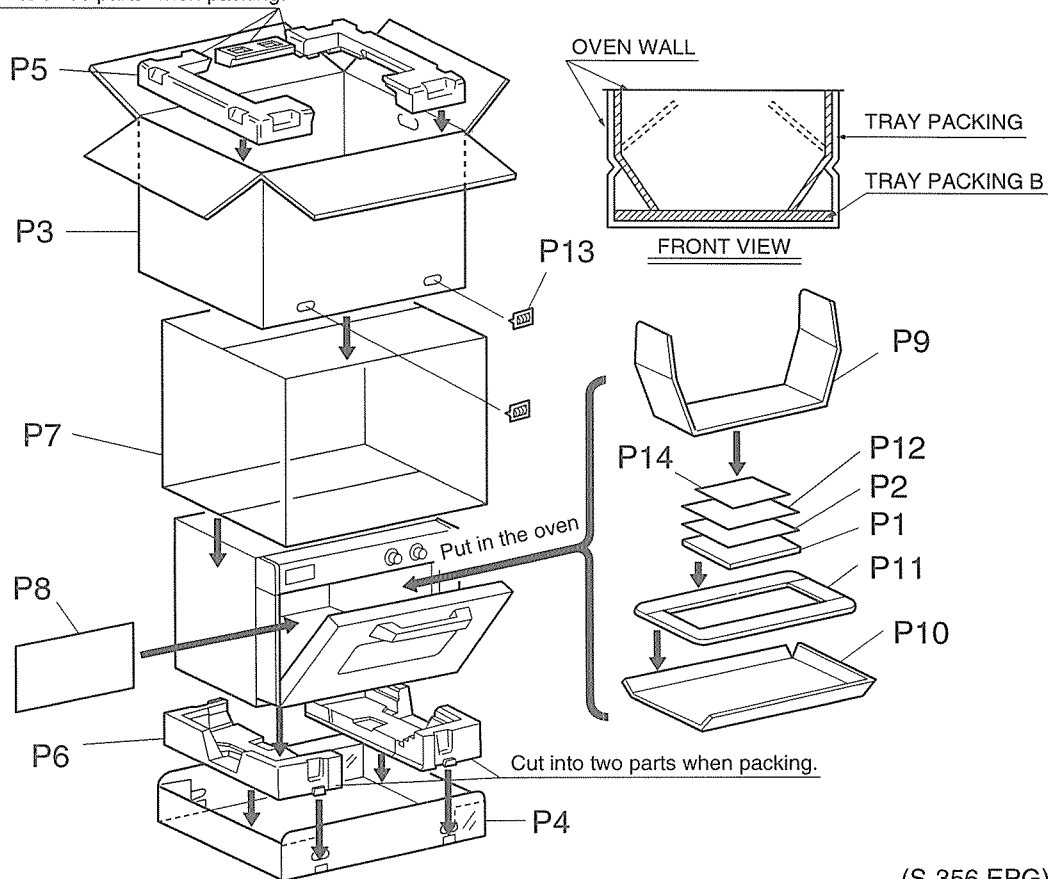

(S-356 EPG)


Ref. No.	Part No.	Part Name & Description	Pcs/ Set	Remarks
P1	A00033560EP	INSTRUCTION BOOK	1	NE-1540,NE-1840,NE-2740
P1	A00033590EP	INSTRUCTION BOOK	1	NE-1880
P2	A00163560EP	COOK BOOK	1	
P3	A01023600EP	PACKING CASE,PAPER	1	NE-1540
P3	A01023580EP	PACKING CASE,PAPER	1	NE-1840
P3	A01023590EP	PACKING CASE,PAPER	1	NE-1880
P3	A01023560EP	PACKING CASE,PAPER	1	NE-2740
P4	A01033030GP	BOTTOM CASE	1	
P5	A01043030GP	UPPER FILLER	1	
P6	A01053030GP	LOWER FILLER	1	
P7	A01063040AP	VINYL COVER	1	
P8	A01073030GP	DOOR SHEET	1	
P9	A01083030GP	TRAY PACKING	1	
P10	A01173030GP	TRAY PACKING B	1	
P11	A012D3050GP	SHELF B	1	
P12	A04203590EP	OPERATING GUIDE	1	NE-1880
P13	HP-601W	FASTENER	4	
P14	A01723560EP	CAUTION LABEL	1	

WIRING MATERIAL

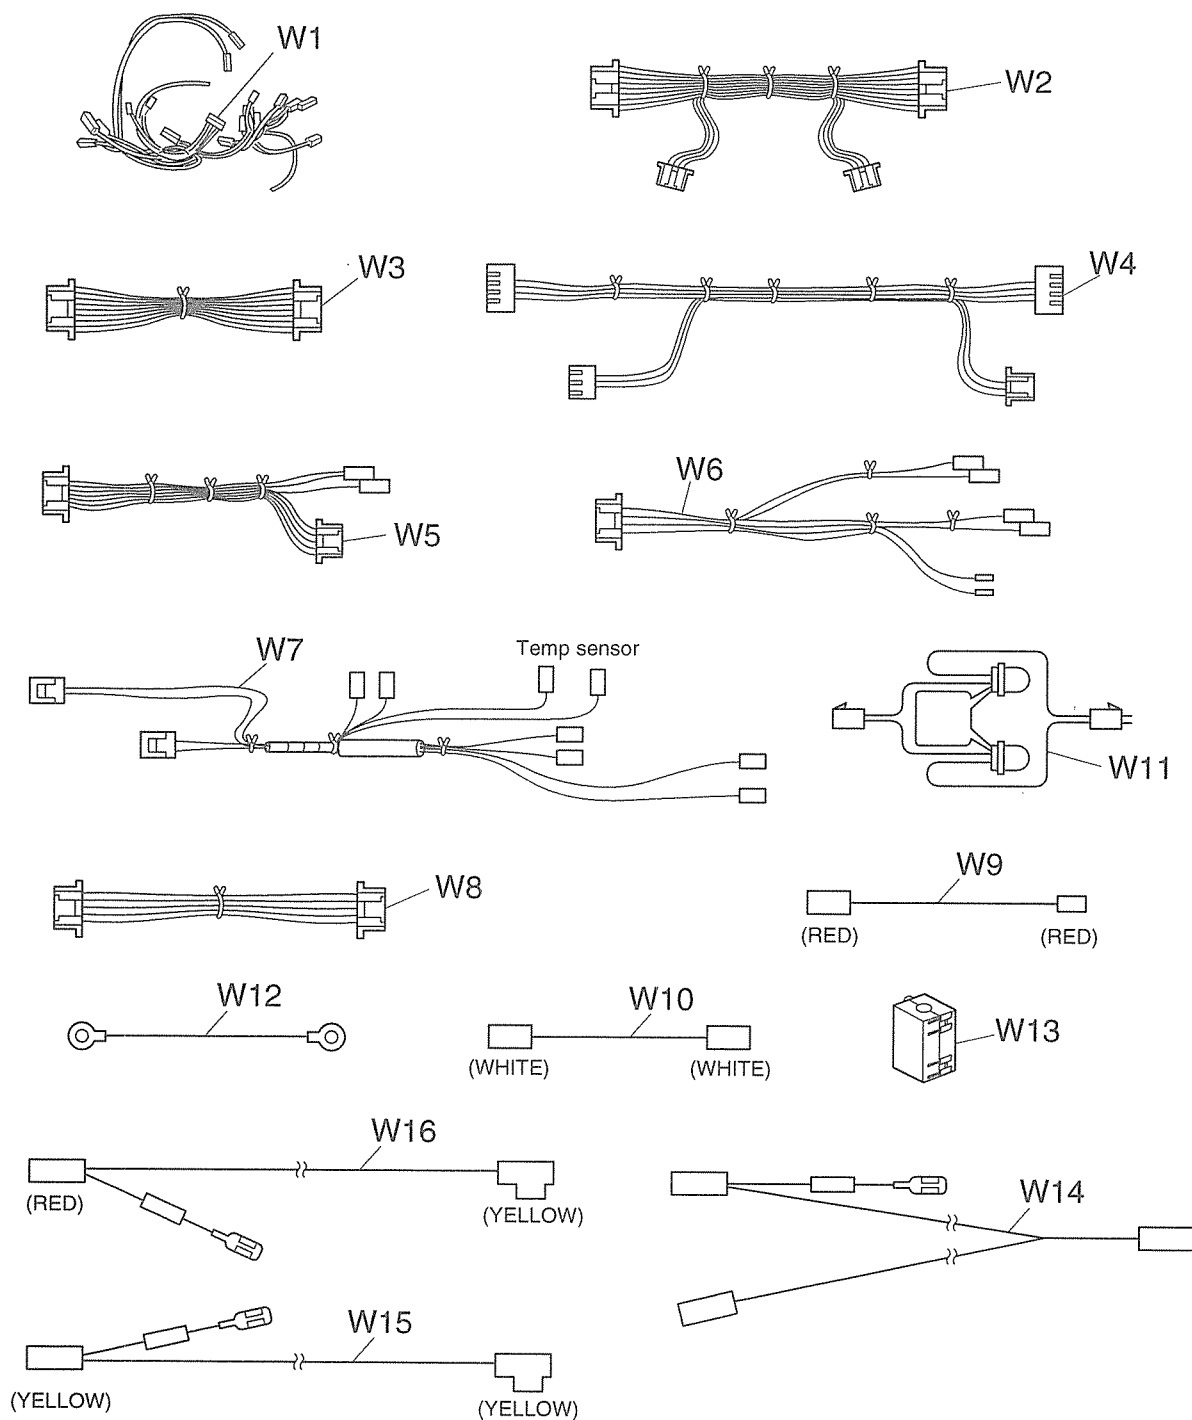


(S-356 EPG)

NE-1540,NE-1580,NE-1880

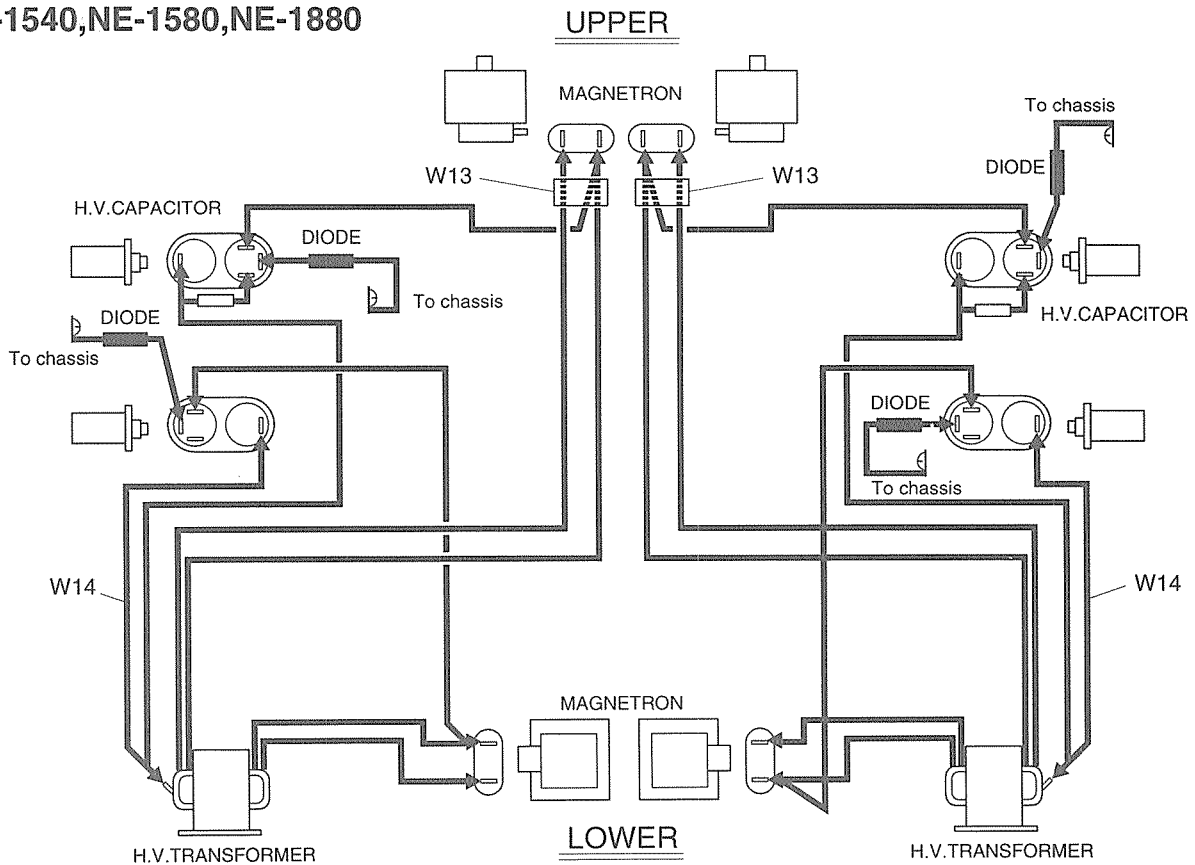

NE-2740

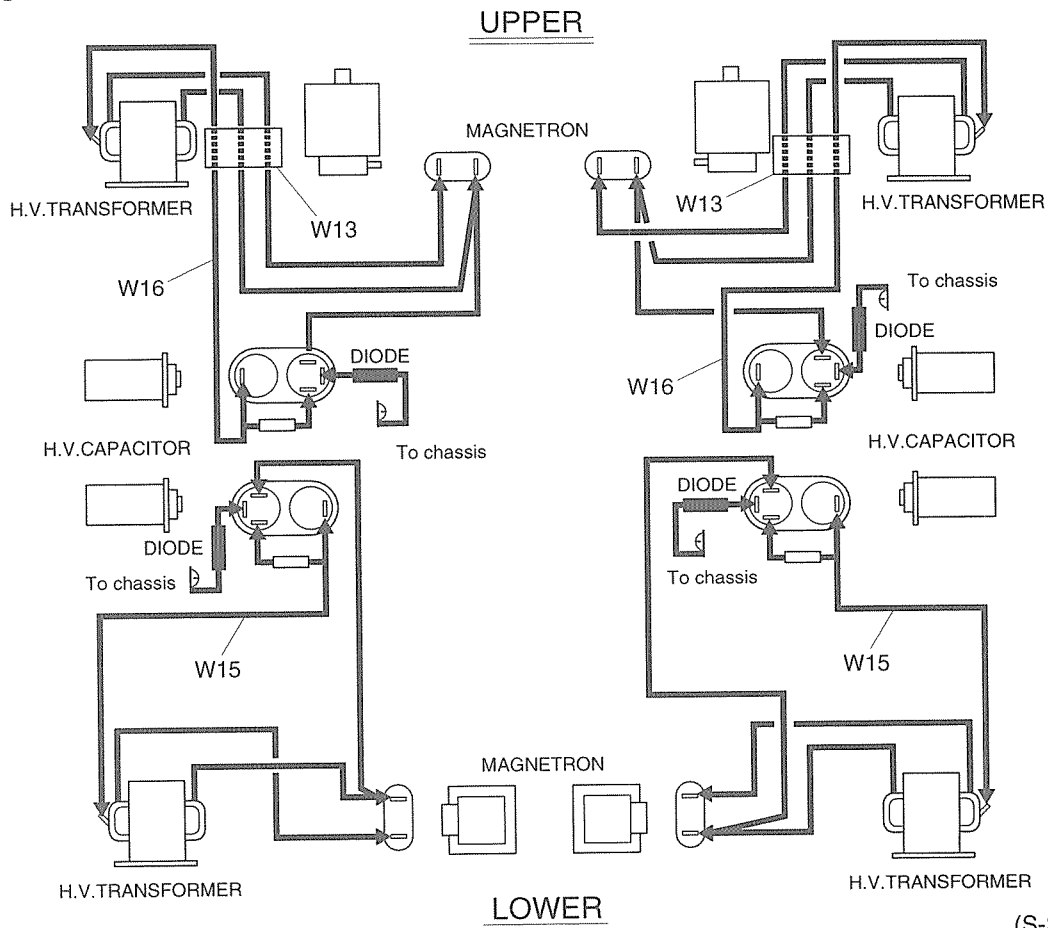

(S-356 EPG)

Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
W1		A030A3580GP	LEAD WIRE HARNESS	1	NE-1540,NE-1840,NE-1880
W1		A030A3560GP	LEAD WIRE HARNESS	1	NE-2740
W2		A03603560GP	LEAD WIRE	1	
W3		A03623560GP	LEAD WIRE	1	
W4		A03633560GP	LEAD WIRE	1	
W5		A03643560GP	LEAD WIRE	1	NE-1540,NE-1840,NE-2740
W6		A03653560GP	LEAD WIRE	1	
W7		A03693560GP	LEAD WIRE	1	
W8		A03703560GP	LEAD WIRE	1	
W9		A03723580GP	LEAD WIRE	1	NE-1540,NE-1840,NE-1880
W10		A03733560GP	LEAD WIRE	1	NE-2740
W11		A03753030GP	NOISE KILLER	2	NE-2740
W12		A03813030GP	LEAD WIRE	2	NE-1540,NE-1840,NE-2740
W13		A50966520UP	FERRITE CORE	2	
W14		A606V3580GP	PROTECTOR DIODE	2	NE-1540,NE-1840,NE-1880
W15		A606V3560GP	PROTECTOR DIODE	2	NE-2740
W16		A606W3560GP	PROTECTOR DIODE B	2	NE-2740

Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
REF NO. 76 P. C. BOARD B (U)					
	⚠	AEGHPUG3640	POWER RELAY	1	
		XYN3+F8S6	SCREW	1	3X8
		2SD2012	TRANSISTOR,SI	1	
		ERDS2TJ163T	CARBON FILM RESISTOR	1	NE-1840,NE-1880 16KΩ,1/4W,5%
C250		ECA1HHG222E	ELECTROLYTIC CAPACITOR,AL	1	2200MF,50V
CN250		AEEMMD1FF09W	CONNECTOR	1	9PIN
CN251		AEEMMD7FF11N	CONNECTOR	1	11PIN
CN252		AEEMMD04907W	CONNECTOR	1	7PIN
CN254		AEEMMD01F05W	CONNECTOR	1	5PIN
D250,251,252, 253,254,255, 256,257,258, 259,260,261, 262,263,264, 265,266,267, 268,269		MA196-(TA5)	DIODE,SI	24	NE-2740
D250,251,252, 253,254,255, 256,257,258, 259,260,261, 262,263,264, 265,267,269, 271,273		MA196-(TA5)	DIODE,SI	20	NE-1540,NE-1840,NE-1880
IC250,251, 252,253		AEICPS2505	IC	4	NE-2740
IC250,253		AEICPS2505	IC	2	NE-1540,NE-1840,NE-1880
Q251		2SD637-PQRS	TRANSISTOR,SI	1	
R250		ERDS2TJ332T	CARBON FILM RESISTOR	1	3.3KΩ,1/4W,5%
R251,252, 253,254, 255,256, 257,258		ERDS1TJ224T	CARBON FILM RESISTOR	8	NE-2740 220KΩ,1/2W,5%
R251, 252, 257,258		ERDS1TJ104T	CARBON FILM RESISTOR	4	NE-1540,NE-1840,NE-1880 00KΩ,1/2W,5%
R259,260		ERF15ZXJ240	RESISTOR	2	24Ω,15W,5%
R261		ERDS2TJ684T	CARBON FILM RESISTOR	1	680KΩ,1/4W,5%
RY1	⚠	AEBG5B18P-1	POWER RELAY	1	G5B-1-ER18 (18V)
RY2,3, 4,7,8,11, 12,13,14	⚠	AEG5J1EM18B	POWER RELAY	13	NE-2740 G5J-1-TP-M-ER18 (18V)
RY2,3,9,11, 14,15,16	⚠	AEG5J1EM18B	POWER RELAY	7	NE-1540,NE-1840,NE-1880 G5J-1-TP-M-ER18 (18V)
ZD250		AEDZ20ES3T1	DIODE,SI	1	
REF NO. 82 P. C. BOARD H (U)					
BZ		EFBRL37C20	BUZZER	1	
CN400		AEEMS04BP0K	CONNECTOR	1	
CN551		AEEMMB00703R	CONNECTOR	1	3PIN RED
D551		MA196-(TA5)	DIODE,SI	1	
Q551		2SD639-PQRS	TRANSISTOR,SI	1	
R551		ERDS2TJ681T	CARBON FILM RESISTOR	1	680Ω,1/4W,5%
R552		ERDS2TJ184T	CARBON FILM RESISTOR	1	180KΩ,1/4W 5%
R553		ERDS2TJ103T	CARBON FILM RESISTOR	1	10KΩ,1/4W,5%
SW400, 401,402		EVQPAE07K	PUSH SWITCH	3	

Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
REF NO. 114 NOISE FILTER (U)					
C1,6		ECQU2A224MNA	POLYESTER CAPACITOR	2	NE-1540,NE-1840,NE-1880 0.22MF,250V
C1,7		ECQU2A224MNA	POLYESTER CAPACITOR	2	NE-2740 0.22MF,250V
C2,3	△	ECKMNA472ME	CERAMIC CAPACITOR	2	NE-1540,NE-1840,NE-1880 0.0047MF,250V
C2,3		ANE6169A20GN	CAPACITOR	2	NE-2740 0.022MF,250V
CN9		AEEMMD00703W	CONNECTOR	1	3PIN
D1		ERZC10DK621F	VARISTOR	1	NE-1540,NE-1840,NE-1880
D1		ERZC10DK751F	VARISTOR	1	NE-2740
D2,3		ERZC10DK112R	VARISTOR	2	
D4		ERZC10DK621F	VARISTOR	1	NE-2740
F1,2		A62316010BP	FUSE HOLDER	4	NE-1540,NE-1840,NE-1880
F1,2,4		A62316010BP	FUSE HOLDER	6	NE-2740
F3		A62316000GP	FUSE HOLDER	2	NE-1540,NE-1840,NE-1880
L1		A621A-1440	FILTER COIL	1	NE-1540,NE-1840,NE-1880
L1		A621A3560GP	FILTER COIL	1	NE-2740

DIGITAL PROGRAMMER CIRCUIT


PARTS LIST


Ref. No.	Part No.	Description	Pcs/ Set	Remarks
C10,12,13, 17,19,29	AECF50F104Z	CERAMIC CAPACITOR	10	0.1MF/50V
C11	ECA1HM221B	ELECTROLYTIC CAPACITOR,AL	1	220MF/50V
C14	ECEA1CKA100B	ELECTROLYTIC CAPACITOR,AL	1	10MF/16V
C18	ECEA1HKA2R2B	ELECTROLYTIC CAPACITOR,AL	1	2.2MF/50V
C20,21,23, 24,27,28	ECBT1E103ZF5	CERAMIC CAPACITOR	6	0.01MF/25V
C25	ECBT1H101KB5	CERAMIC CAPACITOR	1	0.0001MF/50V
C30,31,32,33	ECBT1H681KB5	CERAMIC CAPACITOR	4	680PF
CN1	AEEMMF00F04W	CONNECTOR	1	4PIN
CN2	AEEMMD1FF09W	CONNECTOR	1	9PIN
CN3	AEEMMD7FF11N	CONNECTOR	1	11PIN
CN4	AEEMMF01F05W	CONNECTOR	1	5PIN
CN5	AEEMMD07D07W	CONNECTOR	1	7PIN
CN6	AEEMMF00703W	CONNECTOR	1	3PIN
CN7	AEEMMF00703R	CONNECTOR	1	3PIN RED
CN8	AEEMB04BP0K	CONNECTOR	1	4PIN
CN9	AEEM08FDZ0TM	CONNECTOR	1	NE-1080 9PIN
CN10	AEEMMF03F06W	CONNECTOR	1	NE-1540,NE-1840,NE-2740 6PIN
CN600	AEEMMG01F05W	CONNECTOR	1	NE-1540,NE-1840,NE-2740 5PIN
CX1	EFOGC4194T4	RESONATOR	1	4.19MHZ
D10,11,13	AEDNERA1502	DIODE,SI	3	1.0A
D12,18,22, 23,24	MA700A-(TA)	DIODE,SI	5	MA700A 0.03A
D14,15,16, 17,19,20,21, 25	MA196-(TA5)	DIODE,SI	8	MA196 0.1A
DISP	A64563030GP	FLUORESCENT TUBE	1	CPR2406C
SPACER	A82843030GP	SPACER CUSHION	2	
IC1	AEIC38121113	IC	1	M38121
IC2	AEIC102977AN	IC	1	SN102977AN/AN6752
IC3	AEICAT24C04N	IC	1	AT24C04N
C4,5	AEICU2004GR	IC	2	A2004G
Q1	2SD2012	TRANSISTOR,SI,2W	1	3MHZ
Q2	2SA720PRTA	TRANSISTOR,SI,400MW	1	200MHZ
Q3,4,5,6	UN4124-(TA)	TRANSISTOR,SI,300MW	4	
Q7,8	2SC1318QSTA	TRANSISTOR,SI,400MW	2	200MHZ
Q9	UN4111-(TA)	TRANSISTOR,SI,300MW	1	
R10,11	ERDS2TJ151T	CARBON FILM RESISTOR	2	150Ω,1/4W,5%
R12,17,20, 21,22,24,25, 26,27,38,39, 40,46,47	ERDS2TJ103T	CARBON FILM RESISTOR	14	10KΩ,1/4W,5%
R13	ERDS2TJ823T	CARBON FILM RESISTOR	1	82KΩ,1/4W,5%
R14	ERDS2TJ390T	CARBON FILM RESISTOR	1	39Ω,1/4W,5%
R15,16	ERDS2TJ152T	CARBON FILM RESISTOR	2	1.5KΩ,1/4W,5%
R18	ERDS2TJ222T	CARBON FILM RESISTOR	1	2.2KΩ,1/4W,5%
R19	ERDS2TJ220T	CARBON FILM RESISTOR	1	22Ω,1/4W,5%
R23,28,29, 33,35,45,48, 51,56,57,58, 59,61	ERDS2TJ102T	CARBON FILM RESISTOR	19	1.0KΩ,1/4W,5%
R32,52,53, 54,55,60	ERDS2TJ104T	CARBON FILM RESISTOR	6	100KΩ,1/4W,5%
R34,36	ERDS2TJ333T	CARBON FILM RESISTOR	2	33KΩ,1/4W,5%
R37,42	ERDS2TJ332T	CARBON FILM RESISTOR	2	3.3KΩ,1/4W,5%

Ref. No.	Part No.	Description	Pcs/ Set	Remarks
R41	ERDS2TJ472T	CARBON FILM RESISTOR	1	4.7KΩ,1/4W,5%
R62,63,64, 65,66,67	ERDS2TJ471T	CARBON FILM RESISTOR	6	NE-1540,NE-1840,NE-2740 470Ω,1/4W,5%
SW600	A65423030GP	SWITCH	1	NE-1540,NE-1840,NE-2740
ZD1	AEDZ4R7ES3T1	ZENER DIODE,SI	1	RD47ES3
ZD2	AEDZ5R6ES2T1	ZENER DIODE,SI	1	RD5.6ES2
ZD3	AEDZ24ES3T1	ZENER DIODE,SI	1	RD24ES3

DIGITAL PROGRAMMER CIRCUIT

SCHEMATIC DIAGRAM

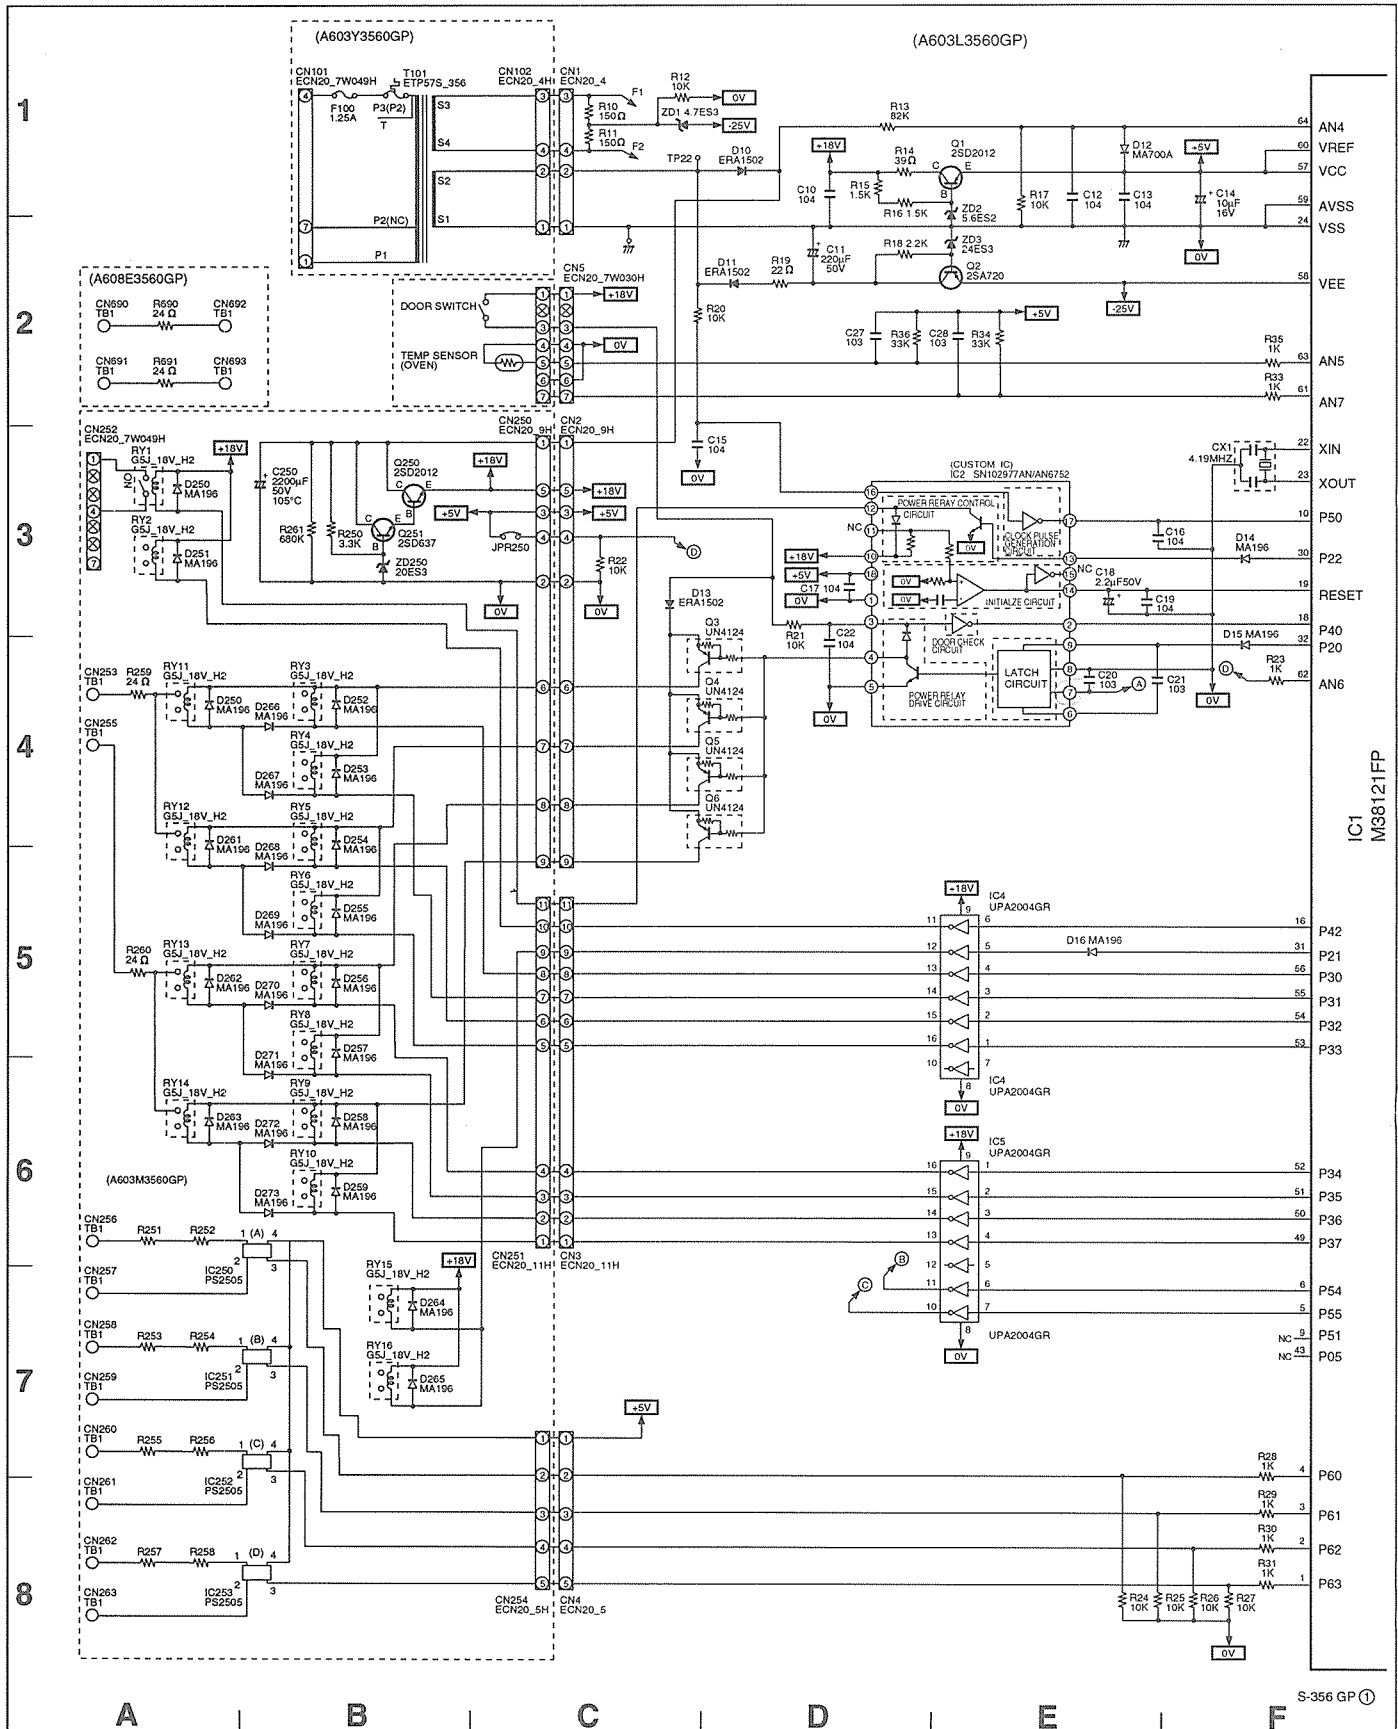

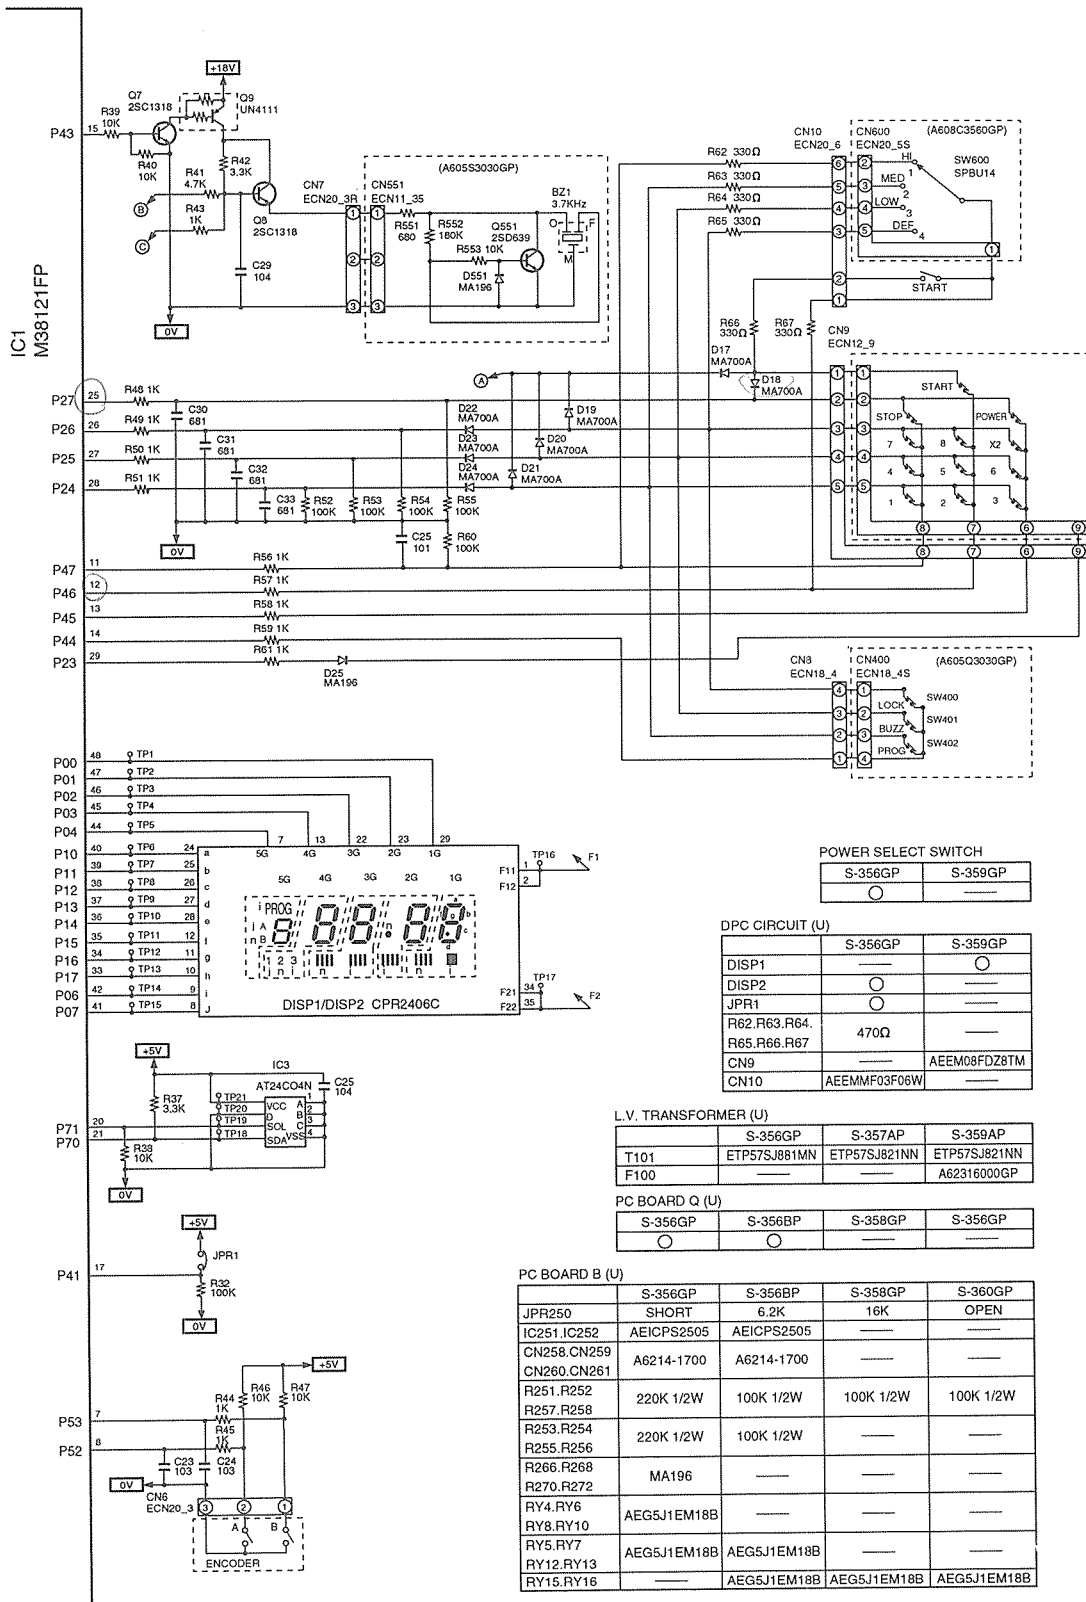

S-356 GP ②

MEMO

MEMO

WP-552(M)
S-356 EPG
Printed in Japan
(H), (F) & (E)